


# moretti compact®

## Schemi montaggio


*Assembling diagrams*

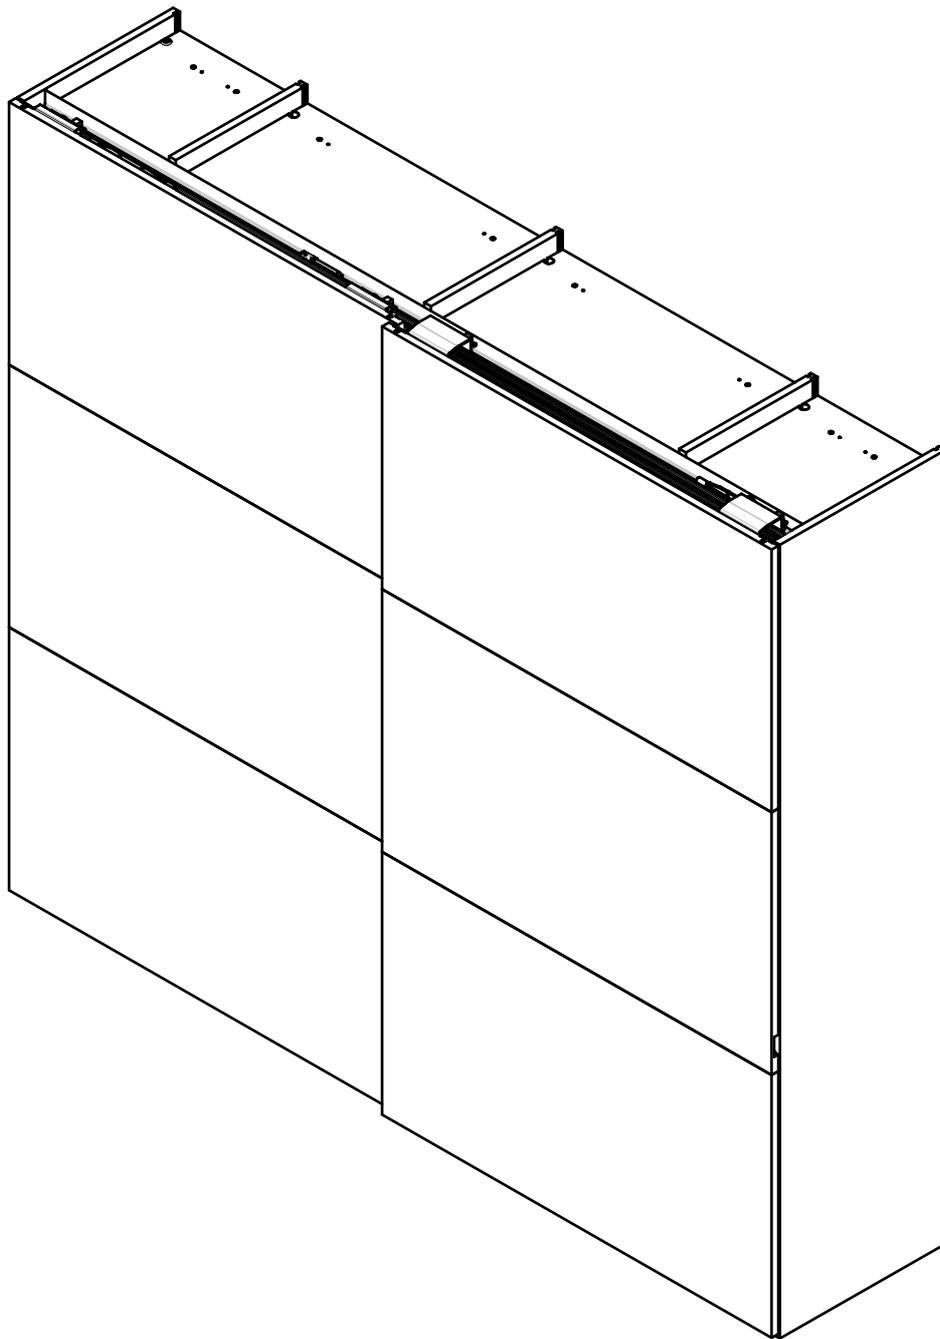

**SLIDER**

ed. 27/03/18- rev.1

SCMNT046-SLIDER\_2018

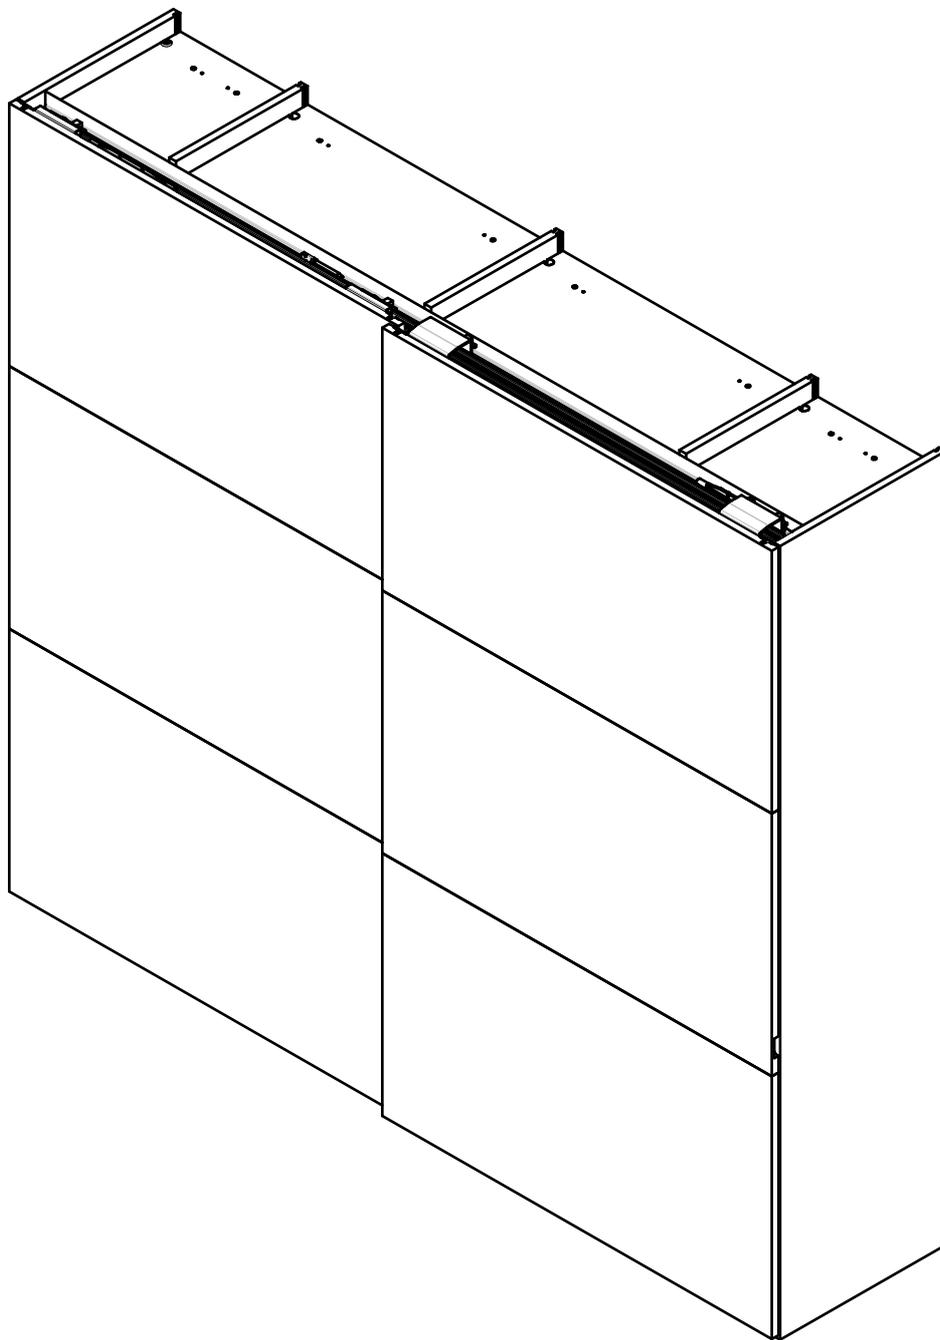

X2

080005146 - SFR_Sc.Fr.Pied.Base.Mod.Slide				
200002014	A		n°4	

X3



080005146 - SFR_Sc.Fr.Pied.Base.Mod.Slide				
200002014	A		n°4	



80006565 - SFR_Fissaggio Scorr.Bort.2Ante Legno				
200000966	A		n°20	
200000951	B		n°40	



080006567 - SFR_Fissaggio Scorr.Bort.3Ante Legno				
200000966	A		n°20	
200000951	B		n°60	


080006566 - SFR_Fissaggio Scorr.Bort.2Ante Allum				
200000966	A		n°20	
200003755	B		n°40	



080006568 - SFR_Fissaggio Scorr.Bort.3Ante Allum				
200000966	A		n°20	
200003755	B		n°60	

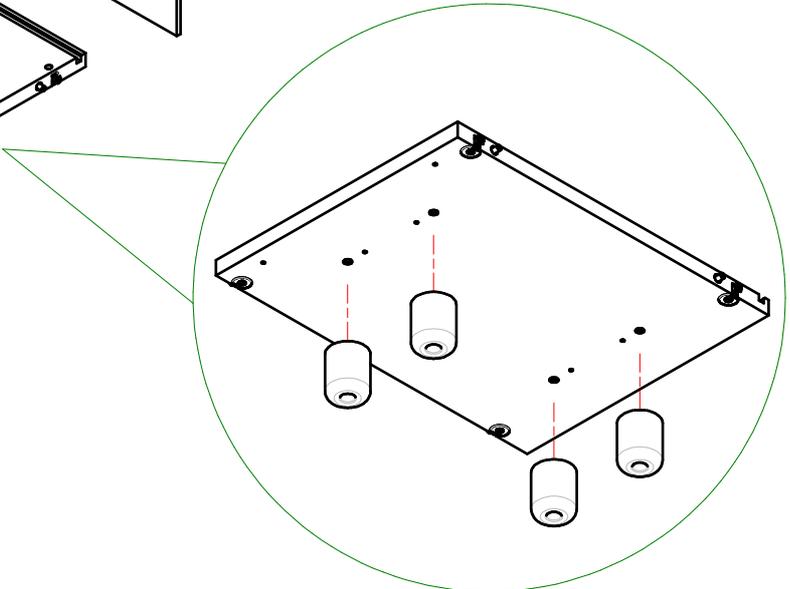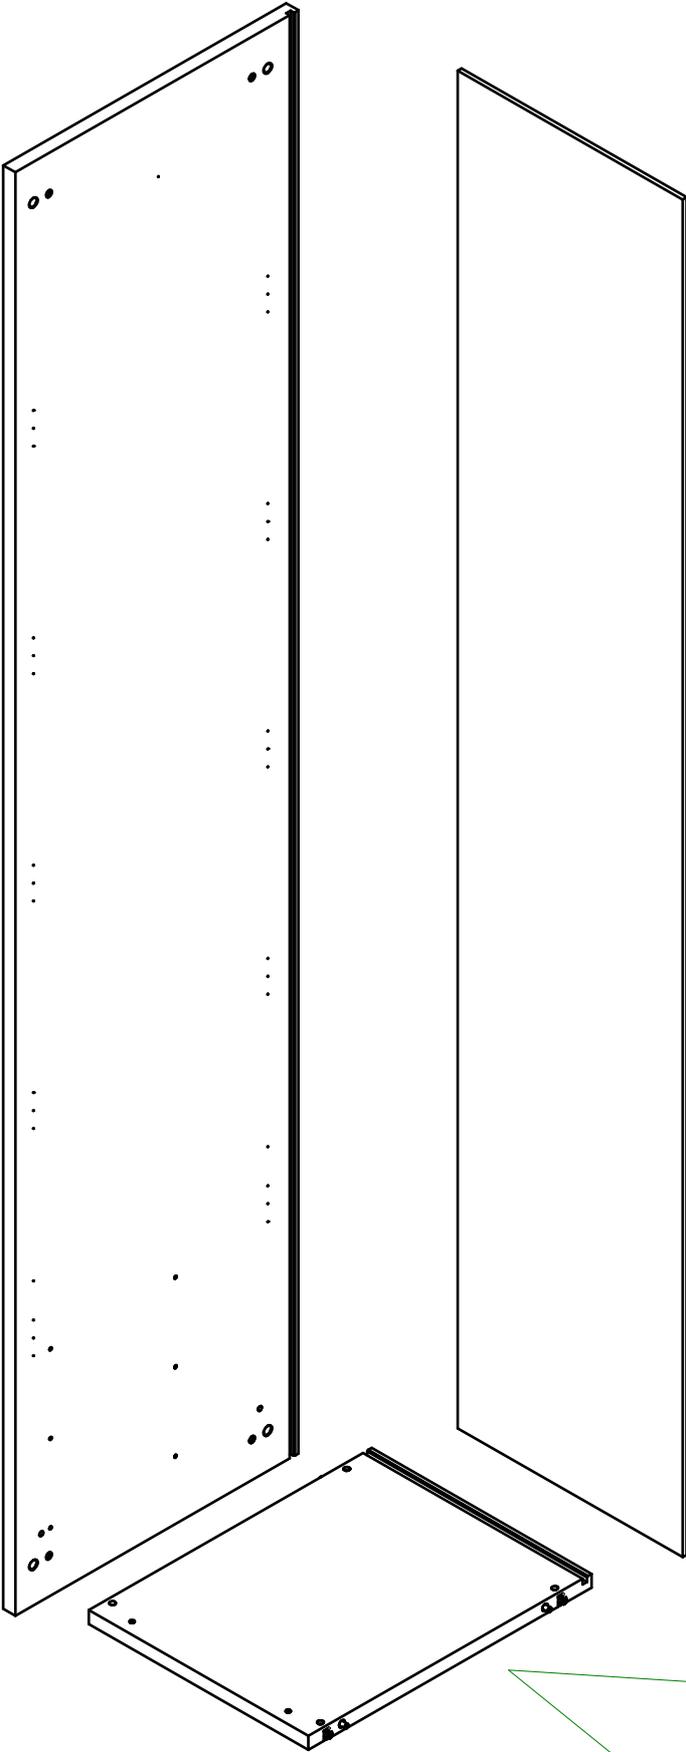


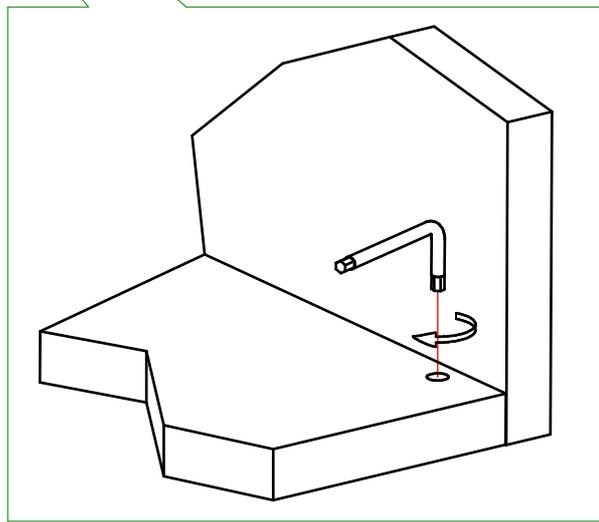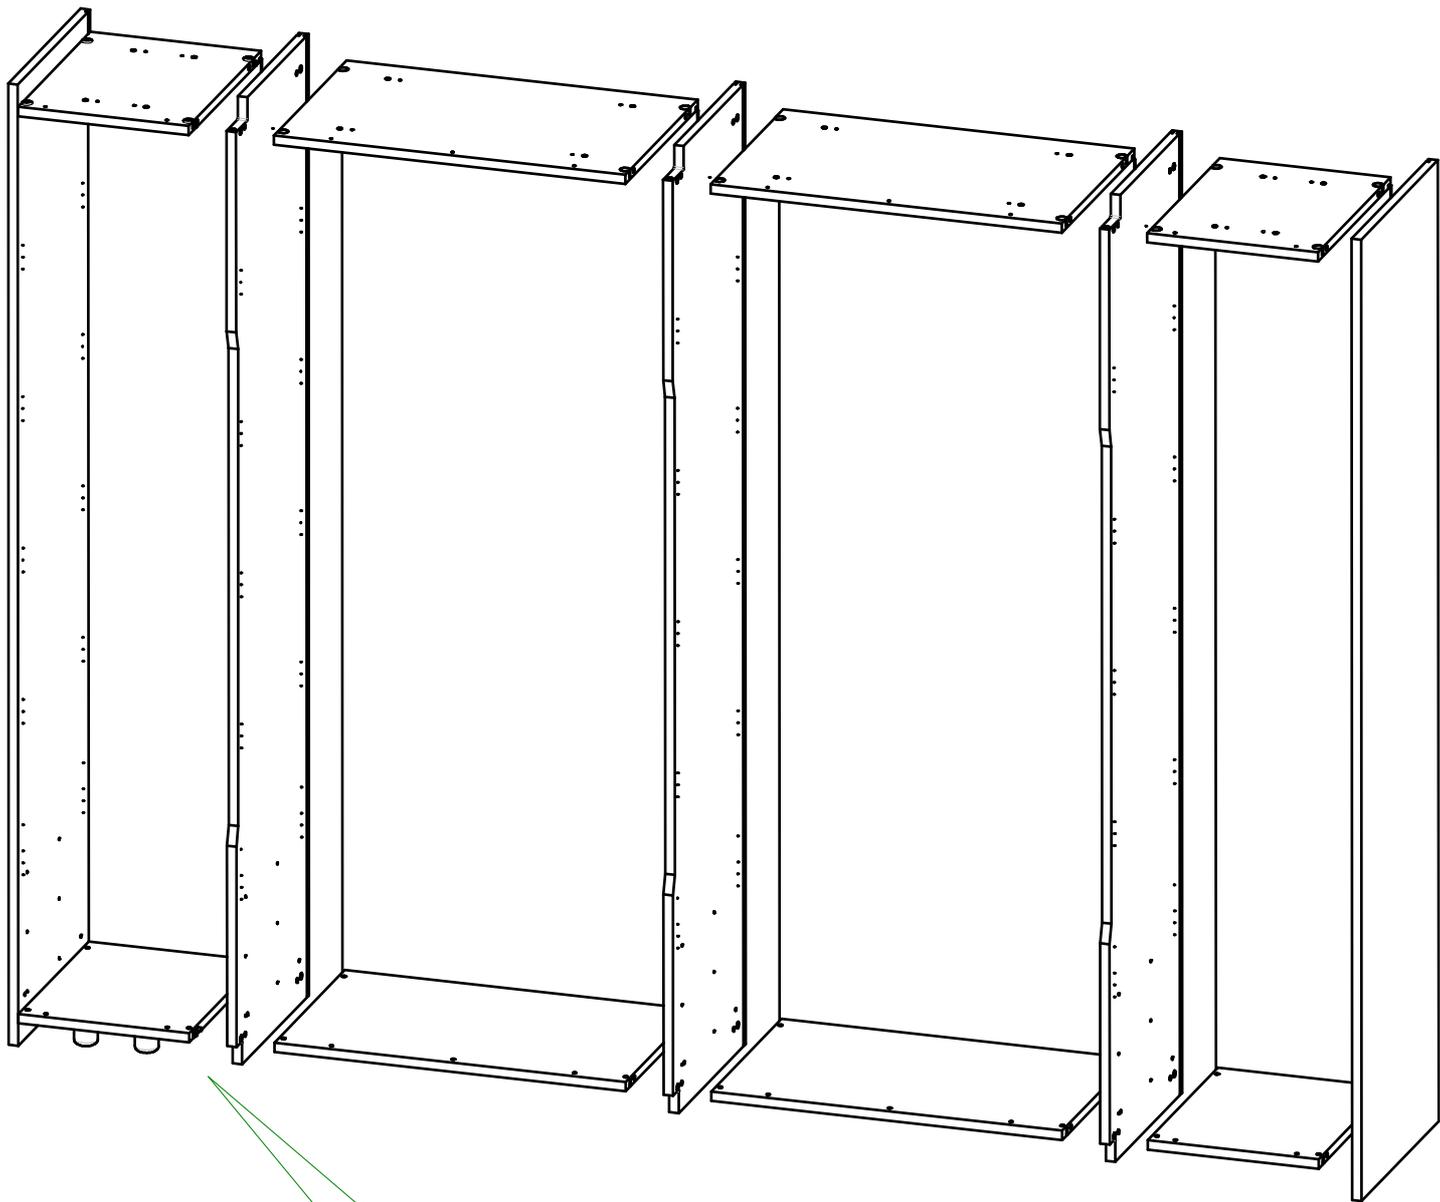


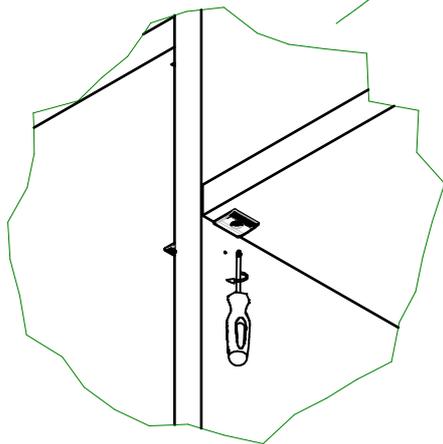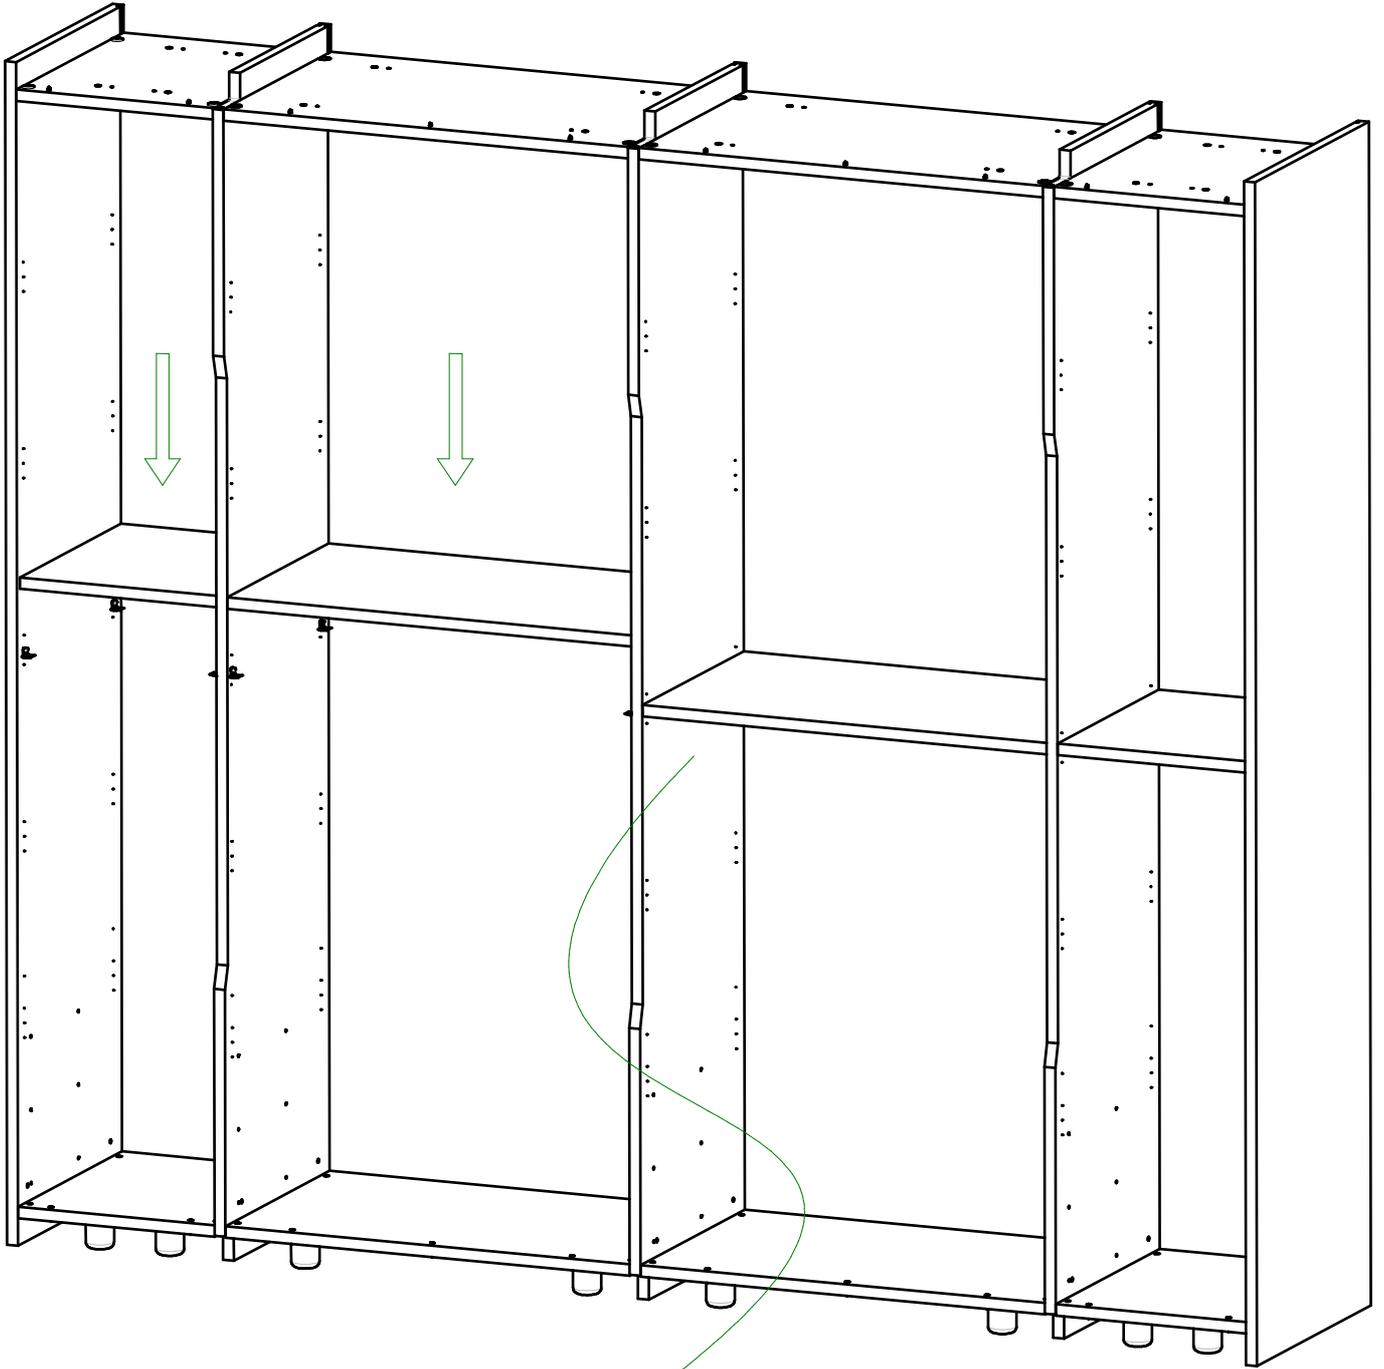


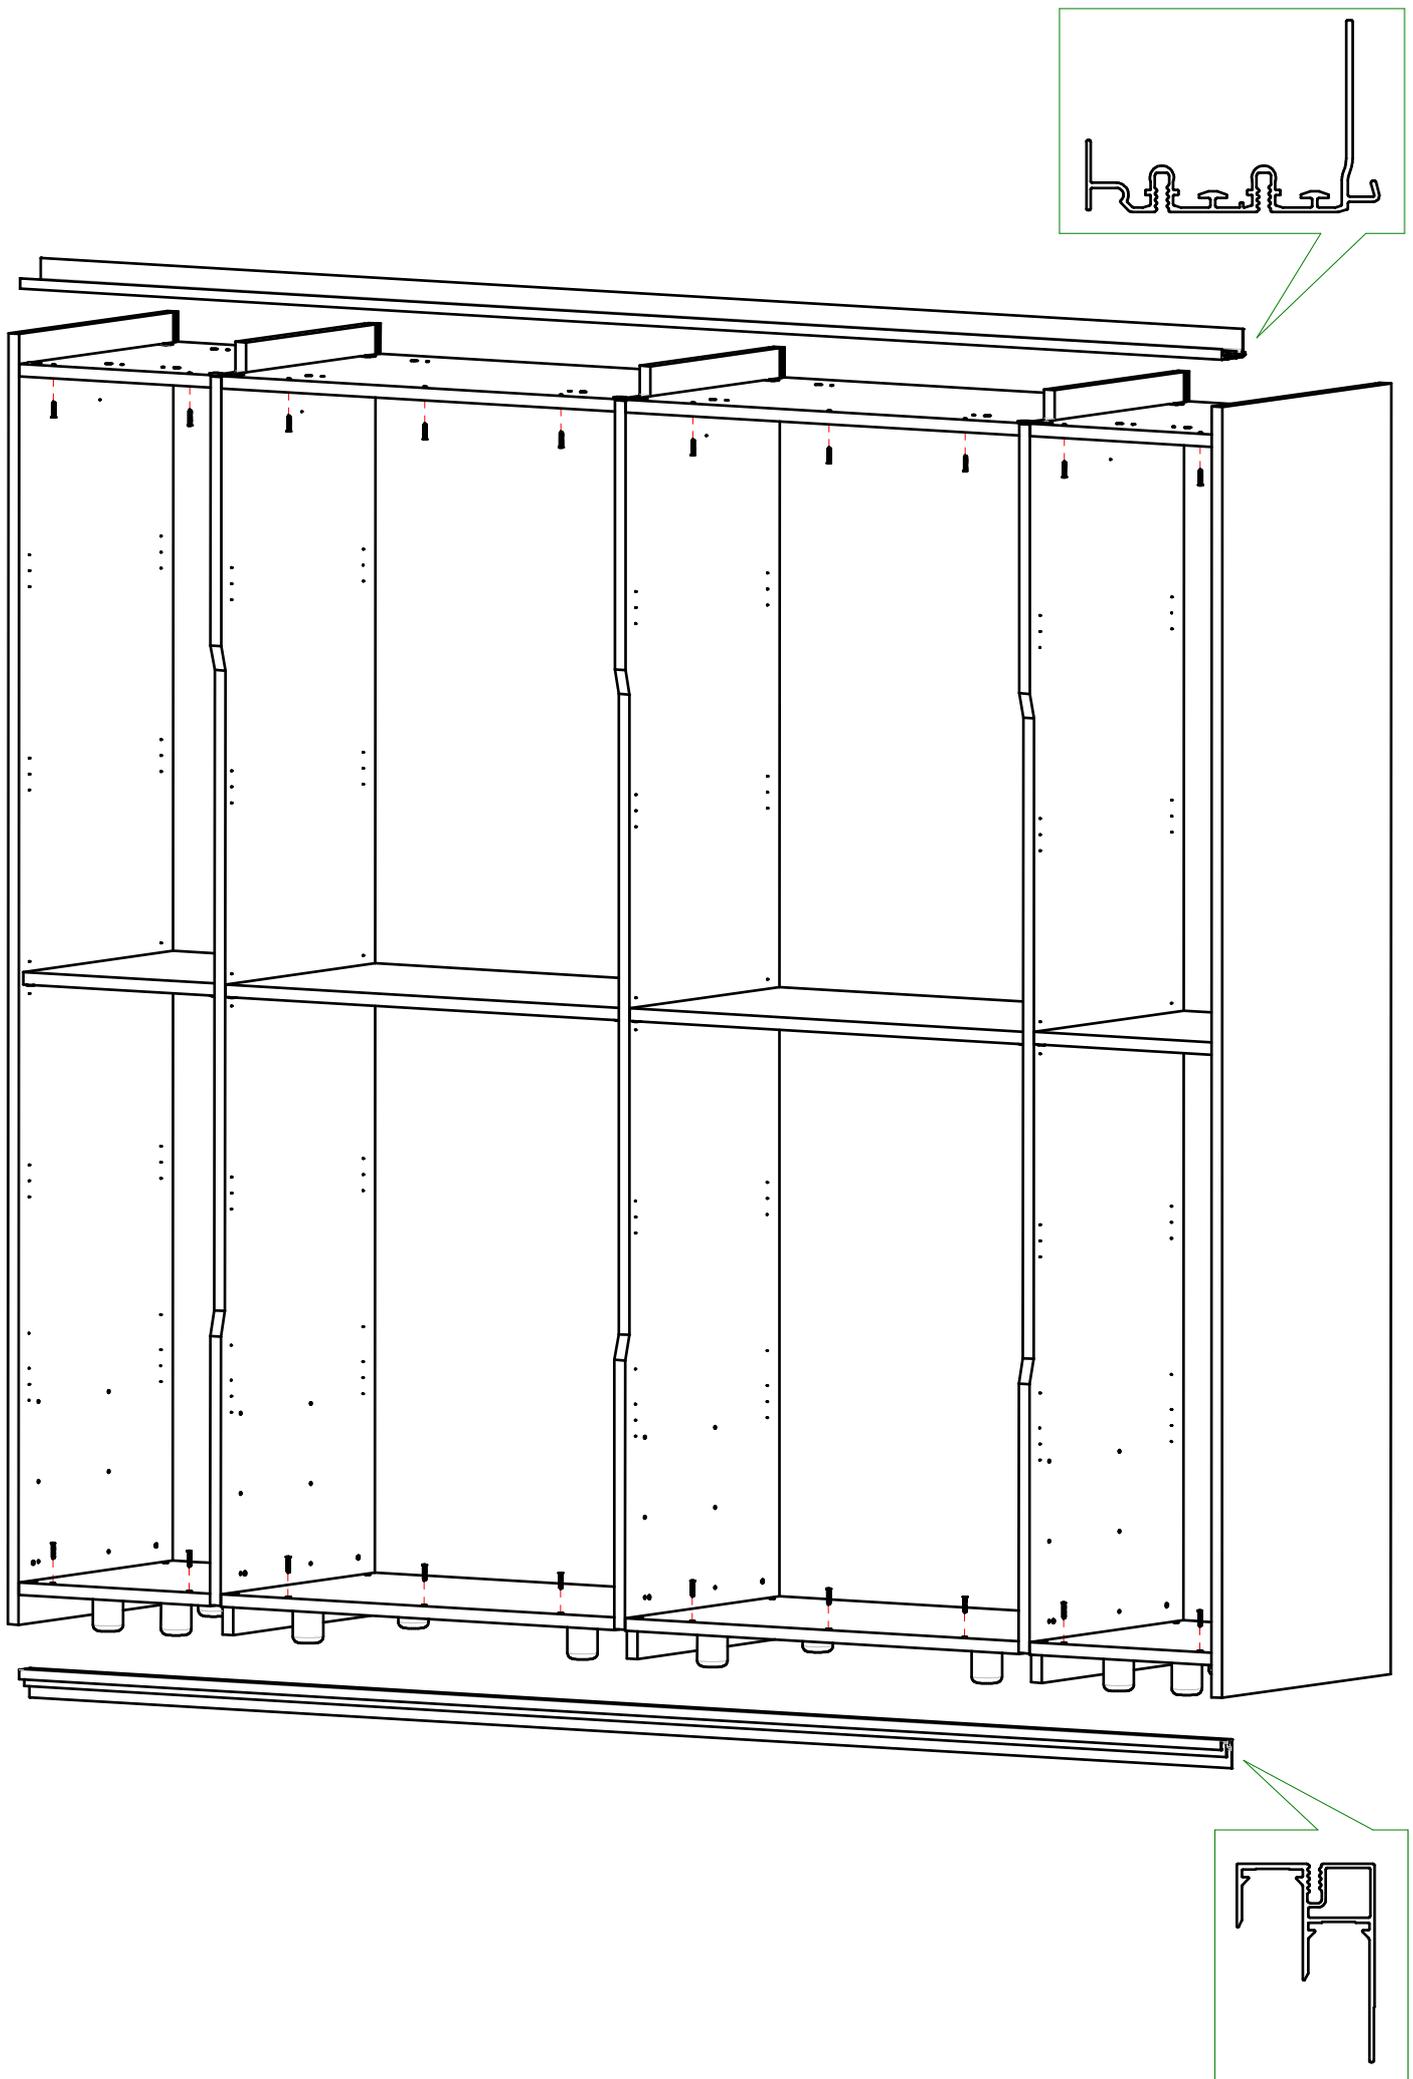


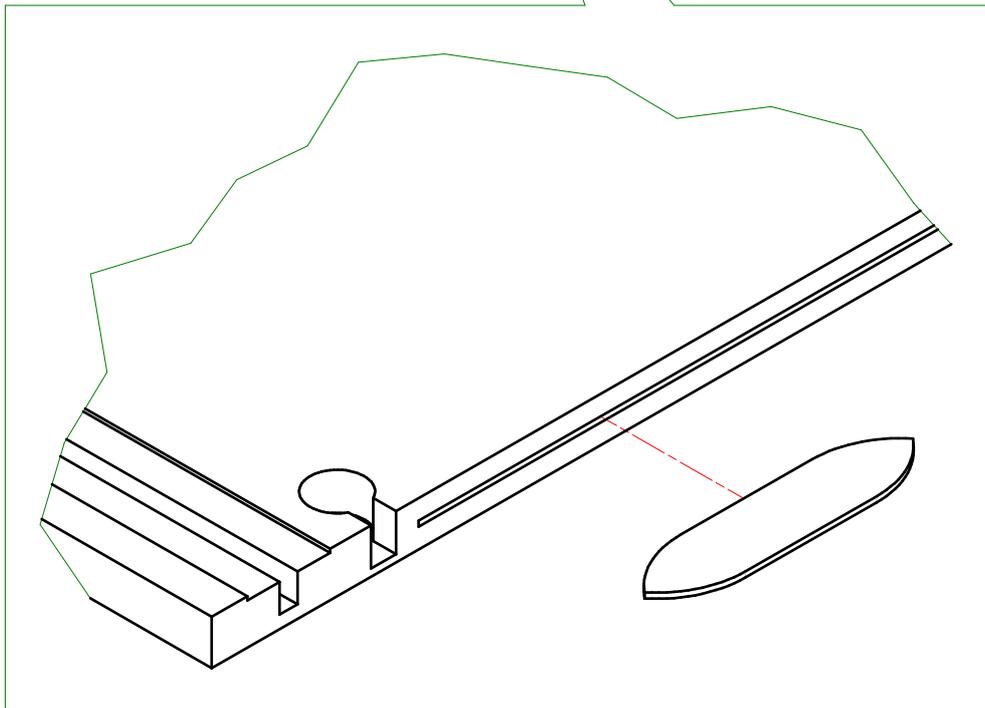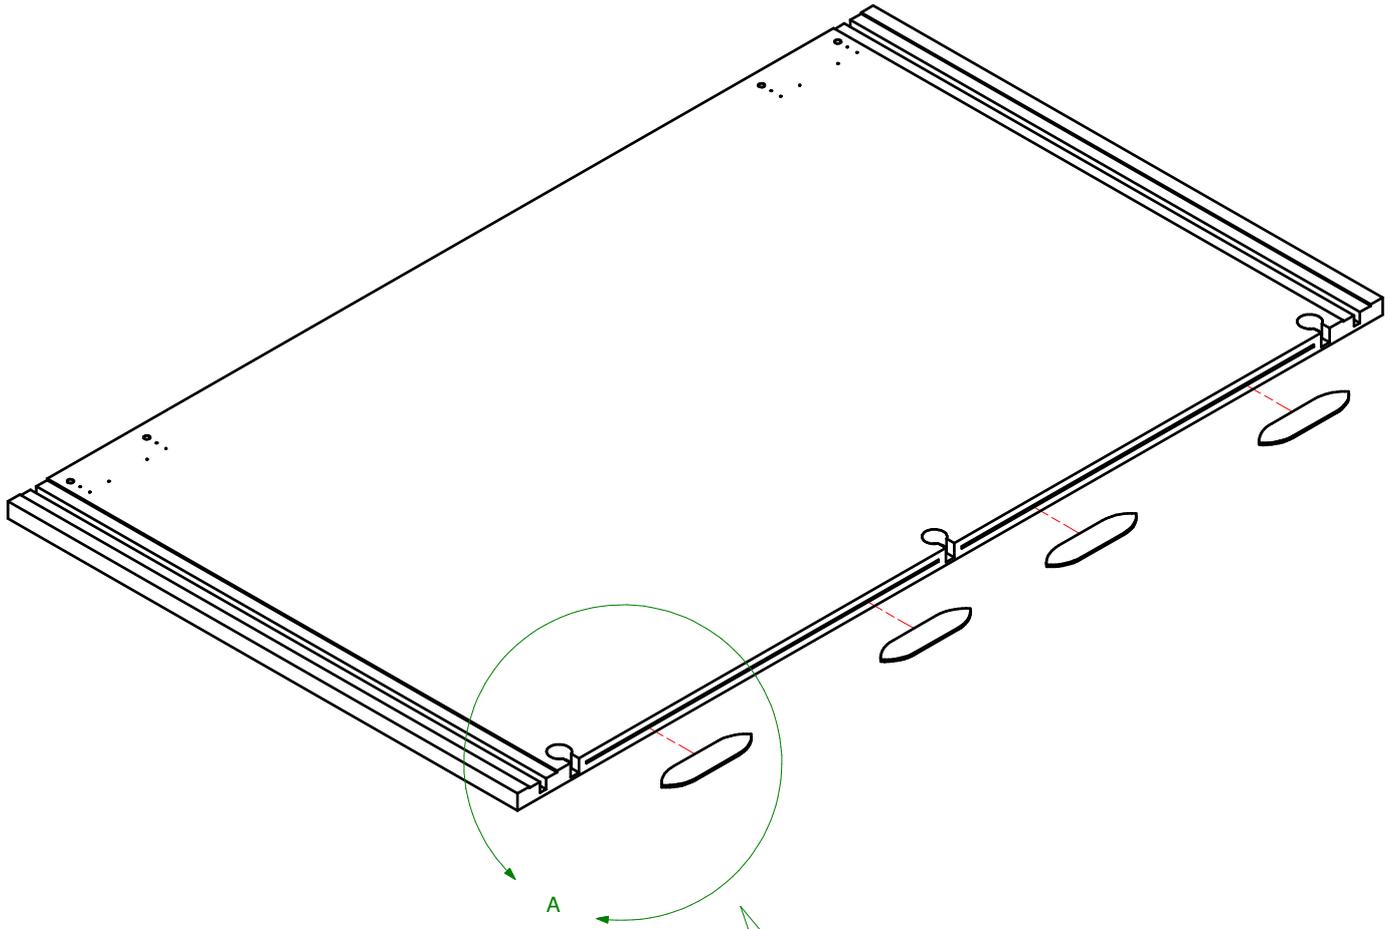


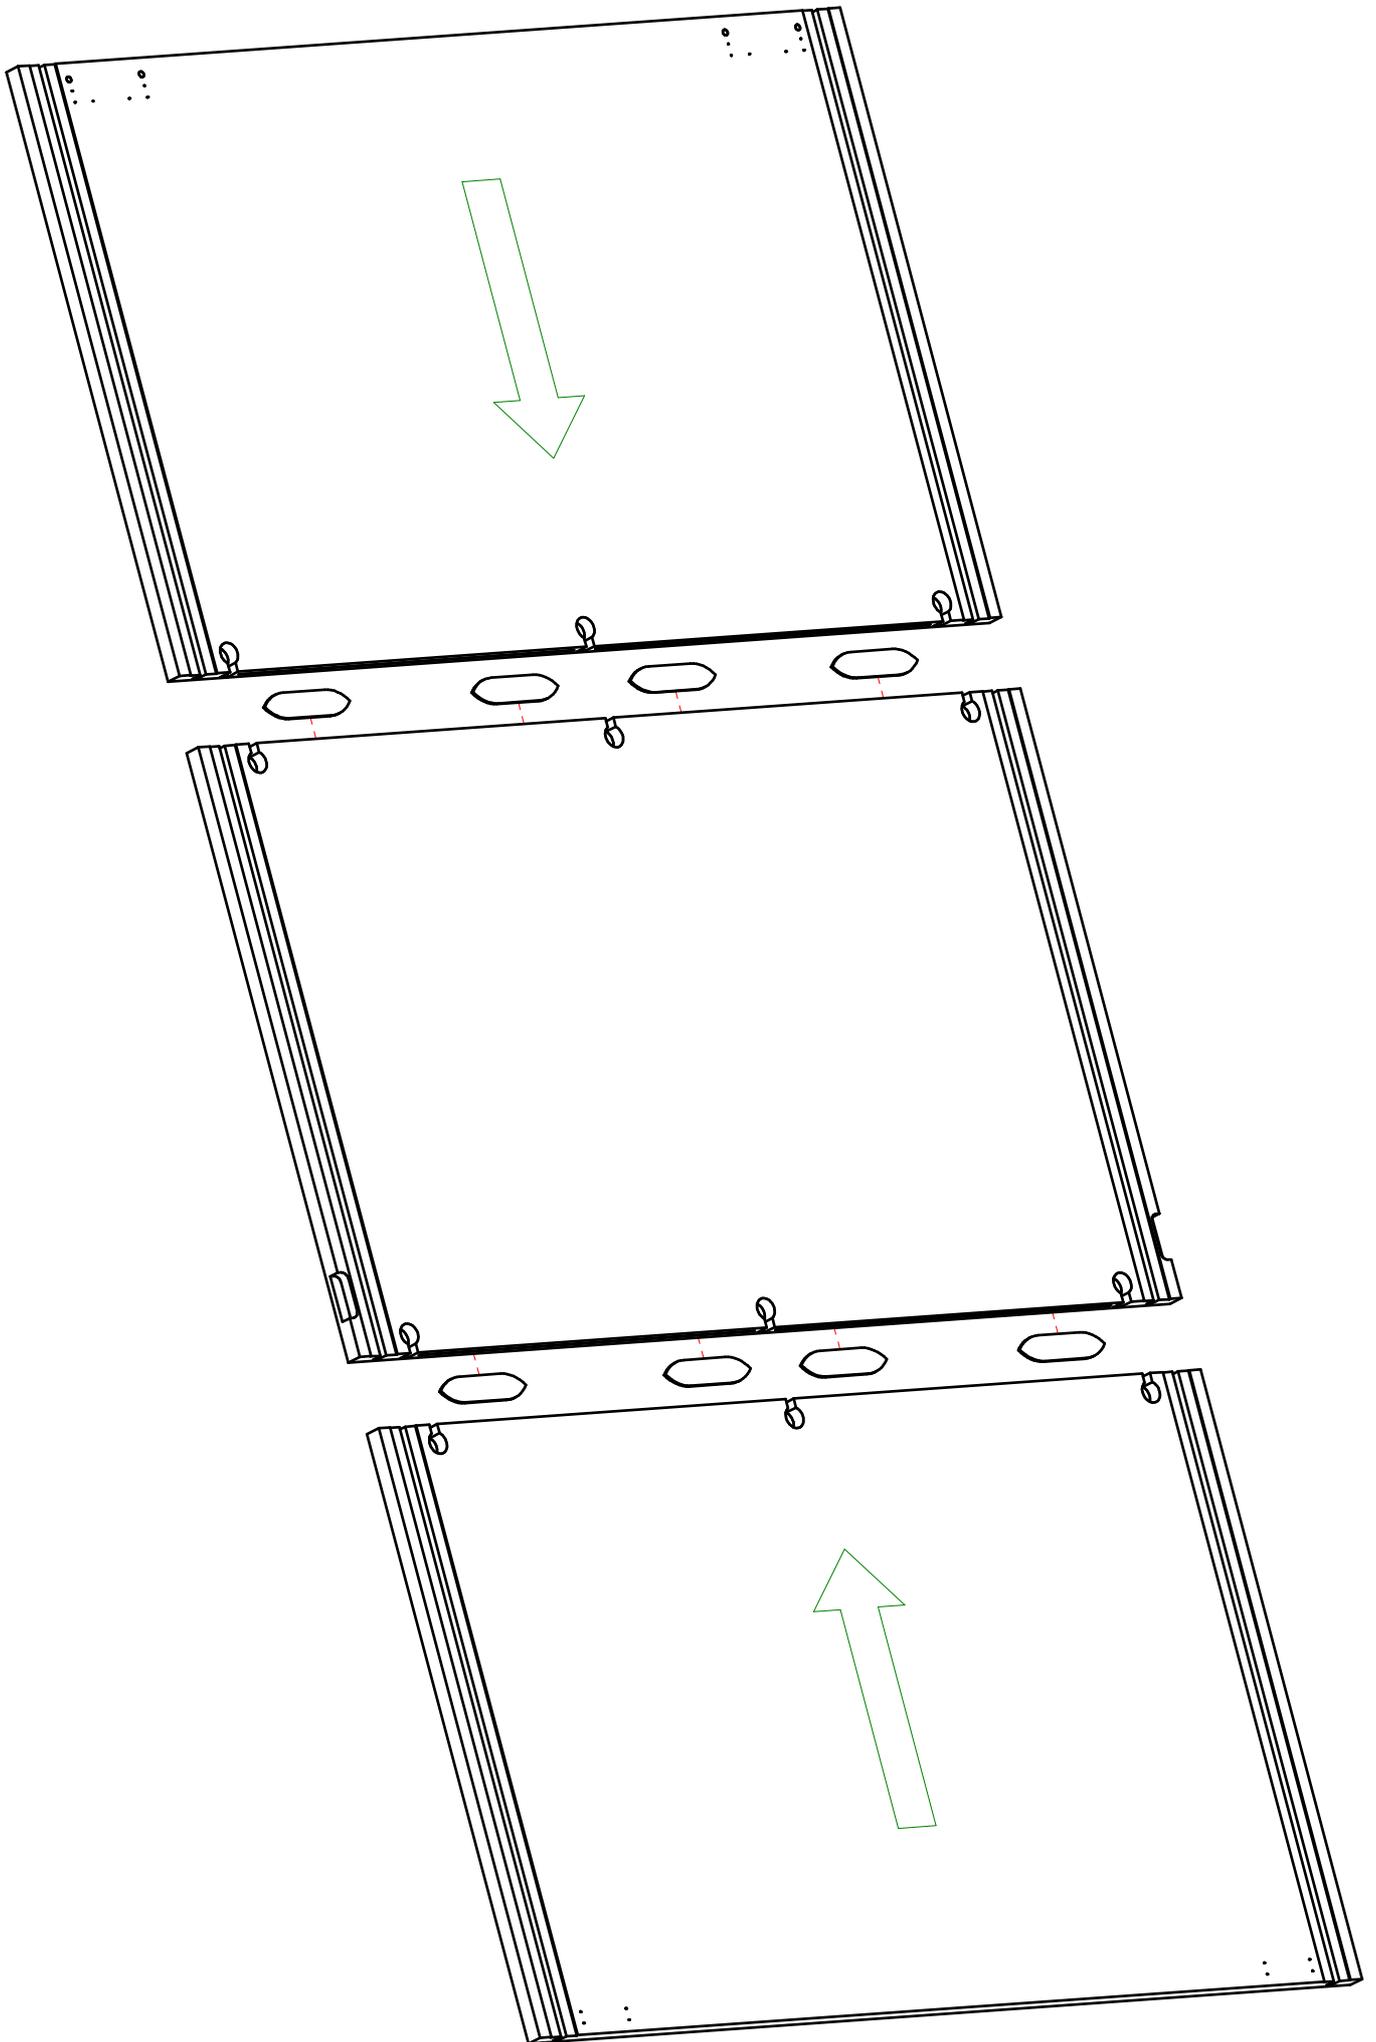

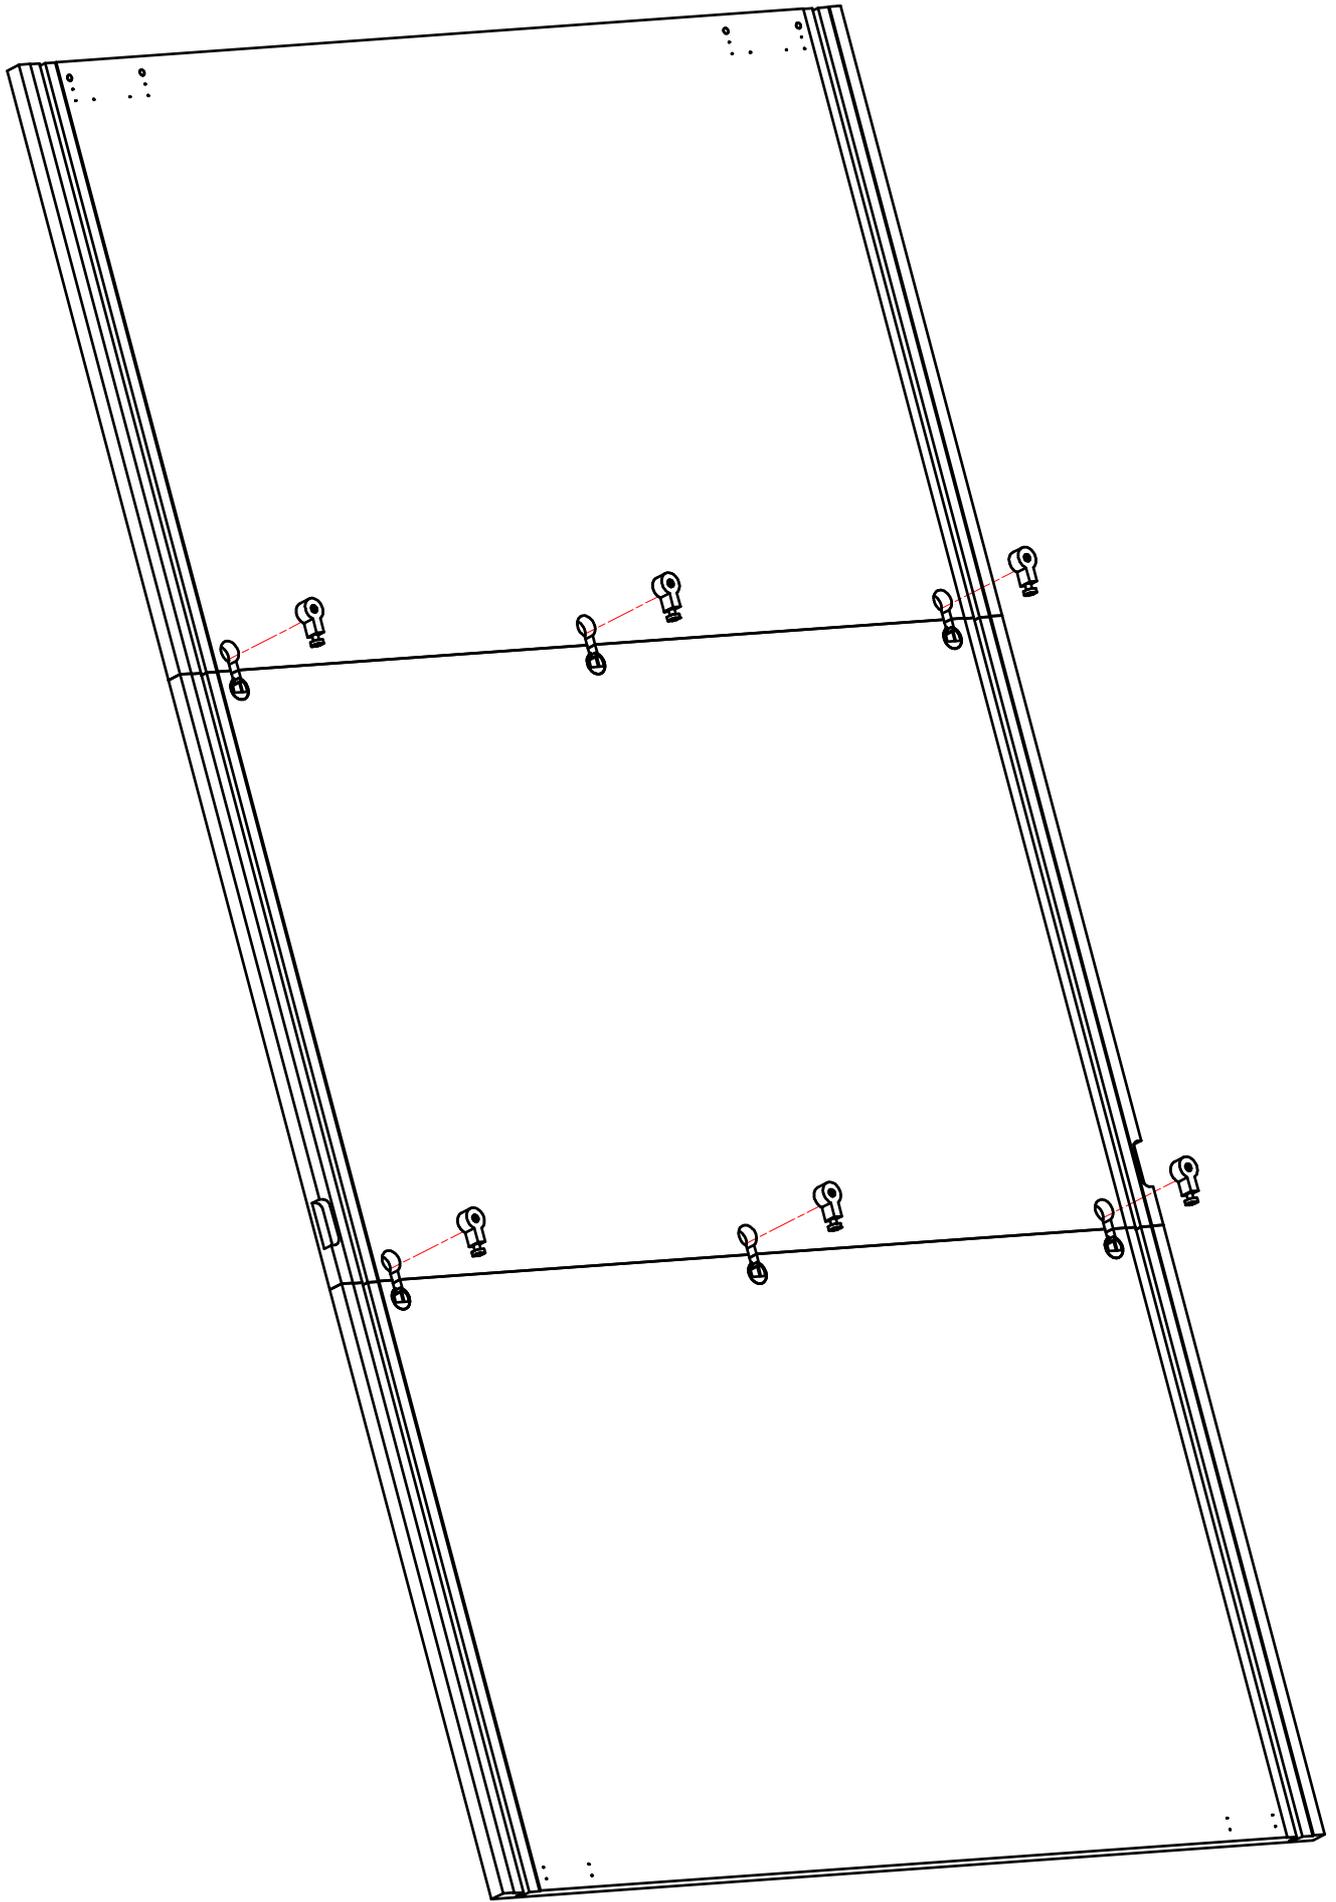

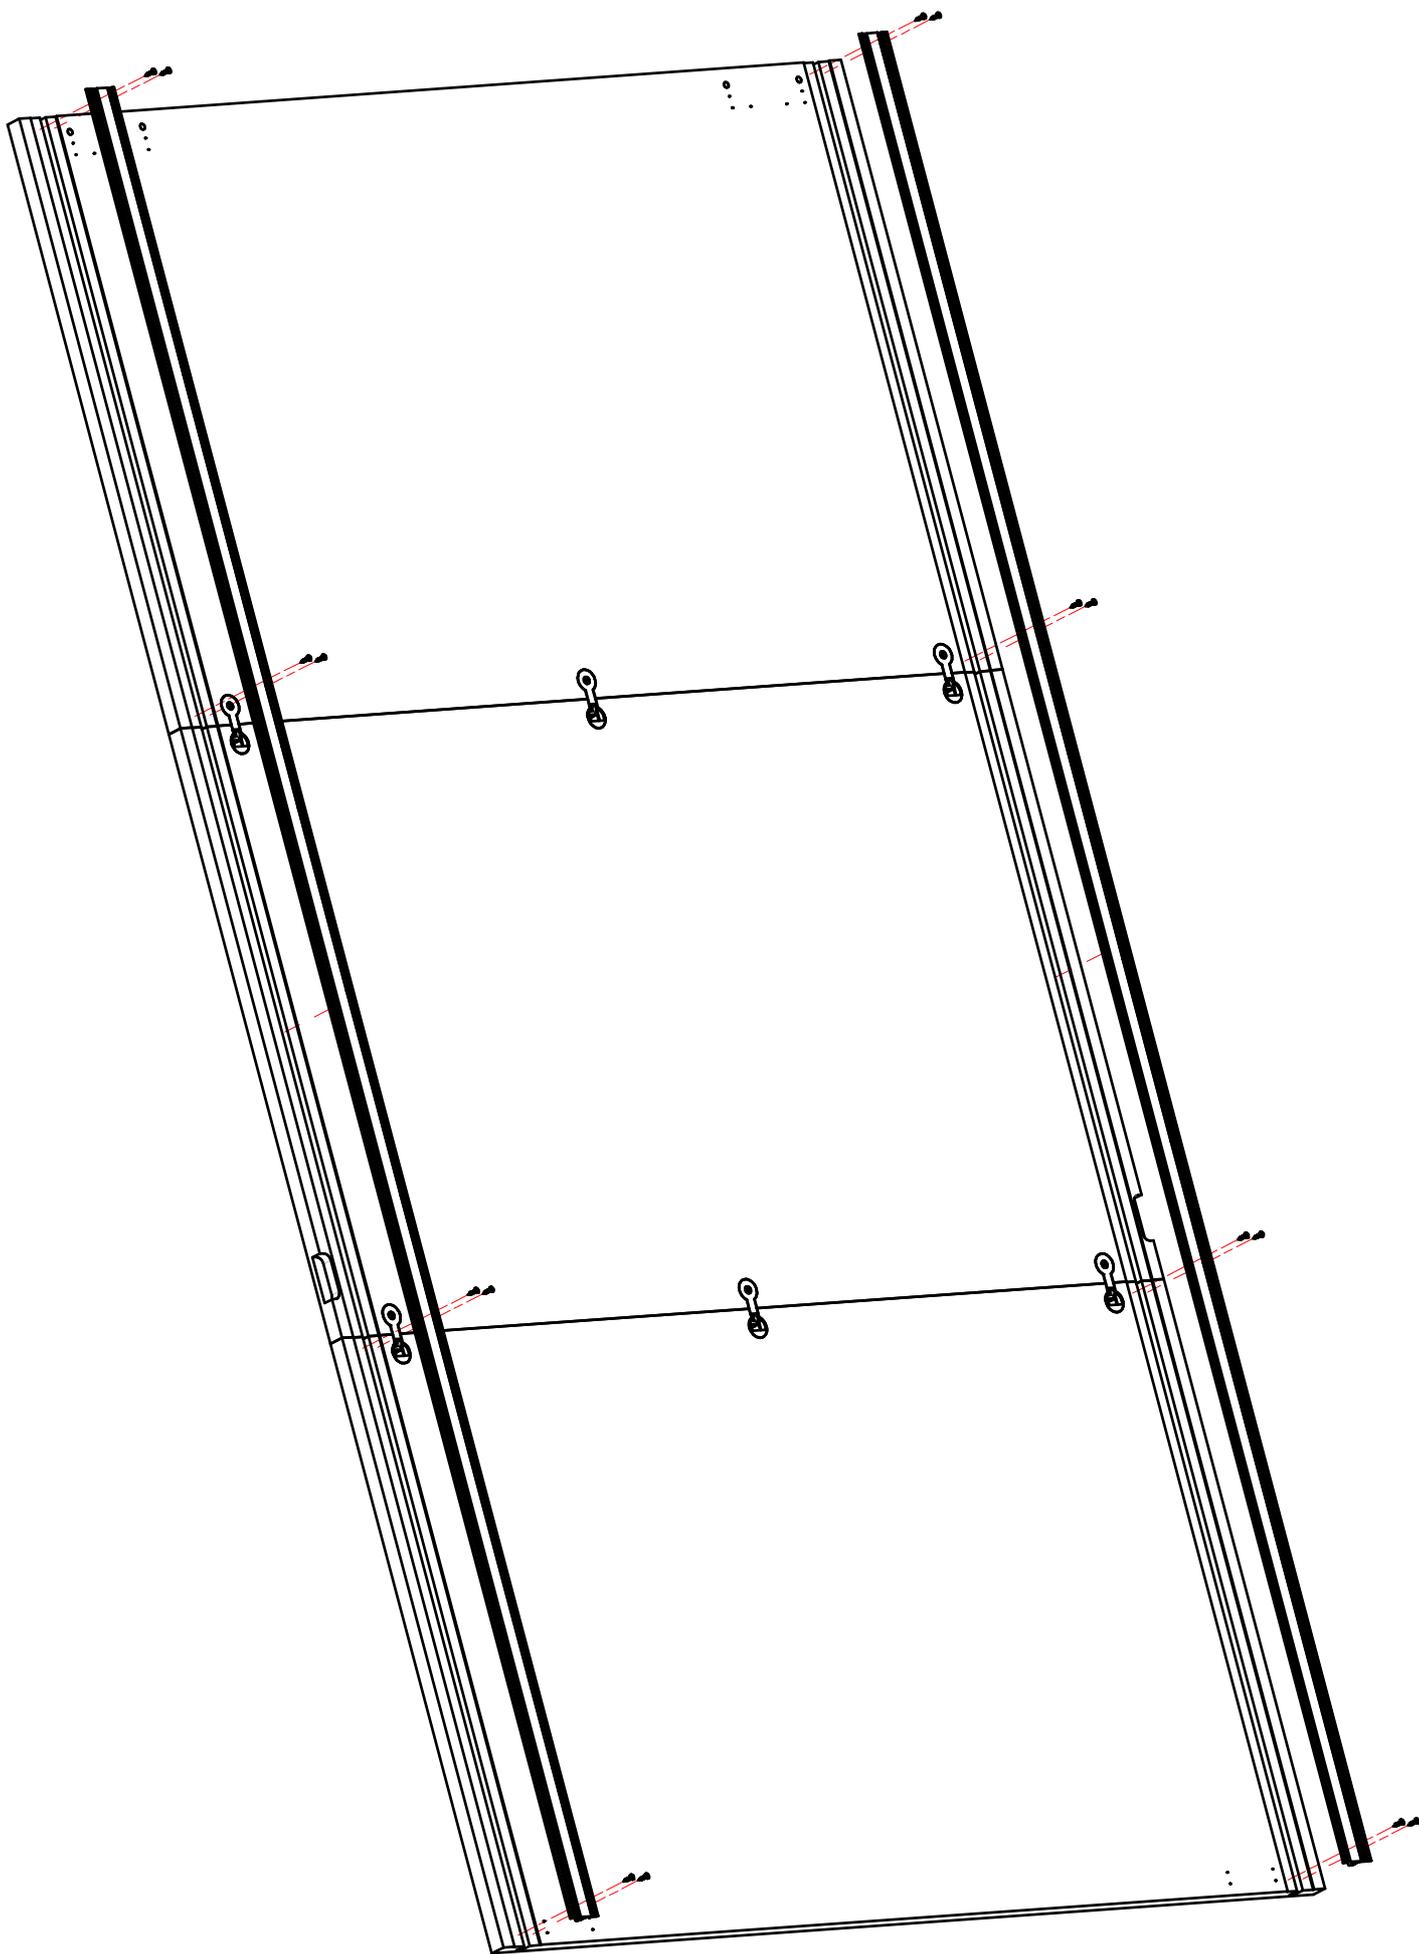

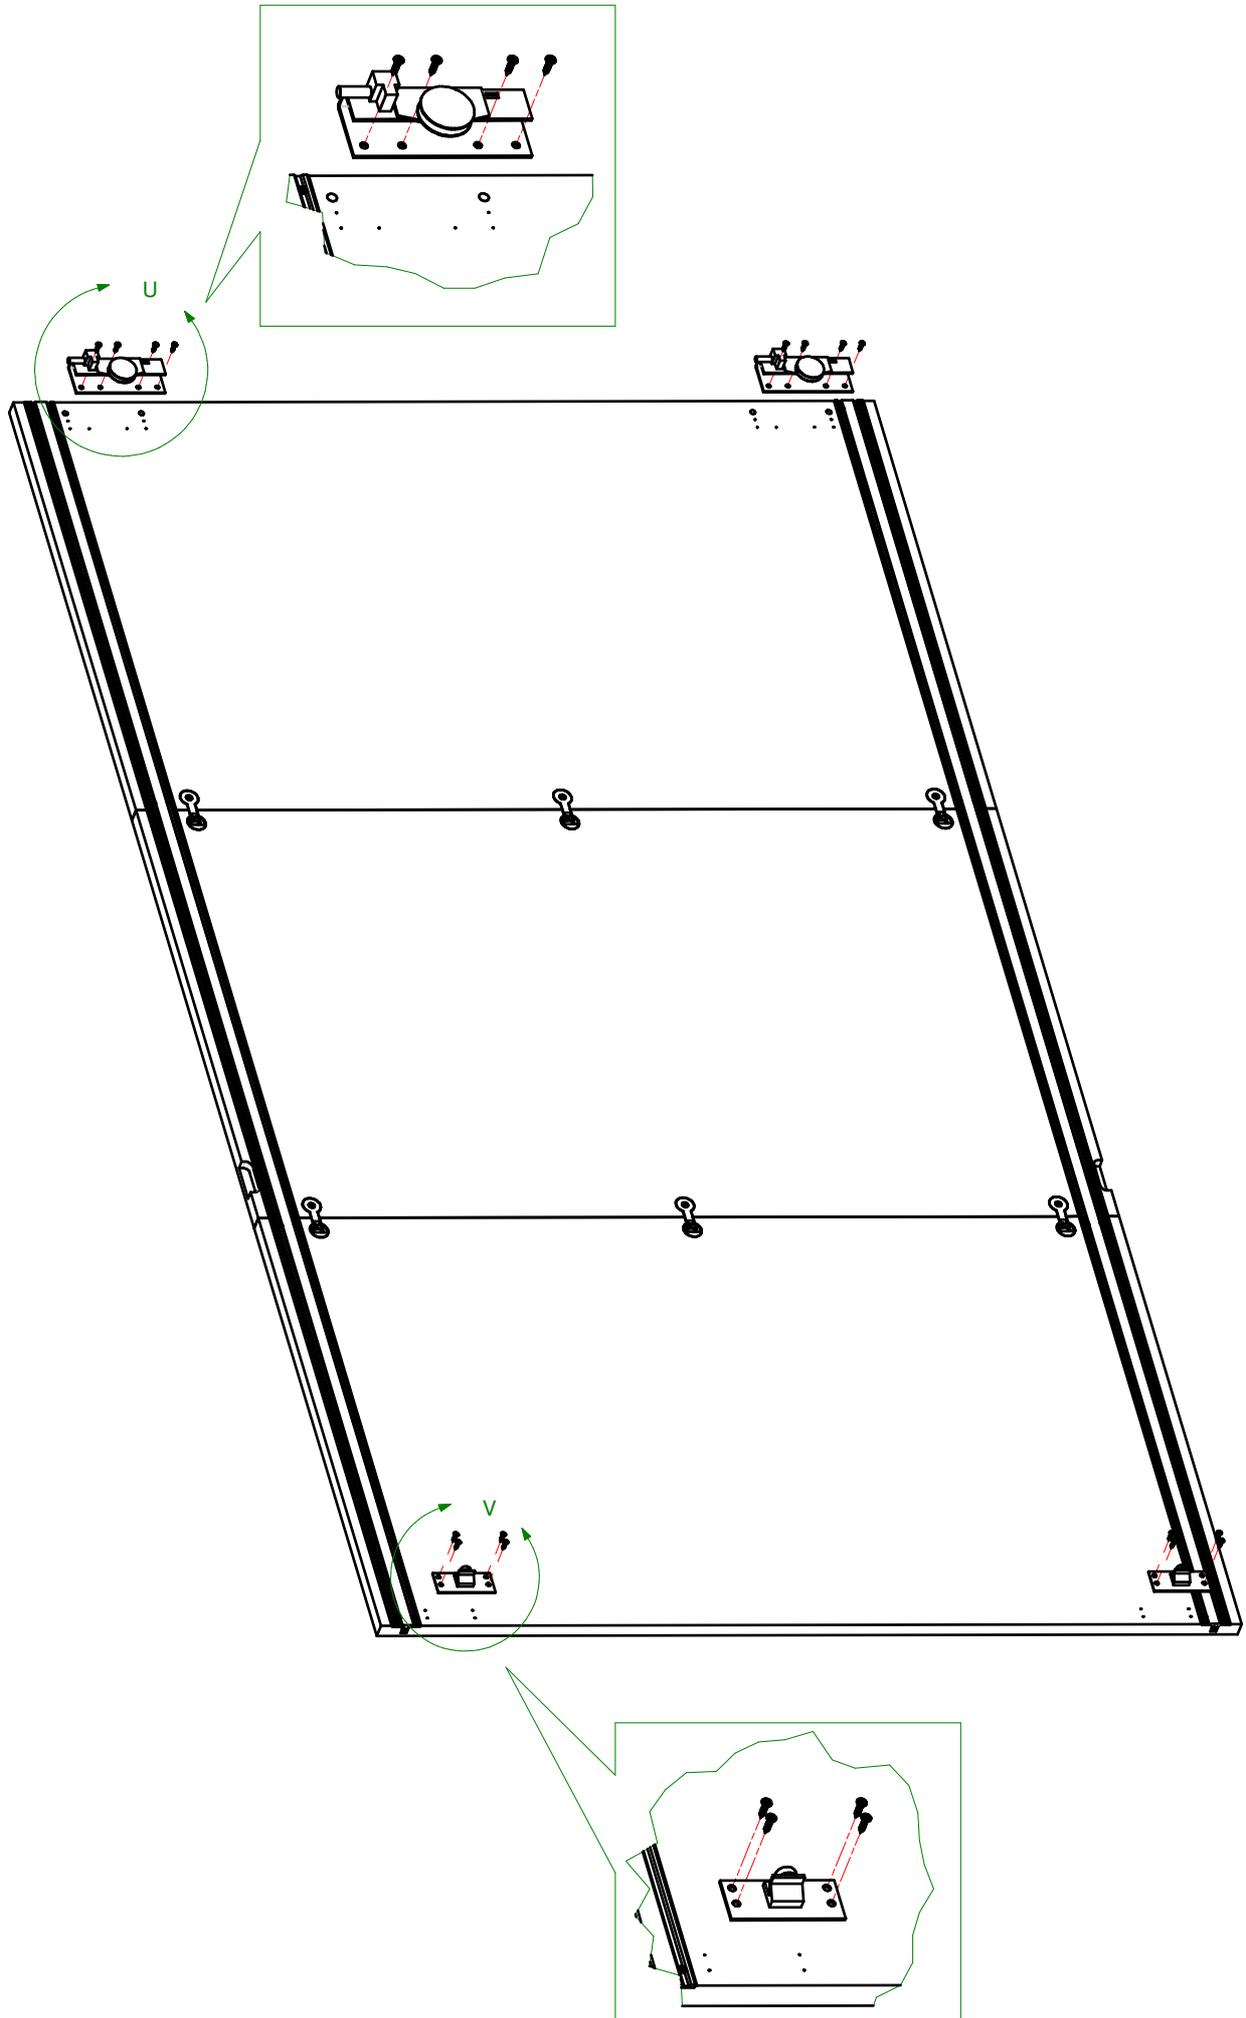

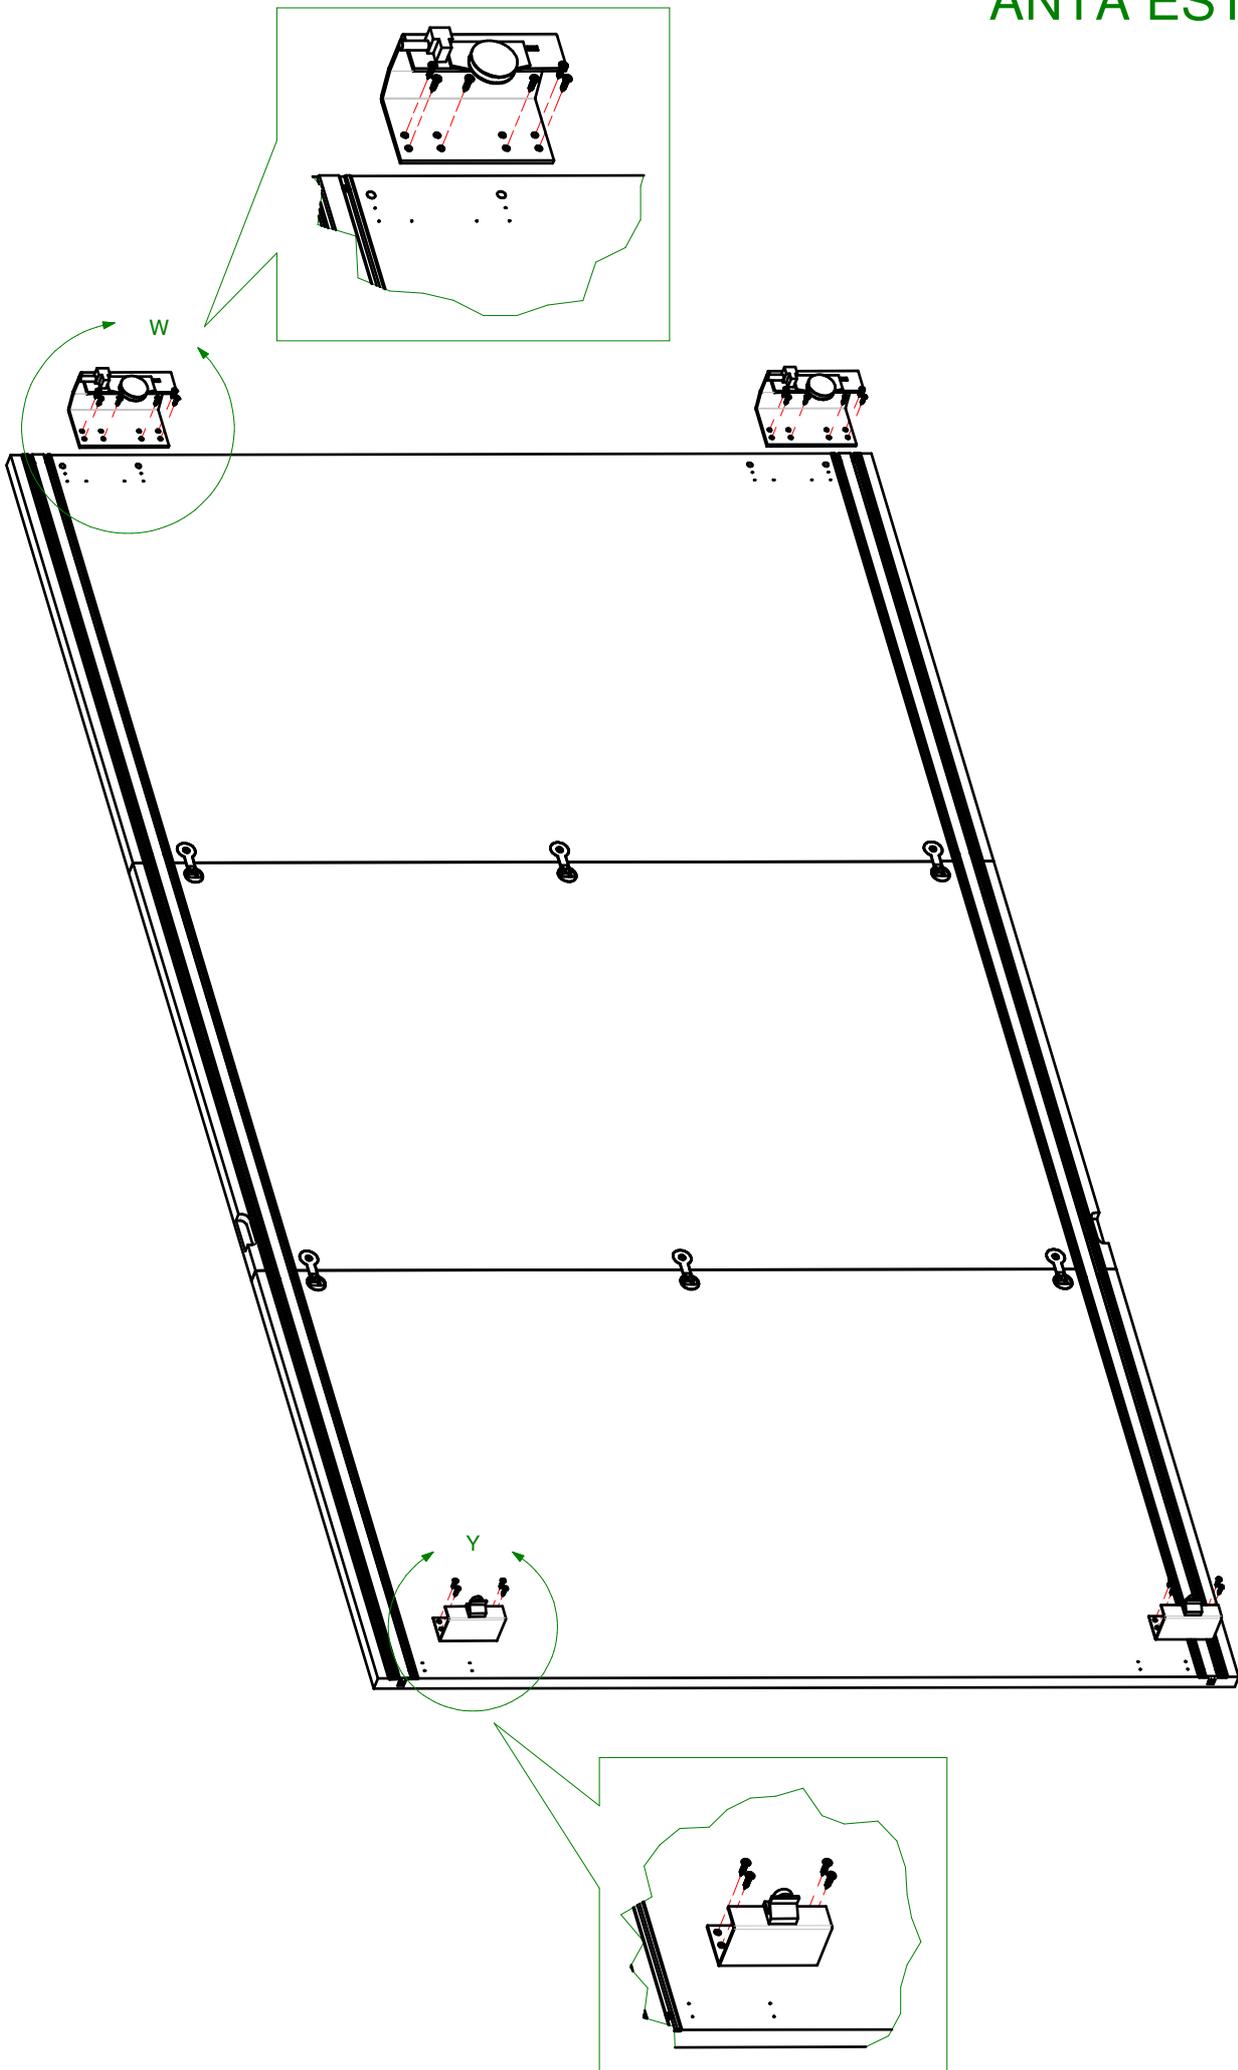

## -ATTENZIONE-

PER TUTTE LE SPECIFICHE DI REGOLAZIONE E DI MONTAGGIO DEI RALLENTATORI E CARRELLI, FARE RIFERIMENTO AL LIBRETTO ILLUSTRATIVO PRESENTE ALL'INTERNO DEL KIT DI GUIDE E CARRELLI

