


moretticompany[®]

Schemi montaggio

Assembling diagrams


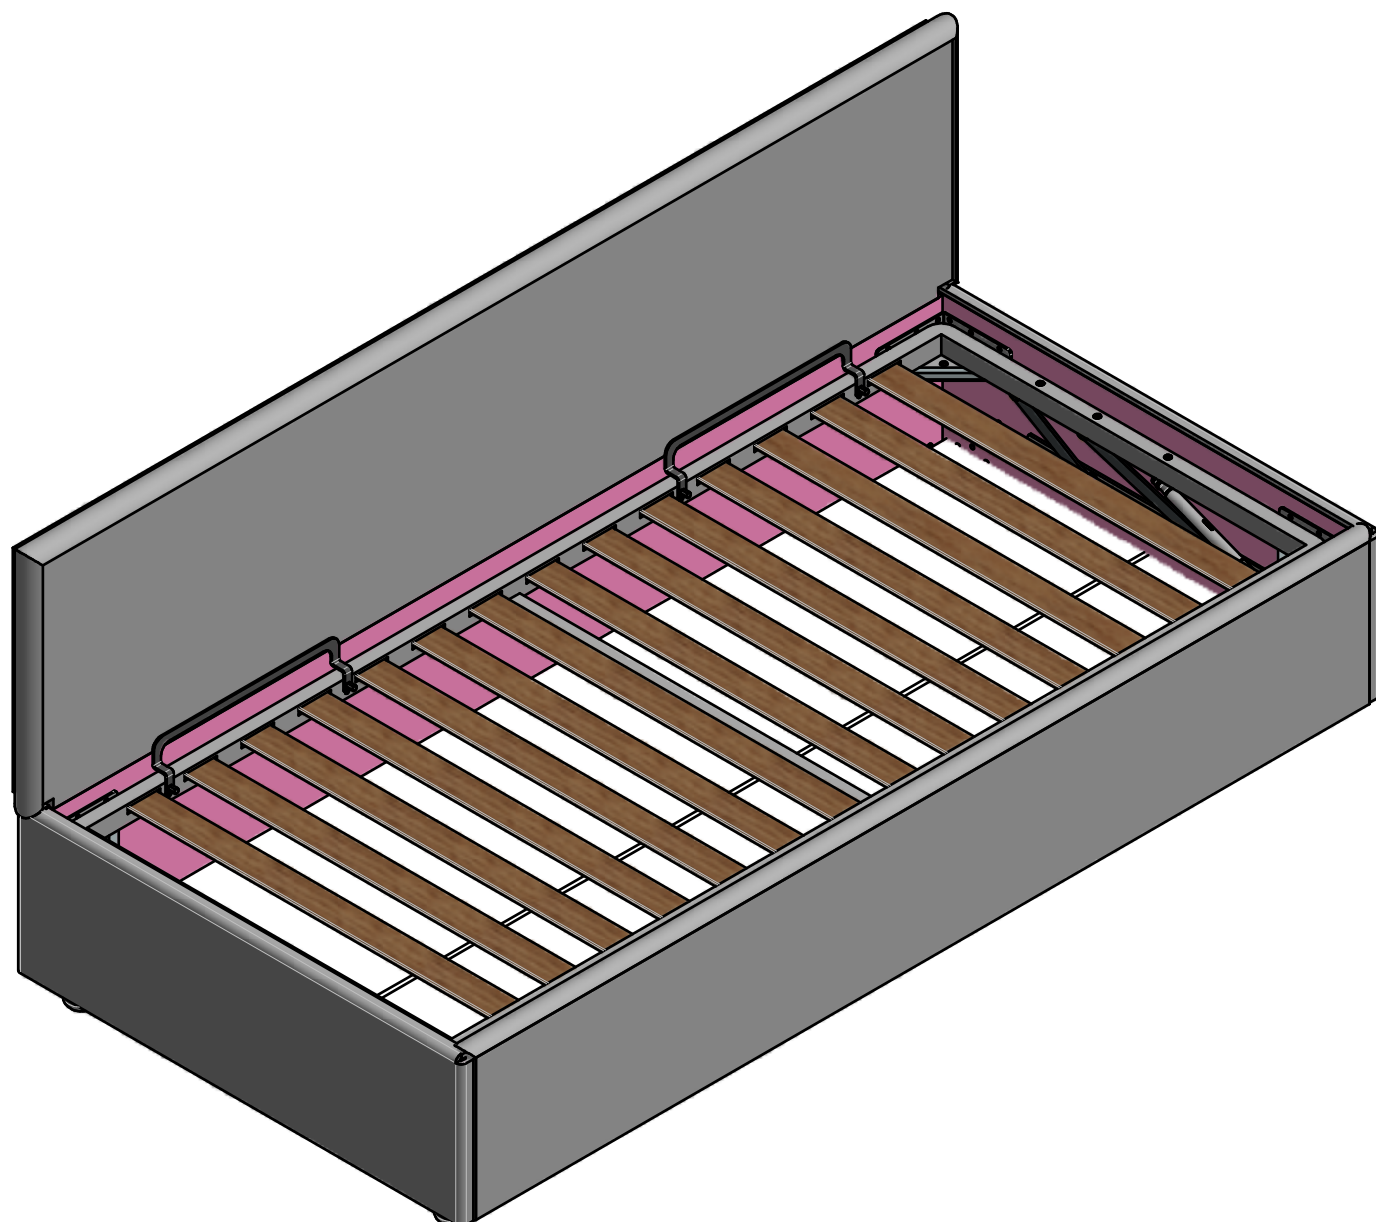


DIVANO IMBOTTITO SIDE





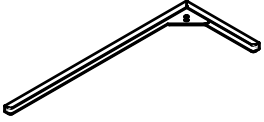
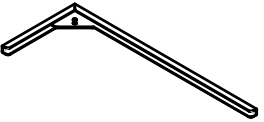
ed. 25/08/2020

- rev.2

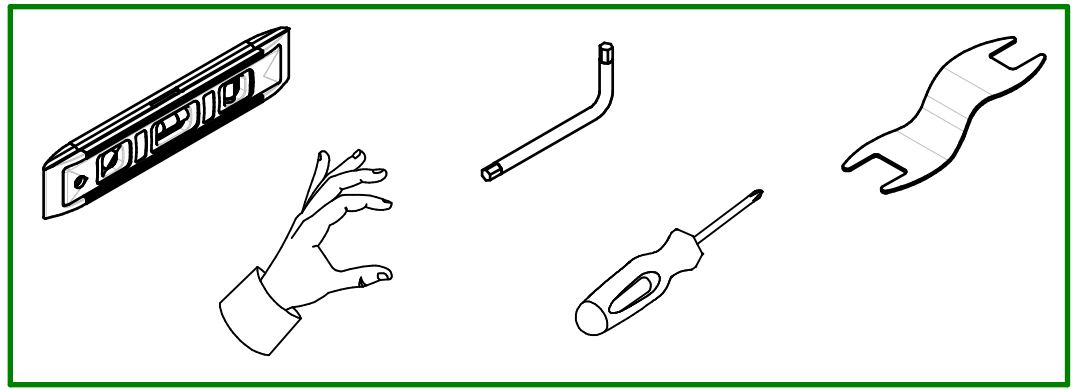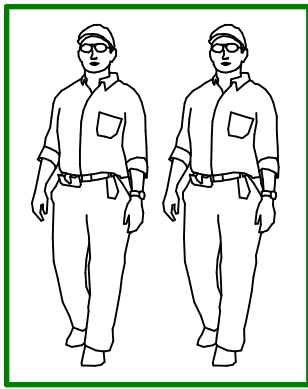






SCMNT053






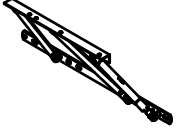






080003263 - Kit Piastre Perno Letti Box Side


400026127 Piastra Angolare Strutturale XAL	N°4		A
200004428 Paracolpo Piastre Strutturali	N°4		B
200004584 Staffa Supporto Listello Centrale	N°4		C
200002243 Supp.Gamba Standard H110 All	N°1		D
200004582 Staffa Supporto Fondi Box DX	N°2		E
200004583 Staffa Supporto Fondi Box SX	N°2		F

080003265 - Kit Trapezi Box Side

200004491 Kit Trapezi Box Side	N°1		S
200000980 Bl.Vit.TPS-MA M6x50_Esa_FSC	N°8		T
200000876 Bl.DADI_M6_Auto-B_FSC	N°8		U
200004572 BL.VIT.SPE-MA M6x20_ESA	N°8		G
200004429 Perno Allineatore Rete	N°4		V
200004088 Vite SPE M6x40	N°4		W
200004494 Fermamaterasso Side	N°2		X

080003439 - SFR_Struttura Div. Imb. BOX Side

200000983 Bl.Vit.TPS-MA M8x50_Esa_FSC	N°5		H
200000901 Bl.RODELLE_8,5x24 Zinc_FSC	N°1		I
200001390 Parac.Feltro 40x40	N°2		L
200004526 Supp.Gamba Standard H55 All	N°4		M
200001322 Maniglia Fondi Divano	N°1		N
200000920 Bl.Vit.TBLFR-MA M4x10_Cro	N°1		O
200000872 Bl.DADI_GIUNZ_TBLFR-M4x15	N°1		P
200004572 BL.VIT.SPE-MA M6x20_ESA	N°28		G
200004088 Vite SPE M6x40	N°6		W
200000977 Bl.Vit.TPS-MA M6x20_Esa	N°24		Q
200003032 Bl.Vit.TPS-MA M6x40_Esa	N°6		R
200000916 Bl.Vit.TBL-MA M6x12_Esa	N°2		Y

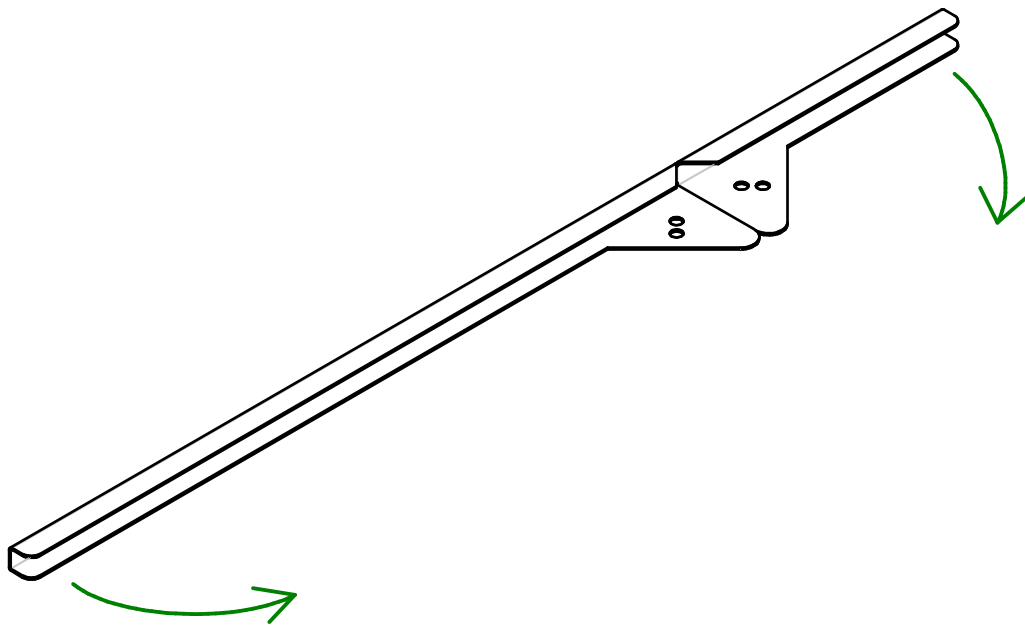

PIEGARE

cod. 200004582 - 200004583
articoli E - F

