


moretti compact®

Schemi montaggio

Assembling diagrams


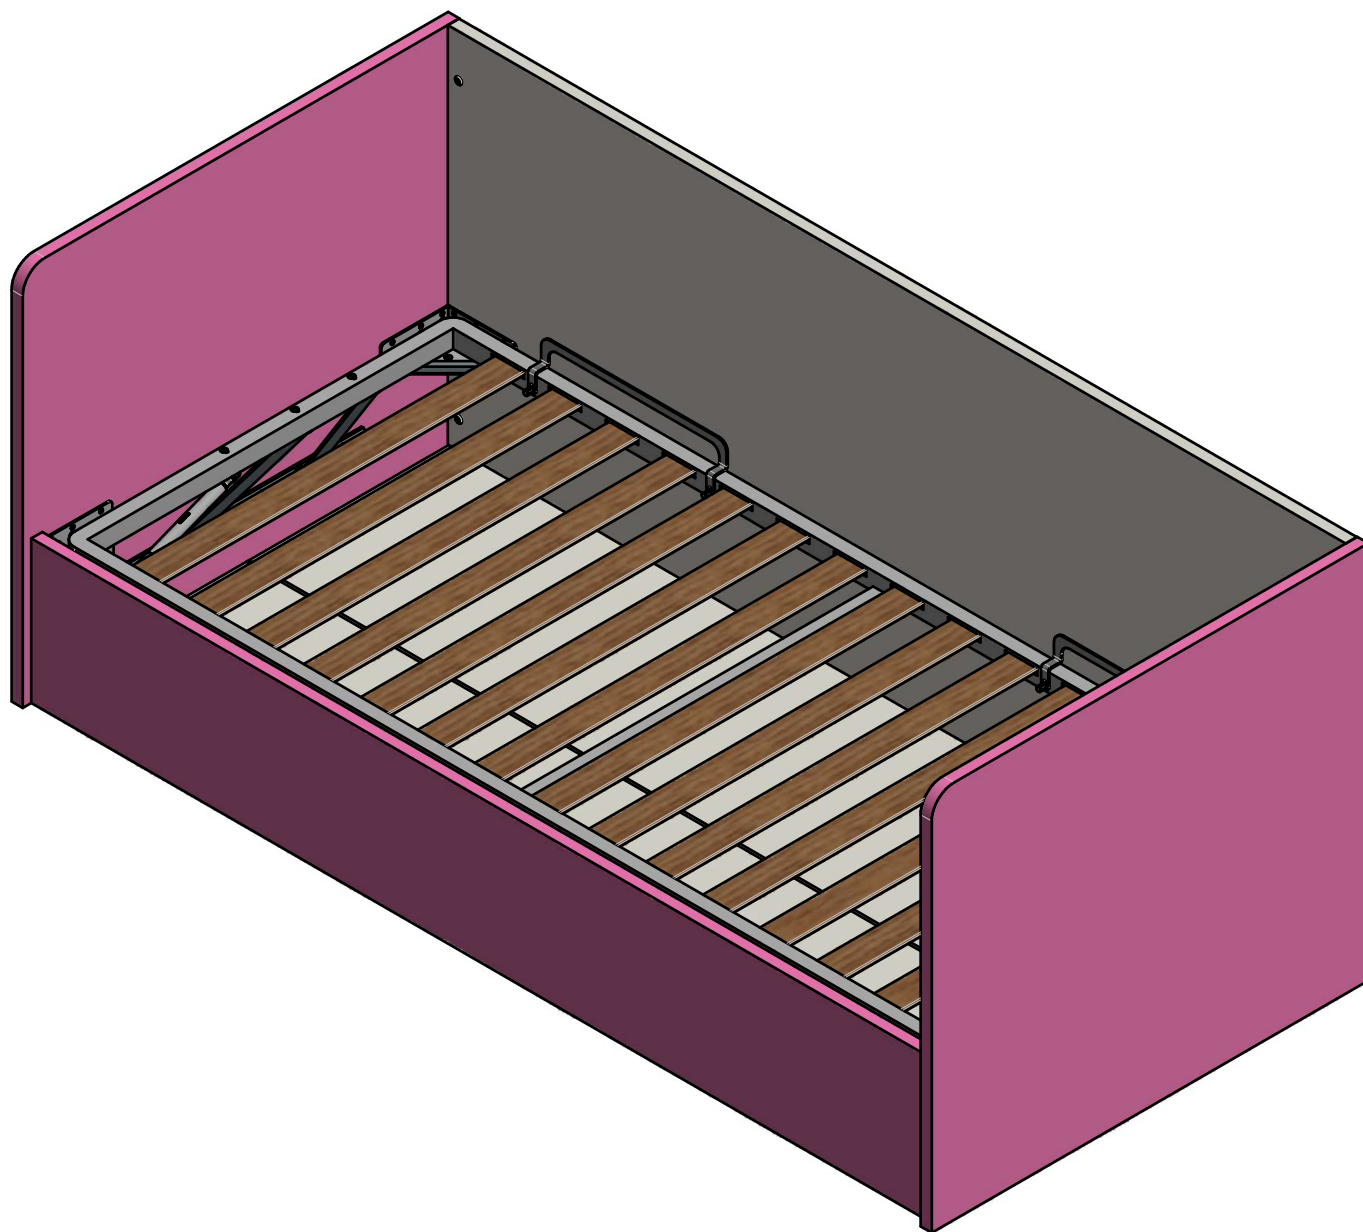


DIVANO STAR SIDE

ed. 22/04/2021






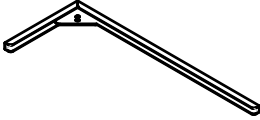
- rev.4

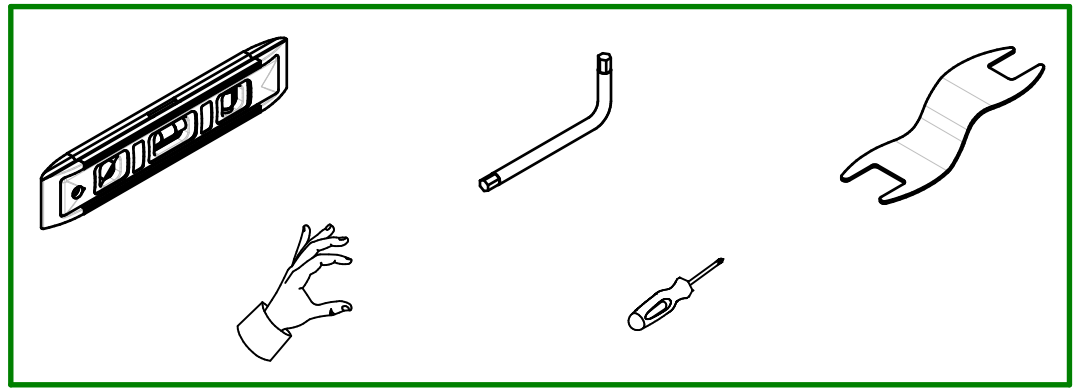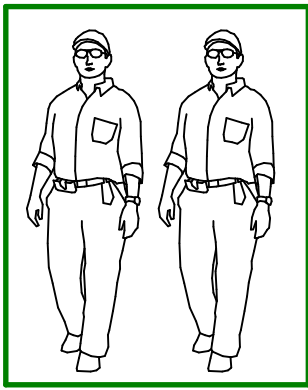



SCMNT054





080003425-SFR_Strutt. Divani STAR BOX Side

200004572 BL.VIT.SPE-MA M6x20_ESA	N°20		A
200000666 AsmbI. Perni Minifix	N°8		B
200000977 BI.Vit.TPS-MA M6x20_Esa	N°24		C
200001322 Maniglia Fondi Divano	N°1		D
200000920 BI.Vit.TBLFR-MA M4x10_Cro	N°1		E
200000872 BI.DADI_GIUNZ_TBLFR-M4x15	N°1		F
200000653 AsmbI.Cedoli 8x30 kg1=900	N°4		G
200001390 Parac.Feltro 40x40	N°2		H
200001384 Parac.H1 Bunpon Bas.Cab.Quadr	N°2		I
200000916 BI.Vit.TBL-MA M6x12_Esa	N°2		X
200000950 BI.Vit.TPS-AT 4x20_Cro	N°2		Y

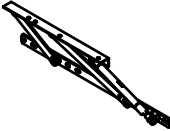
080003263 - Kit Piastre Perno Letti Box Side			
400026127 Piastra Angolare Strutturale XAL	N°4		L
200004428 Paracolpo Piastre Strutturali	N°4		M
200004584 Staffa Supporto Listello Centrale	N°4		N
200002243 Supp.Gamba Standard H110 All	N°1		O
200004582 Staffa Supporto Fondi Box DX	N°2		P
200004583 Staffa Supporto Fondi Box SX	N°2		Q

080003265 - Kit Trapezi Box Side			
200004491 Kit Trapezi Box Side	N°1		R
200004429 Perno Allineatore Rete	N°4		S
200004088 Vite SPE M6x40	N°4		T
200000980 Bl.Vit.TPS-MA M6x50_Esa_FSC	N°8		U
200000876 Bl.DADI_M6_Auto-B_FSC	N°8		V
200004572 BL.VIT.SPE-MA M6x20_ESA	N°8		W
200004494 Fermamaterasso Side	N°2		Z

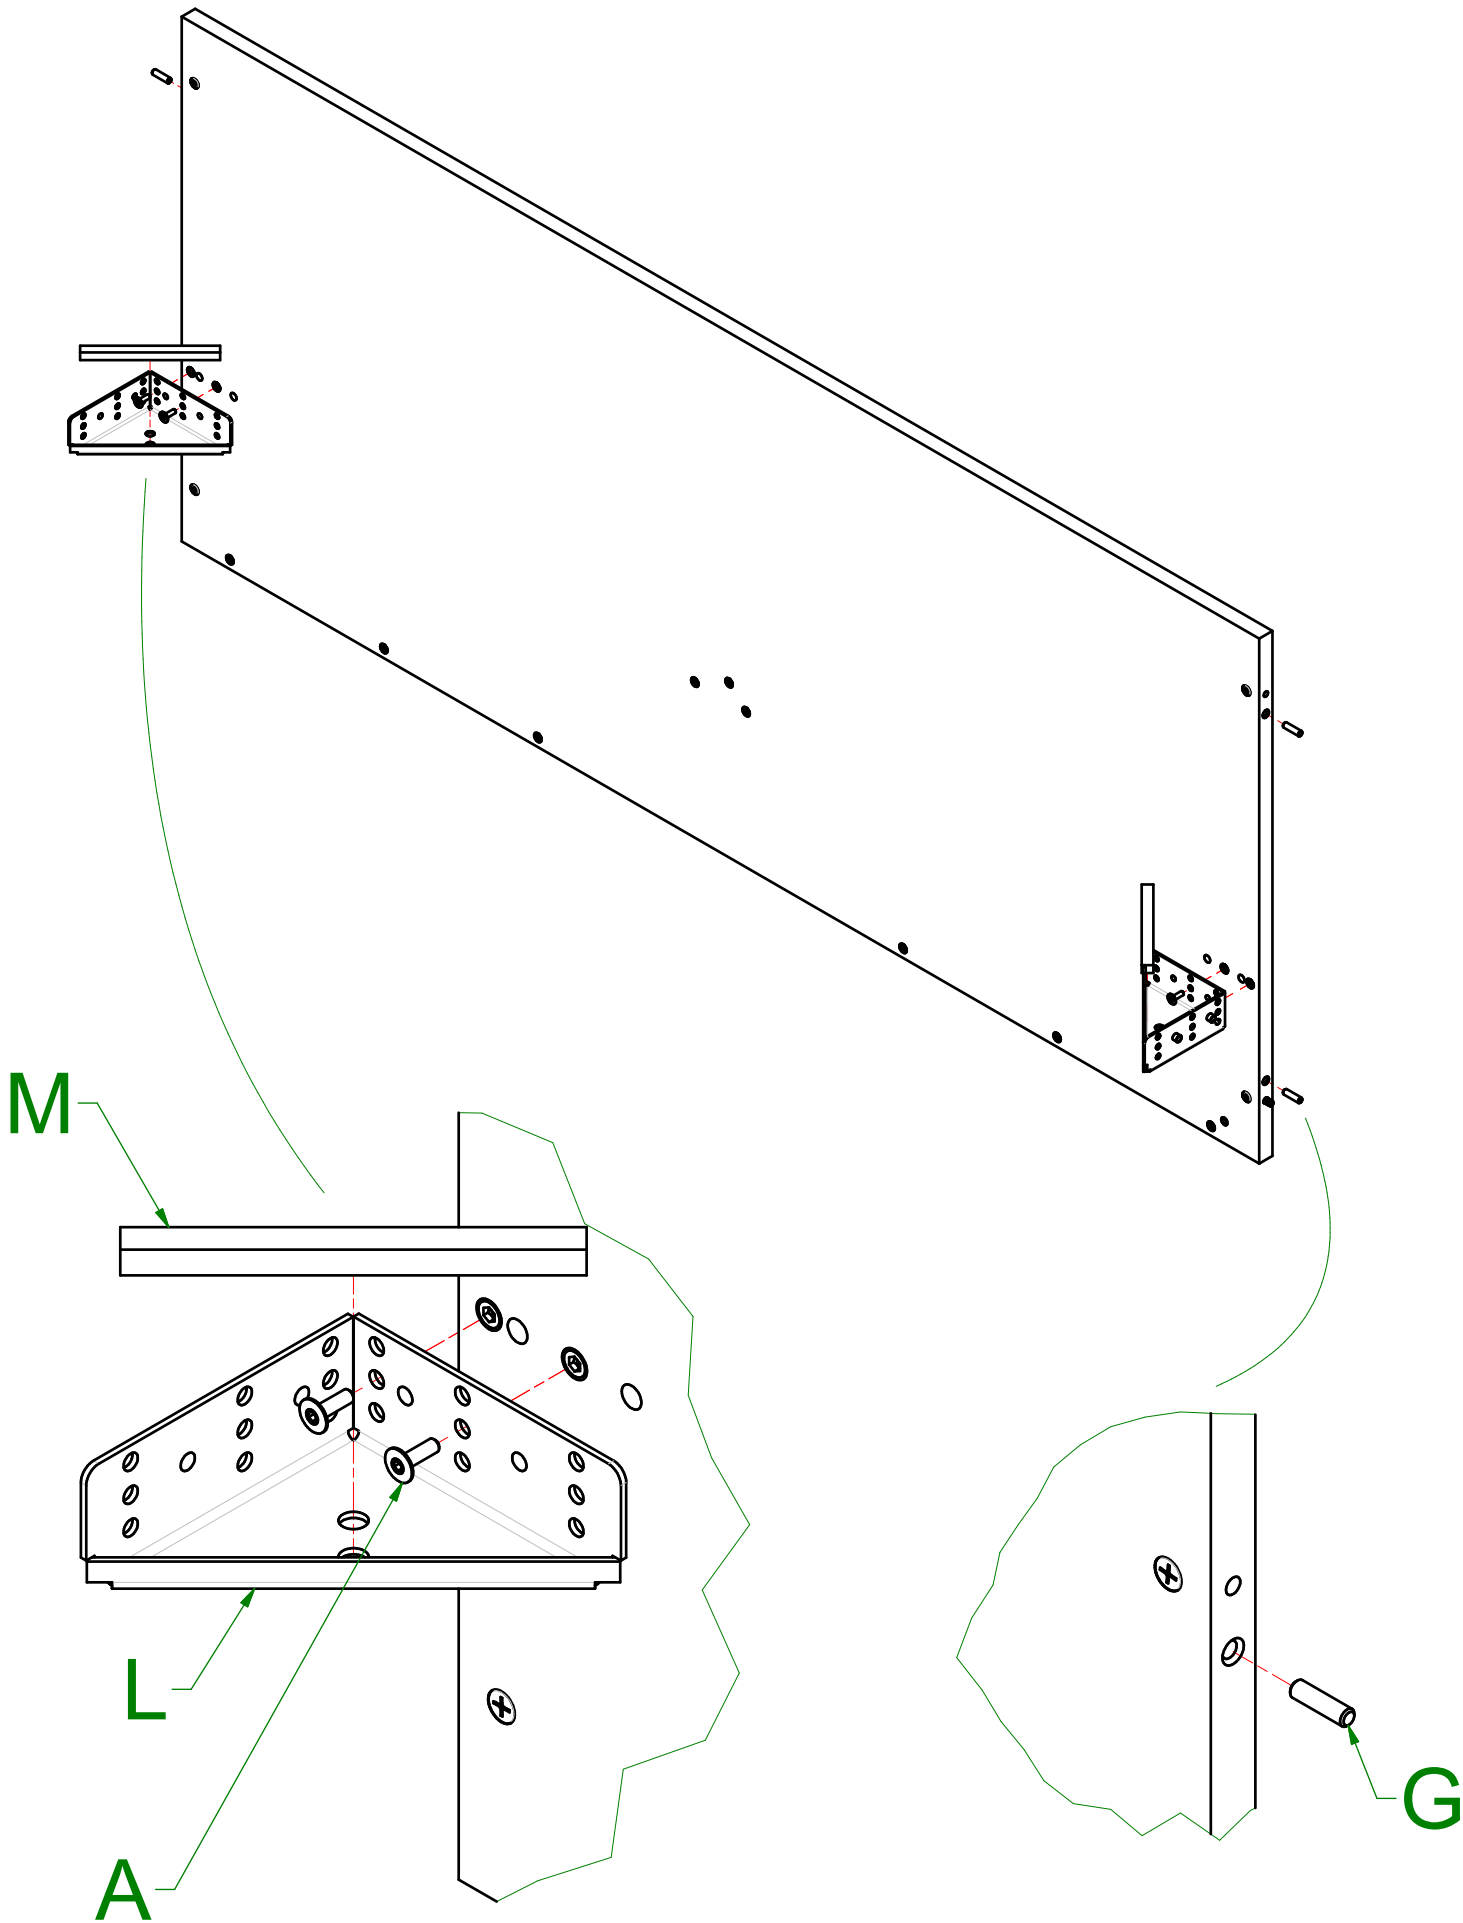

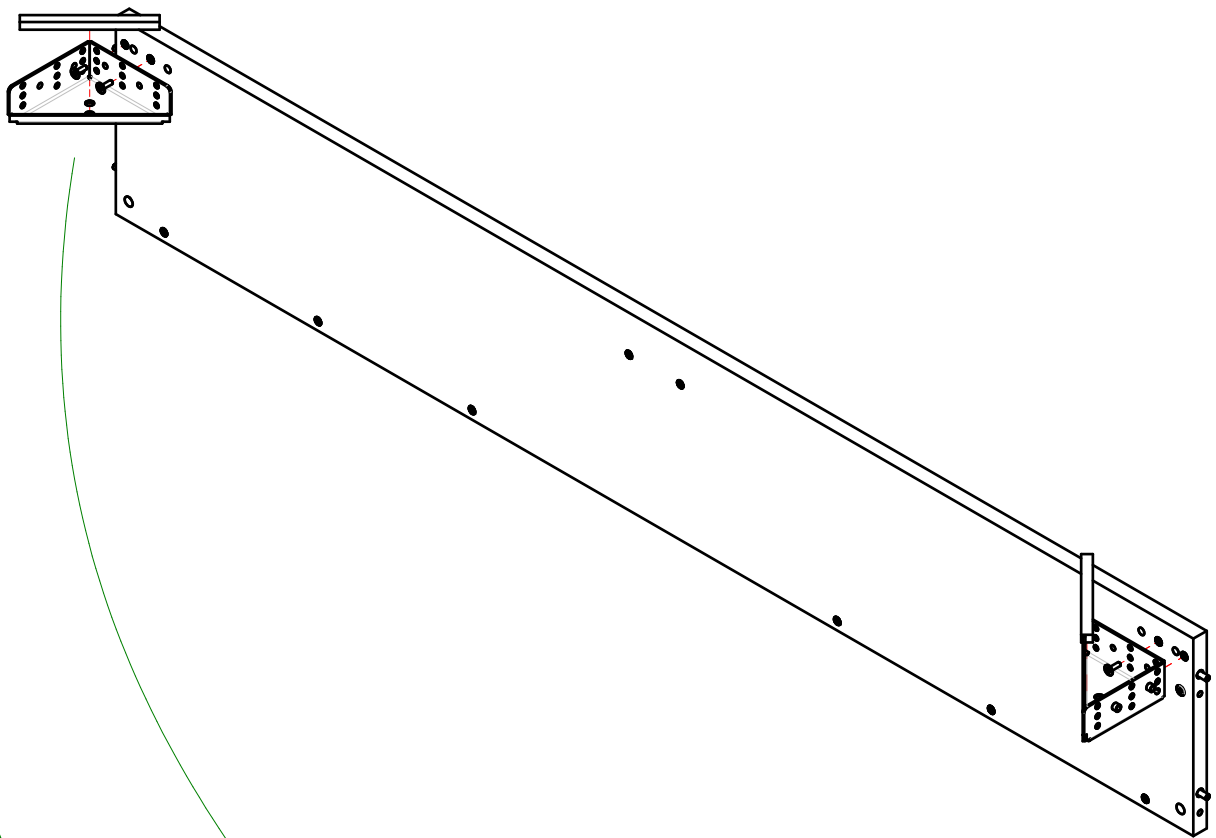



M

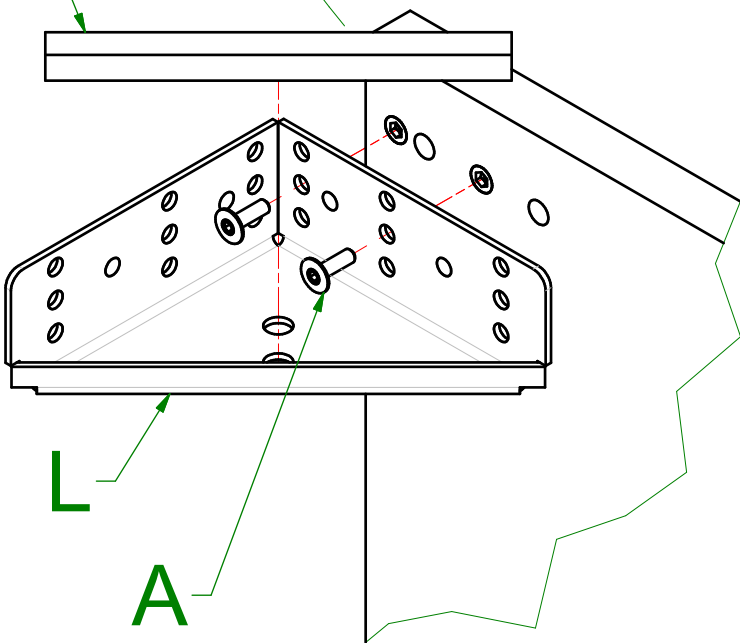


L

A

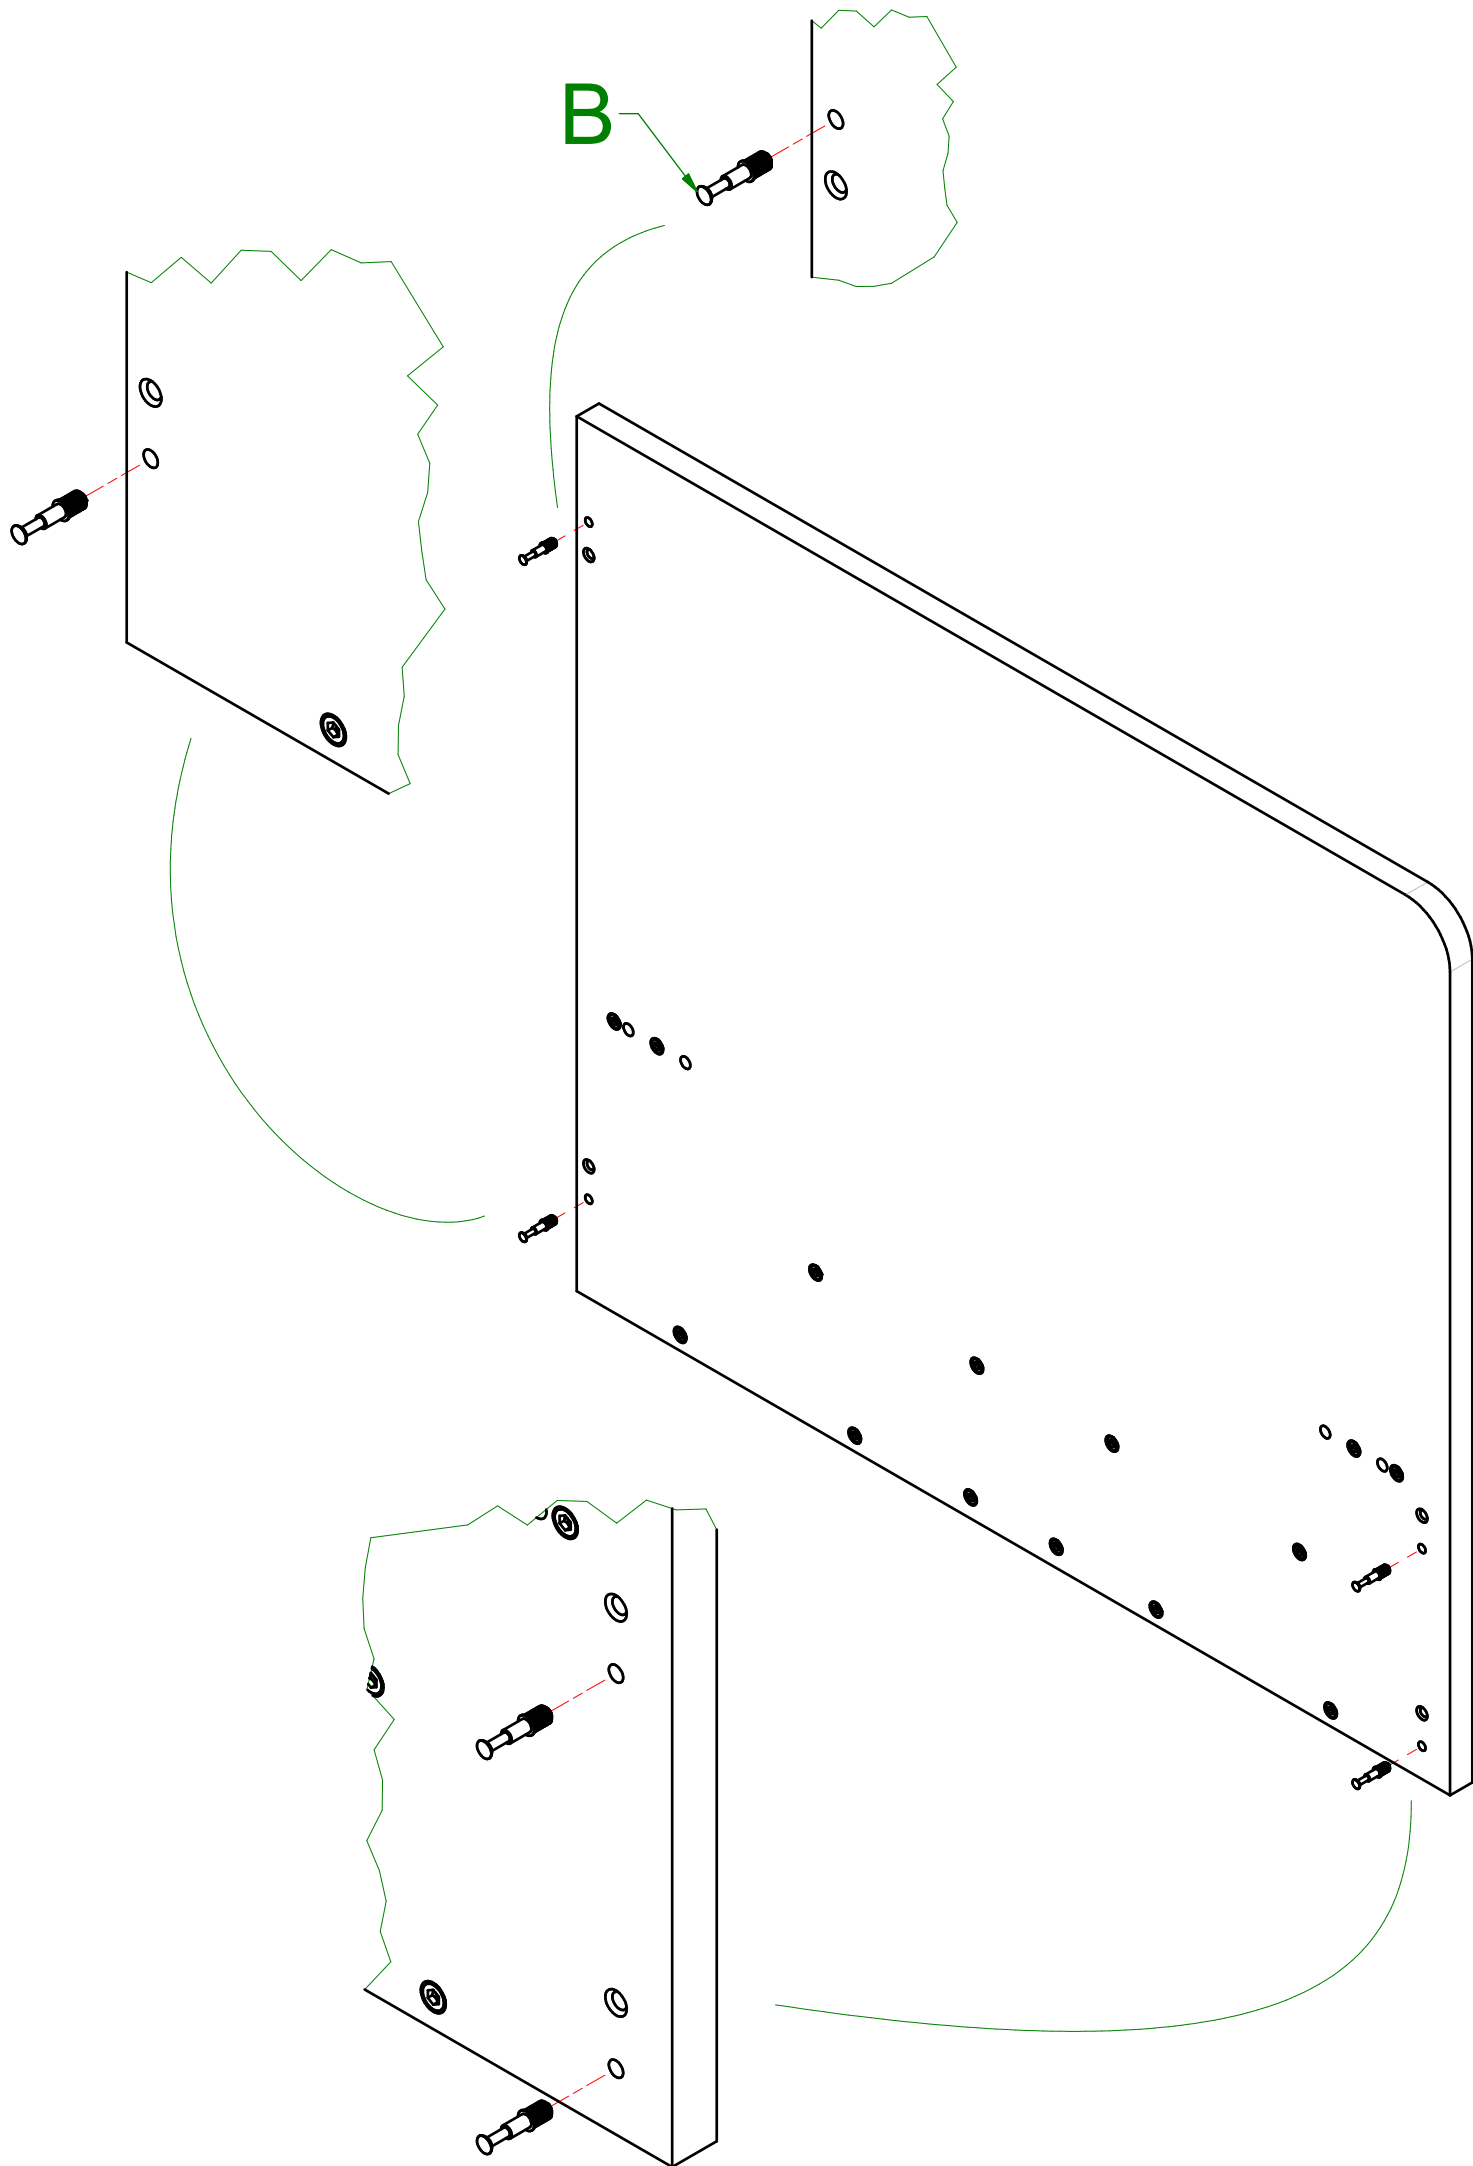


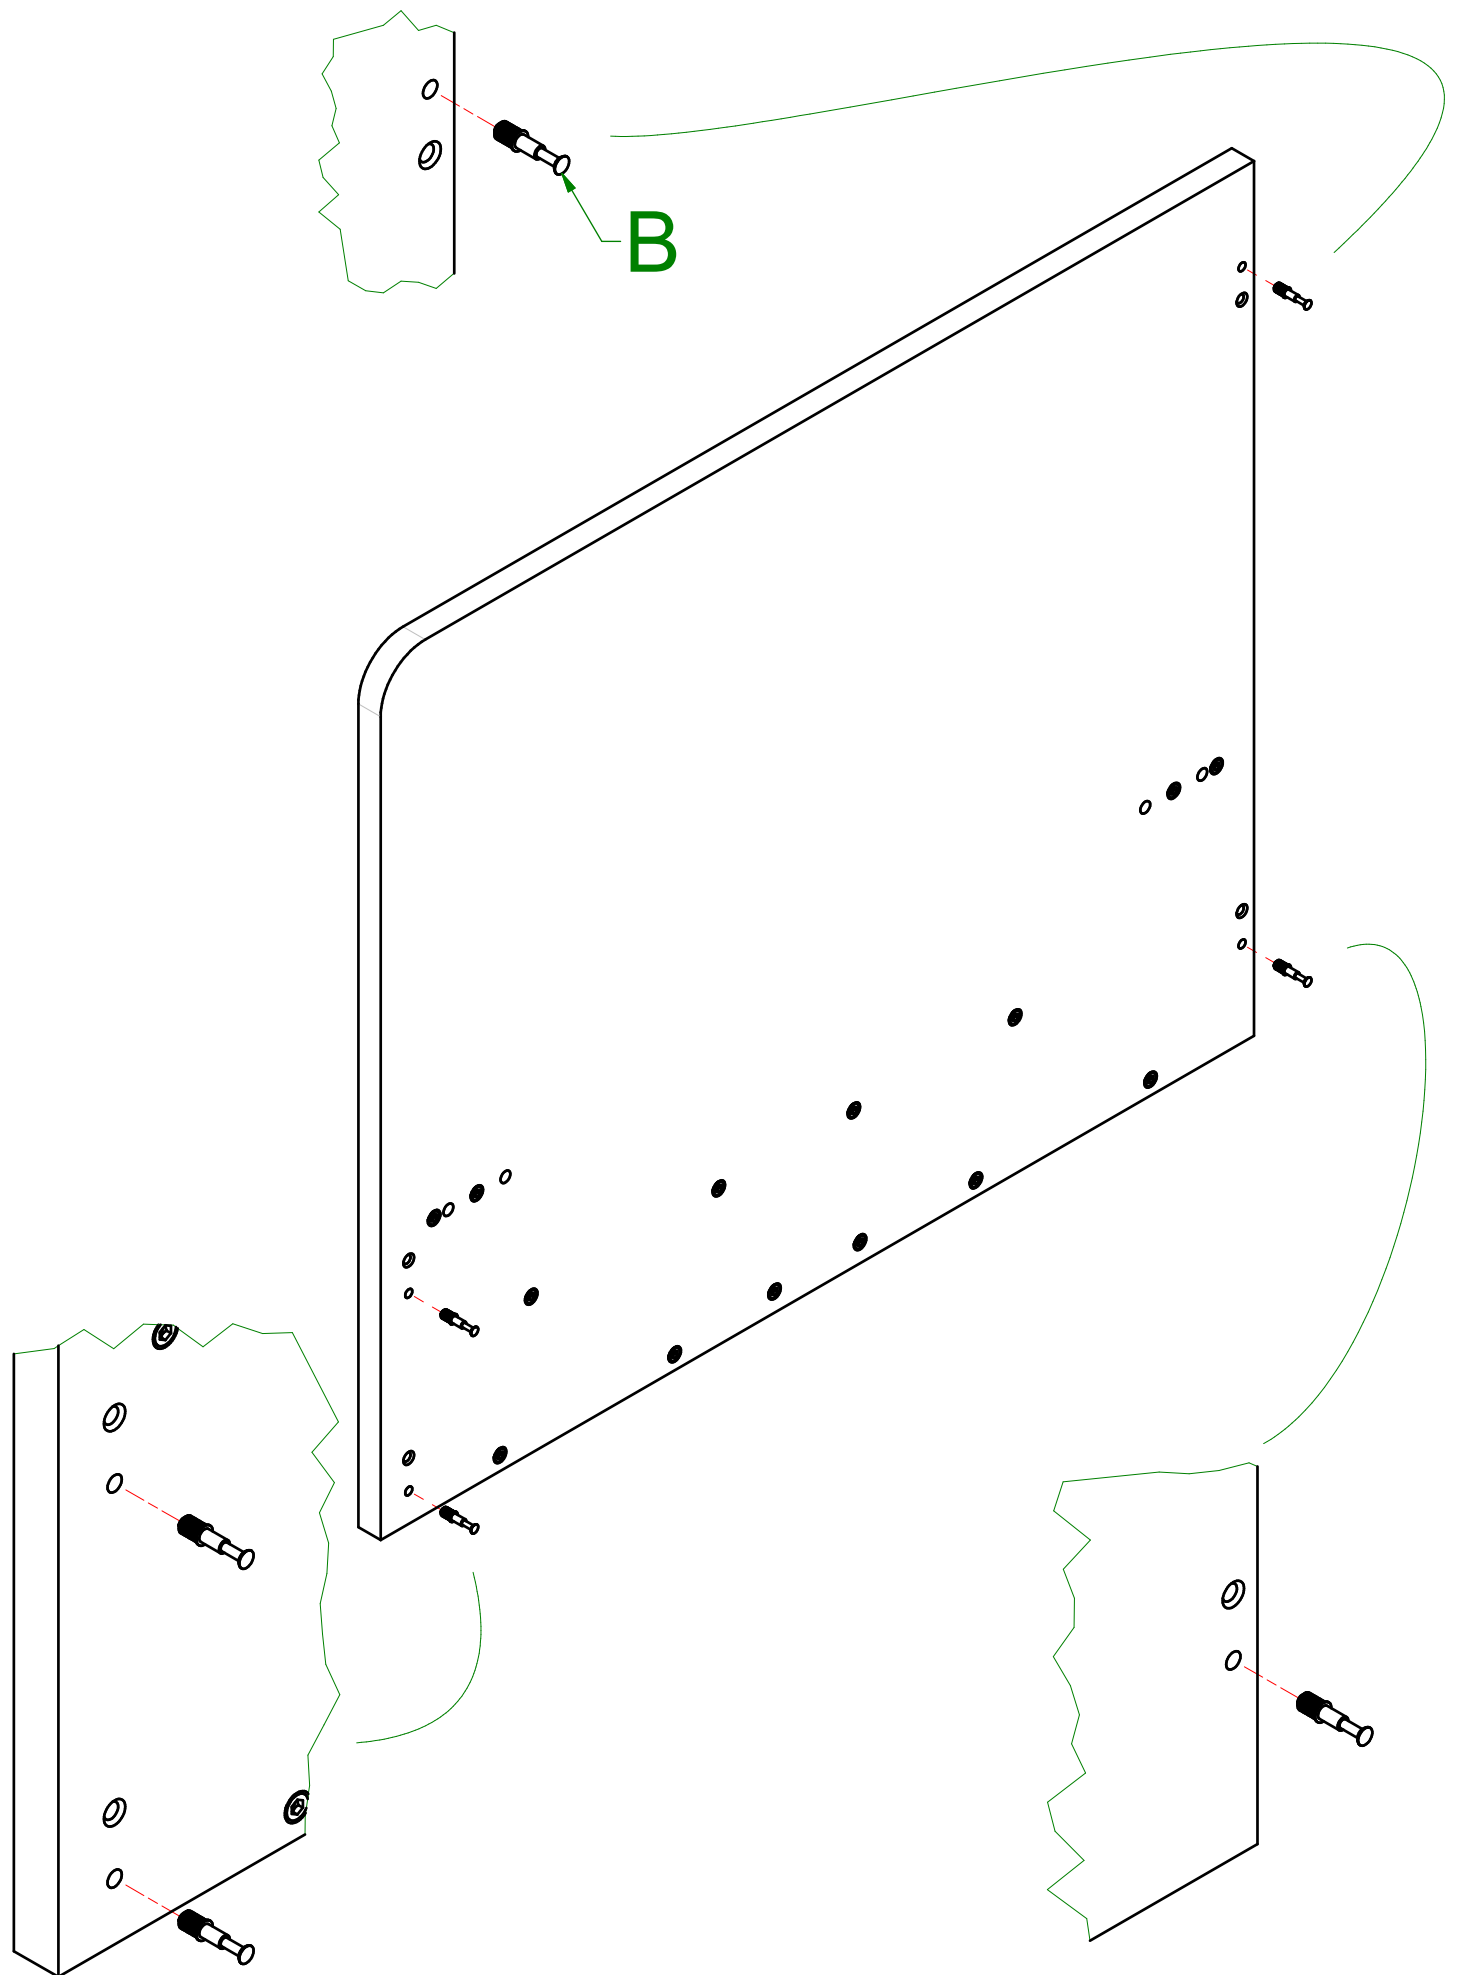



1

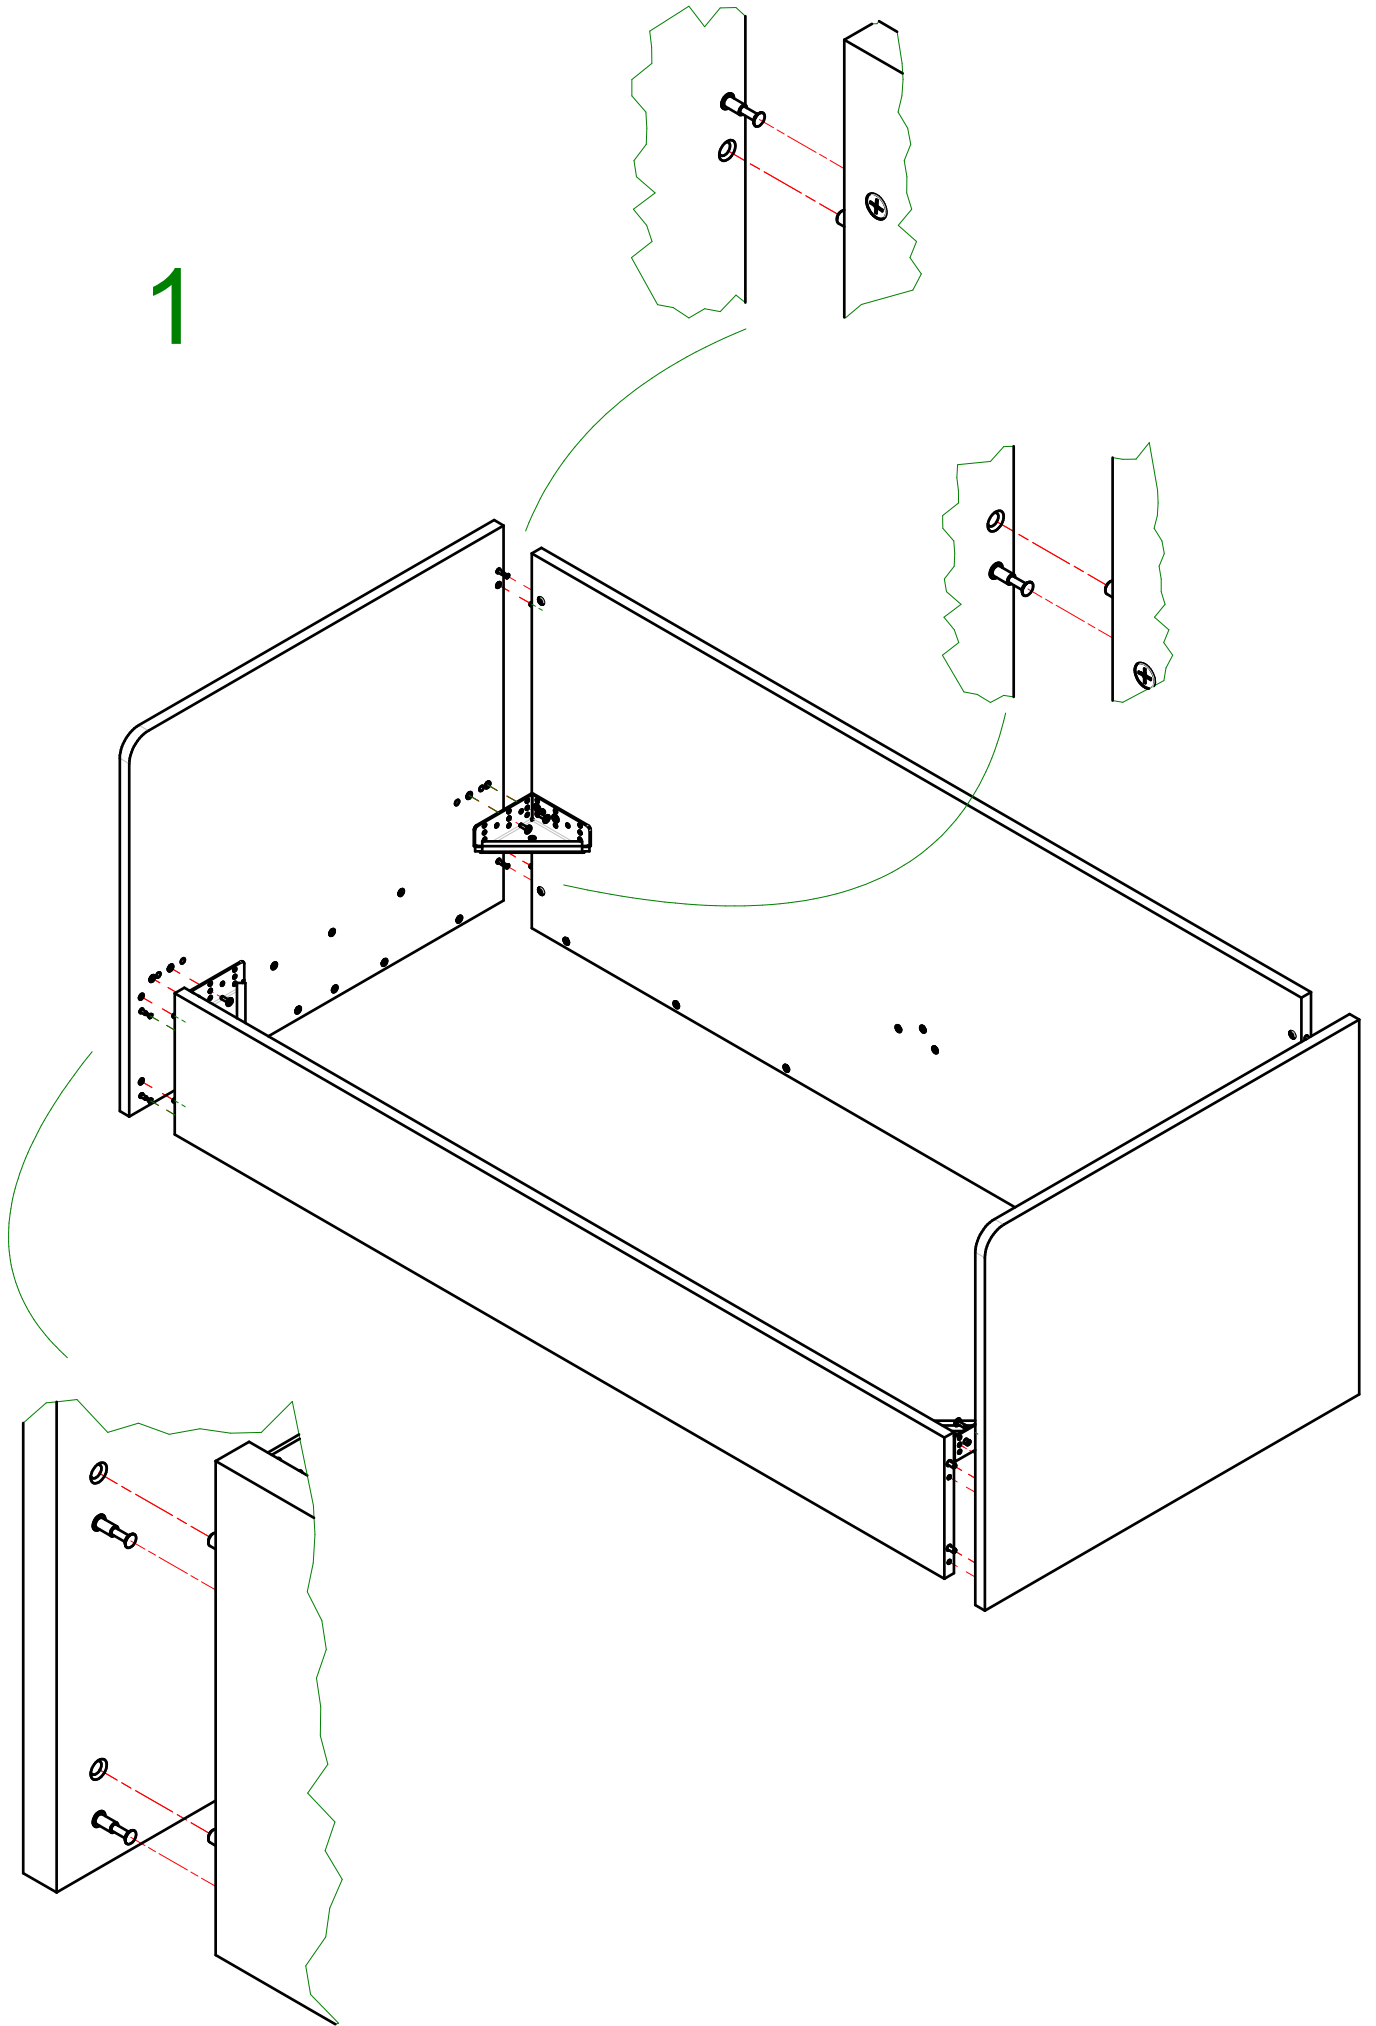

2

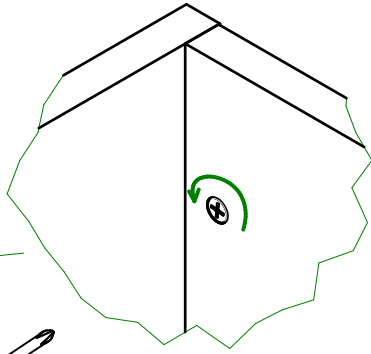


x8

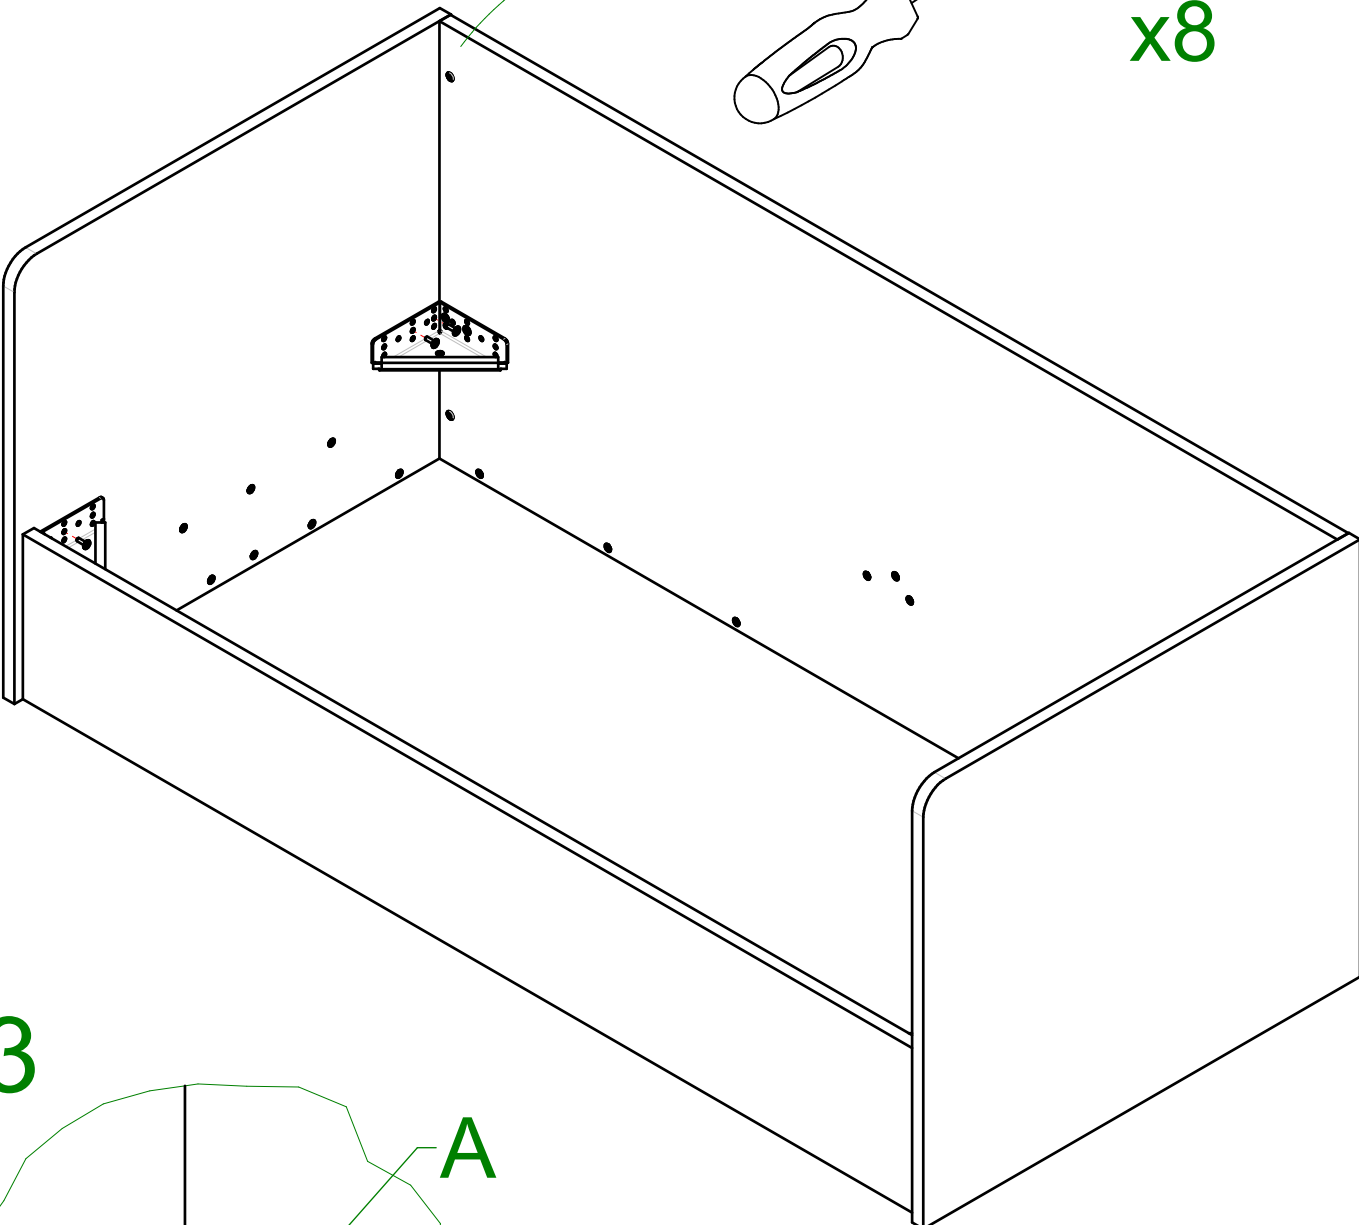
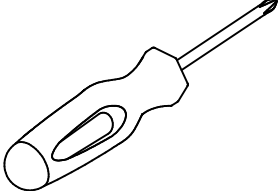



3


A


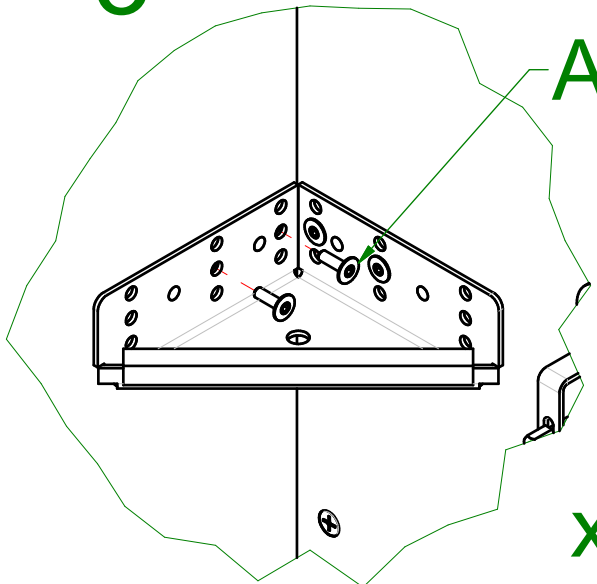


x4

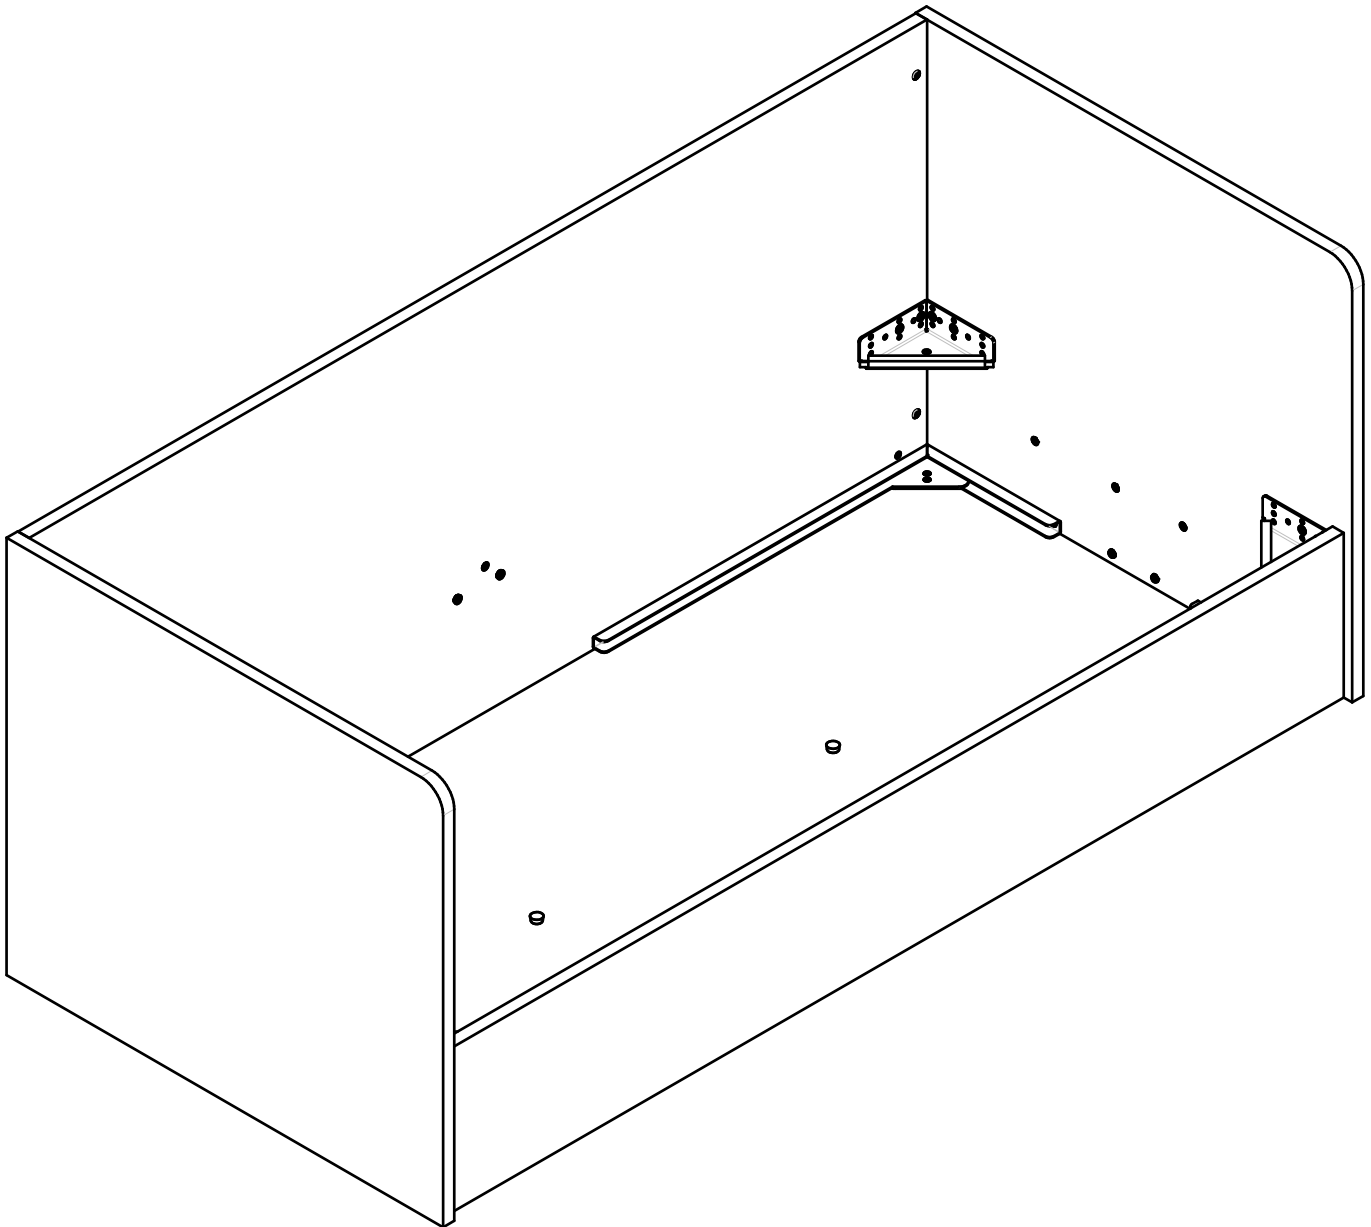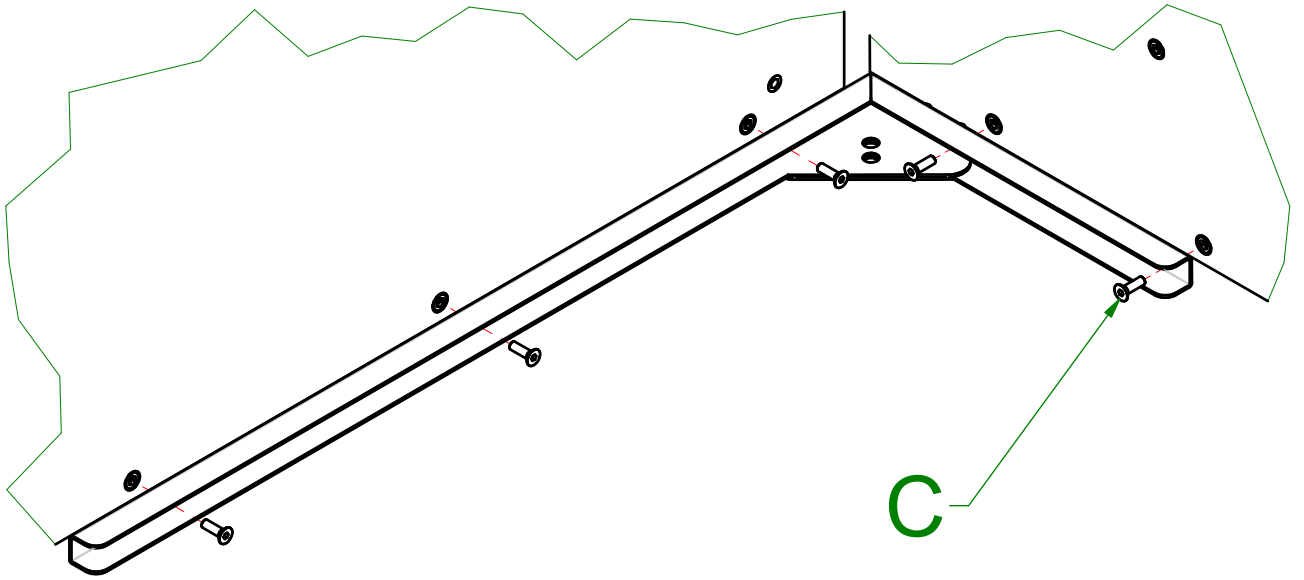


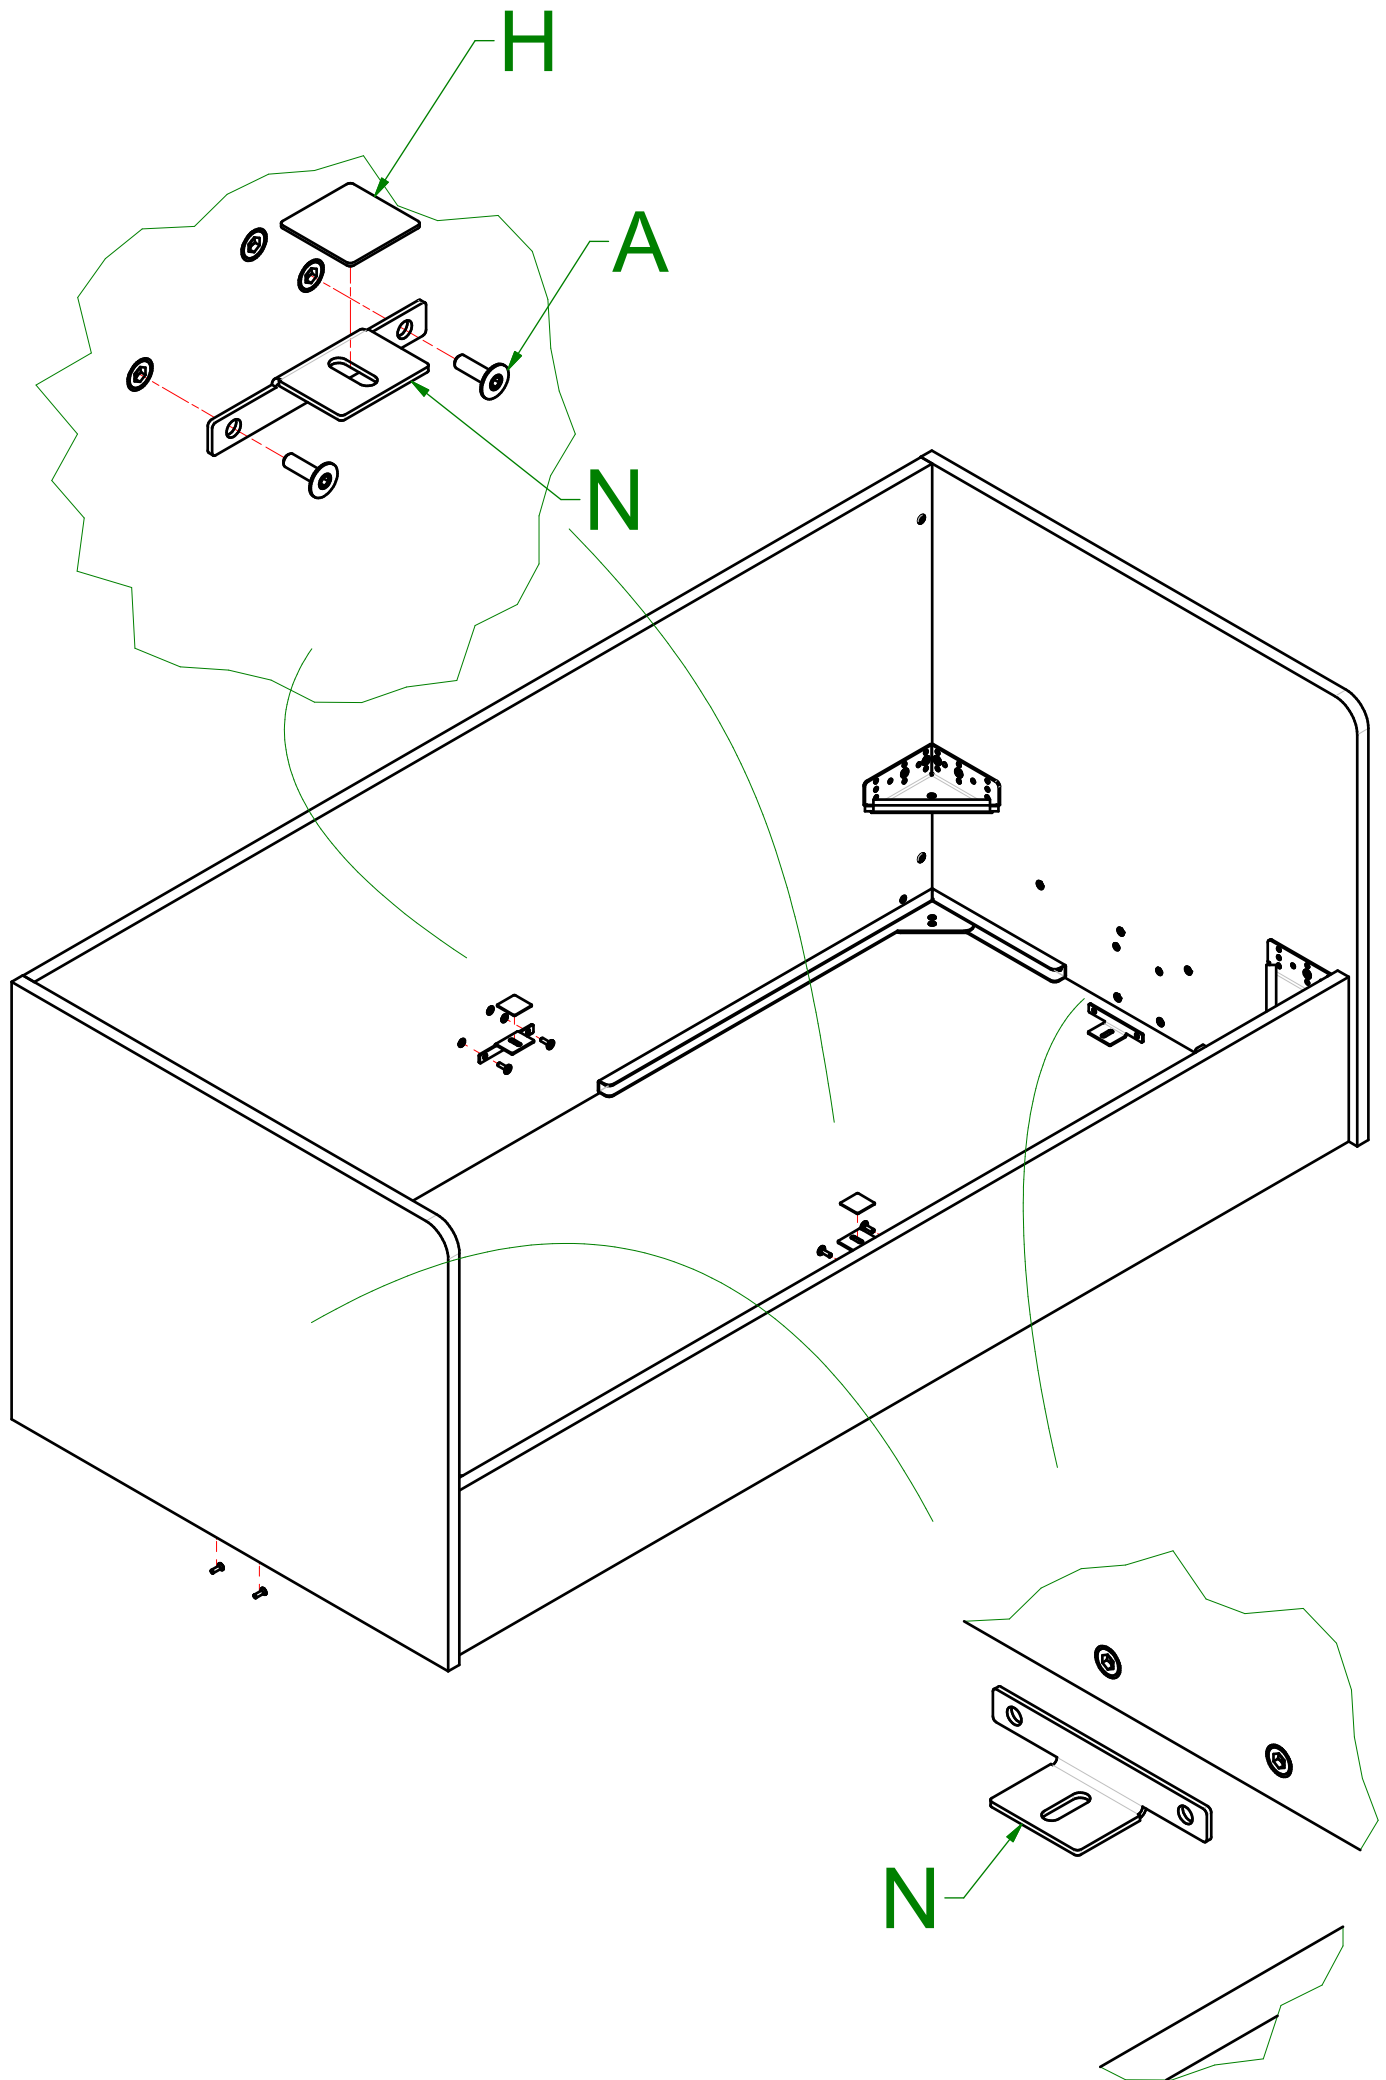

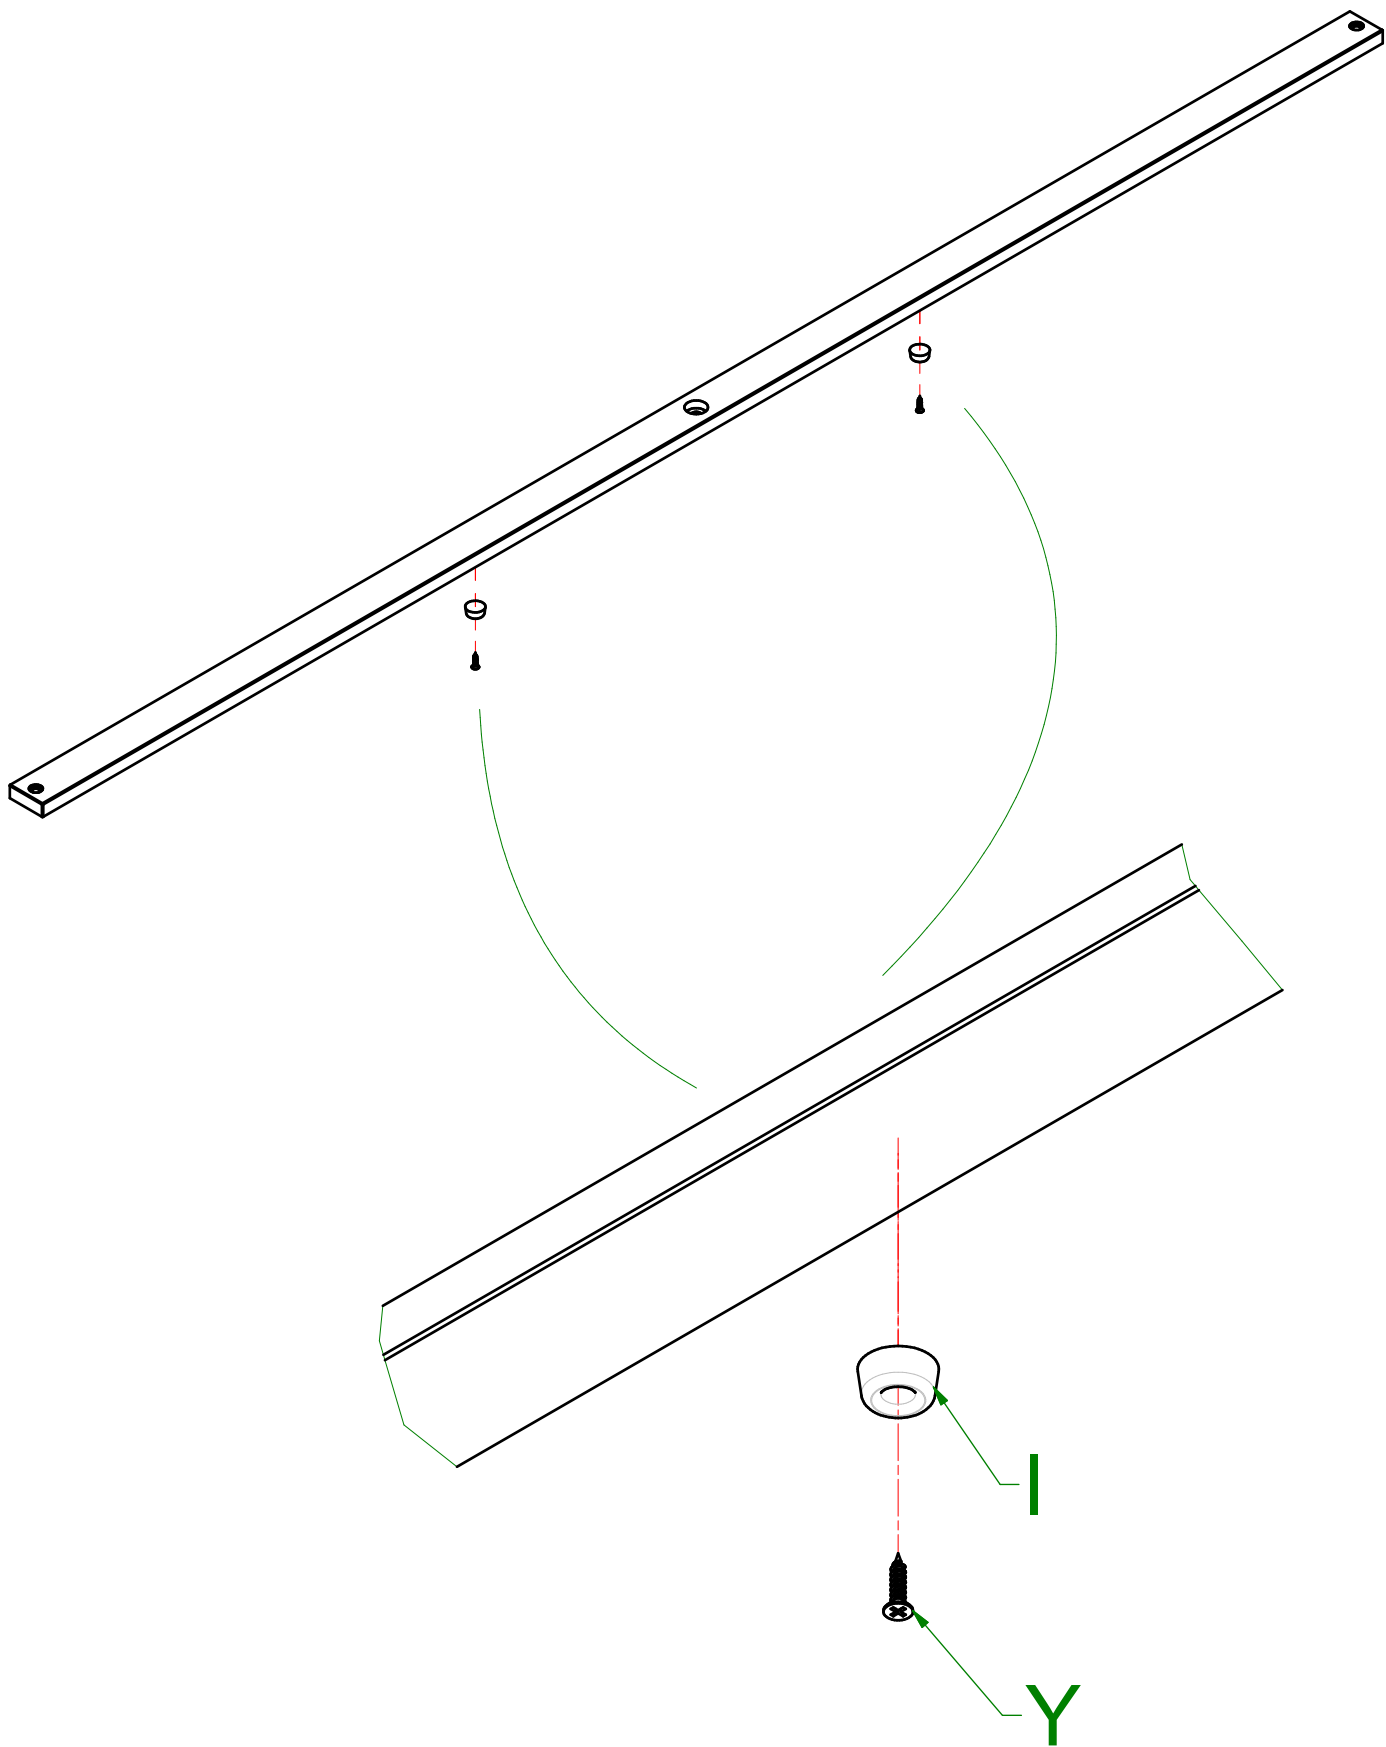


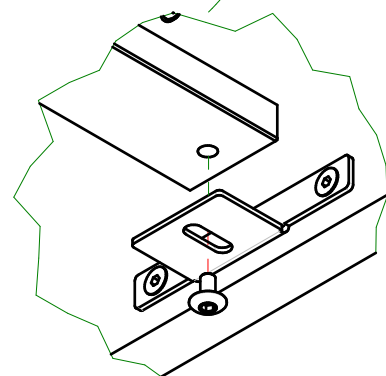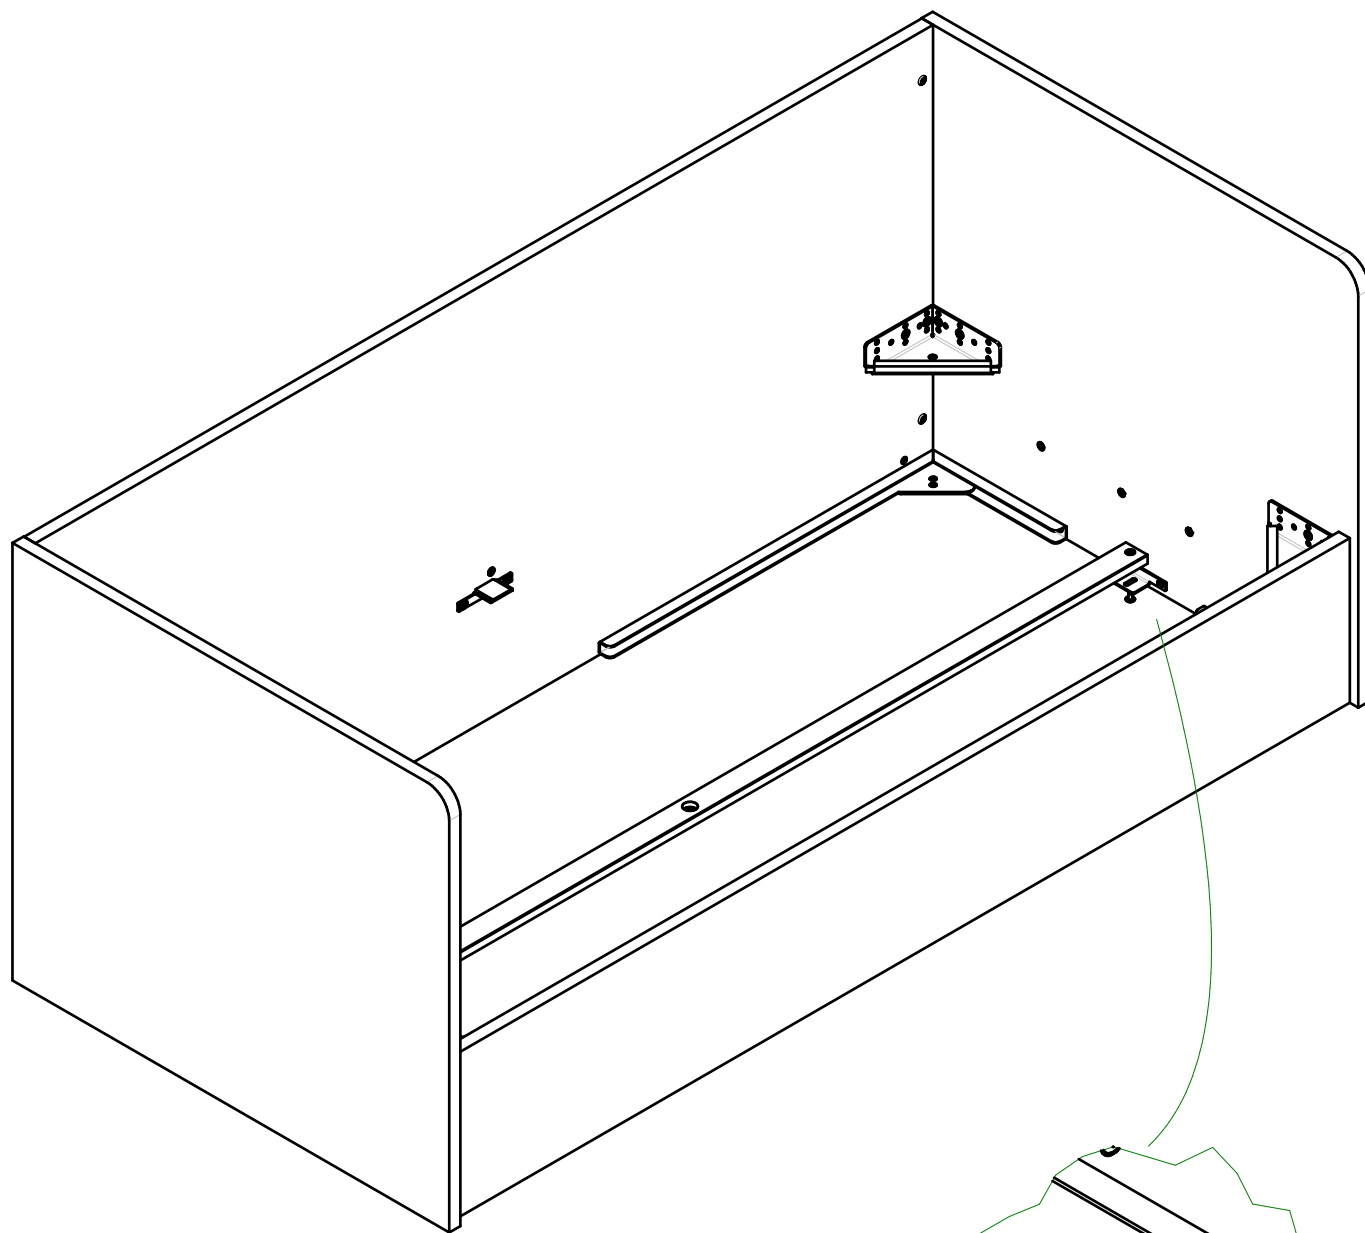

x2

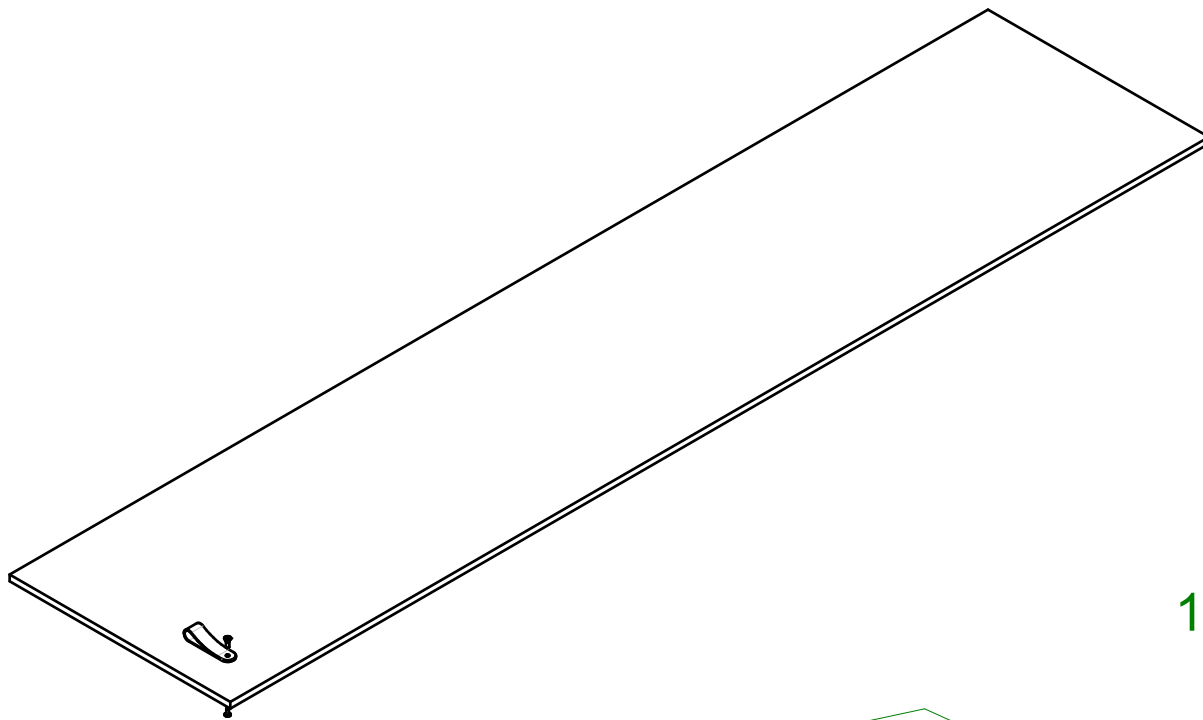


1

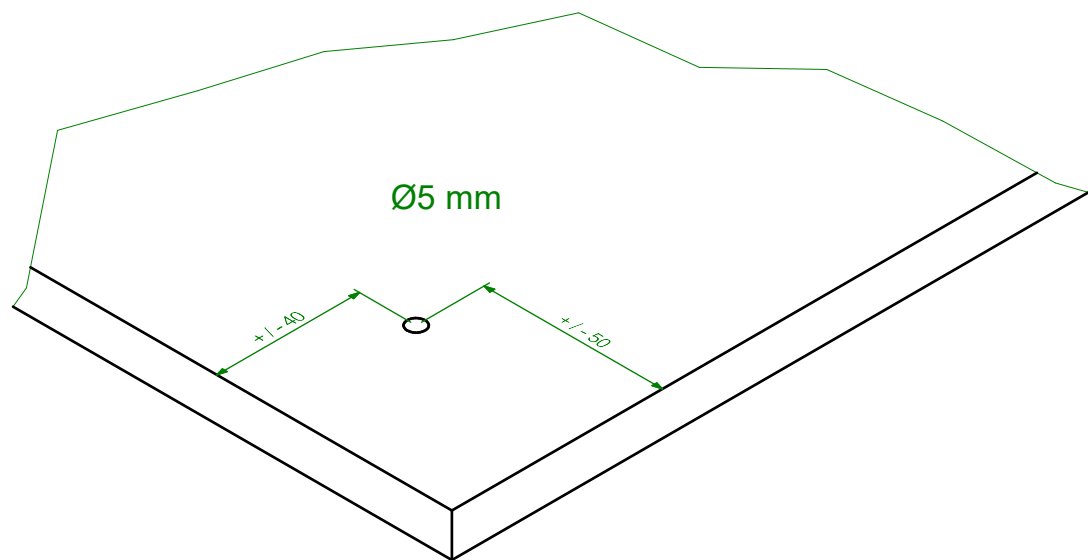

$\text{Ø}5 \text{ mm}$

$+/-40$

$+/-50$


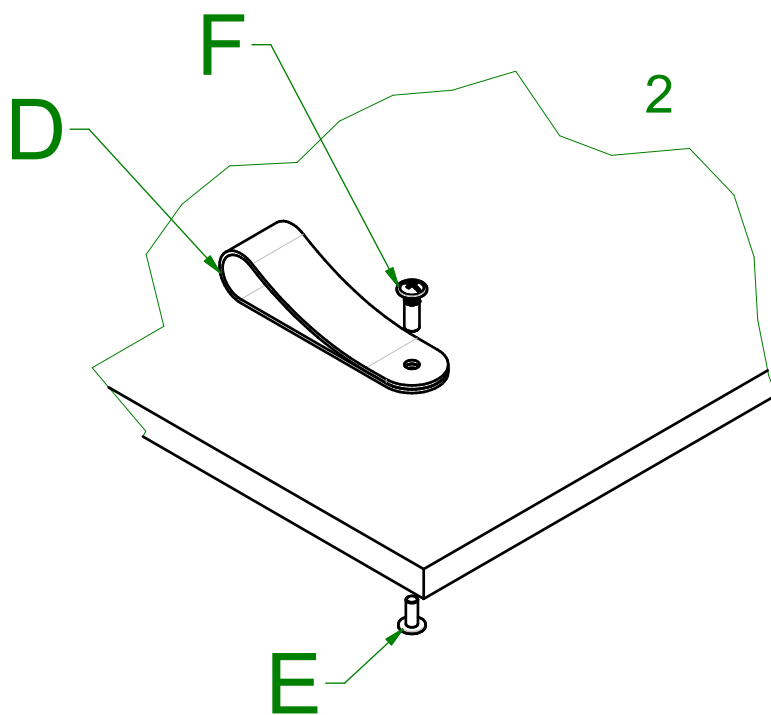



2

D

F

E

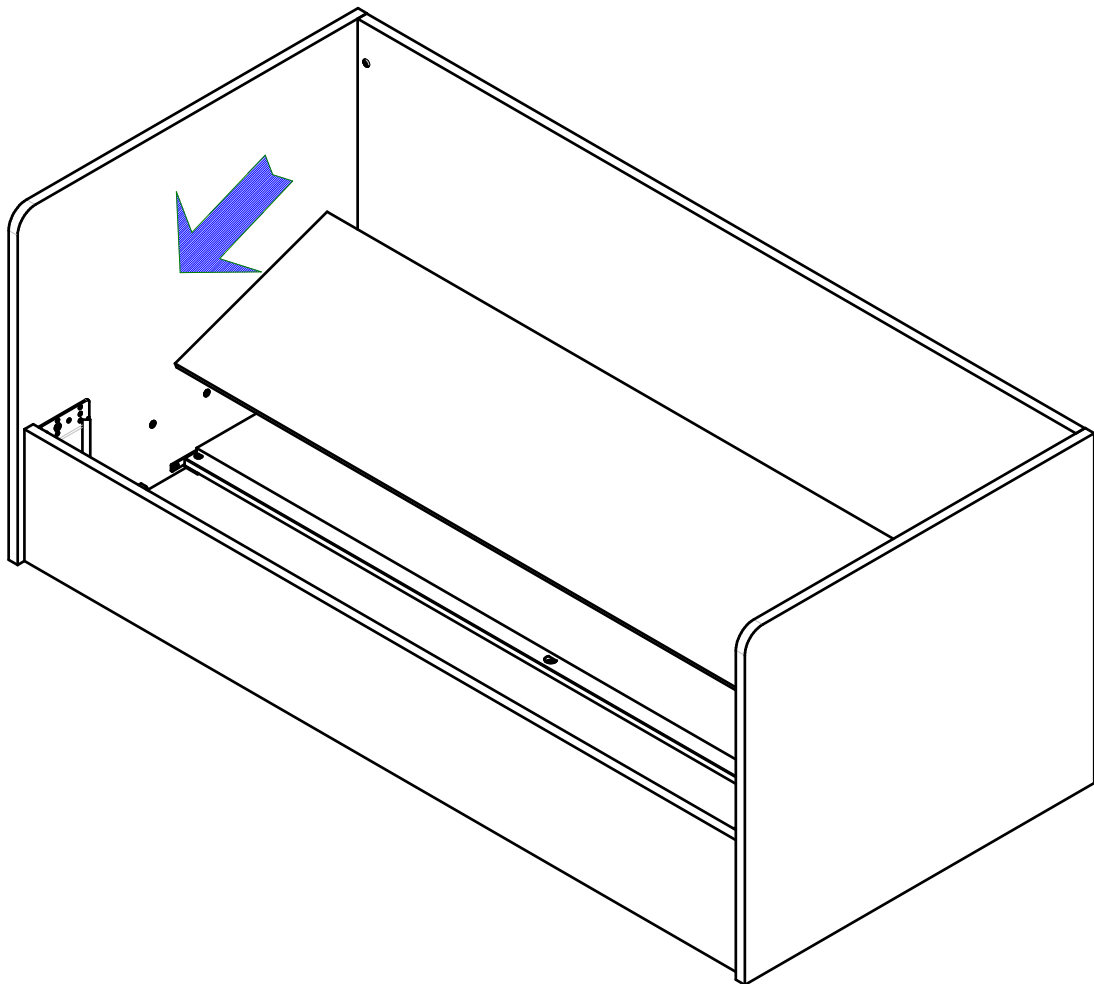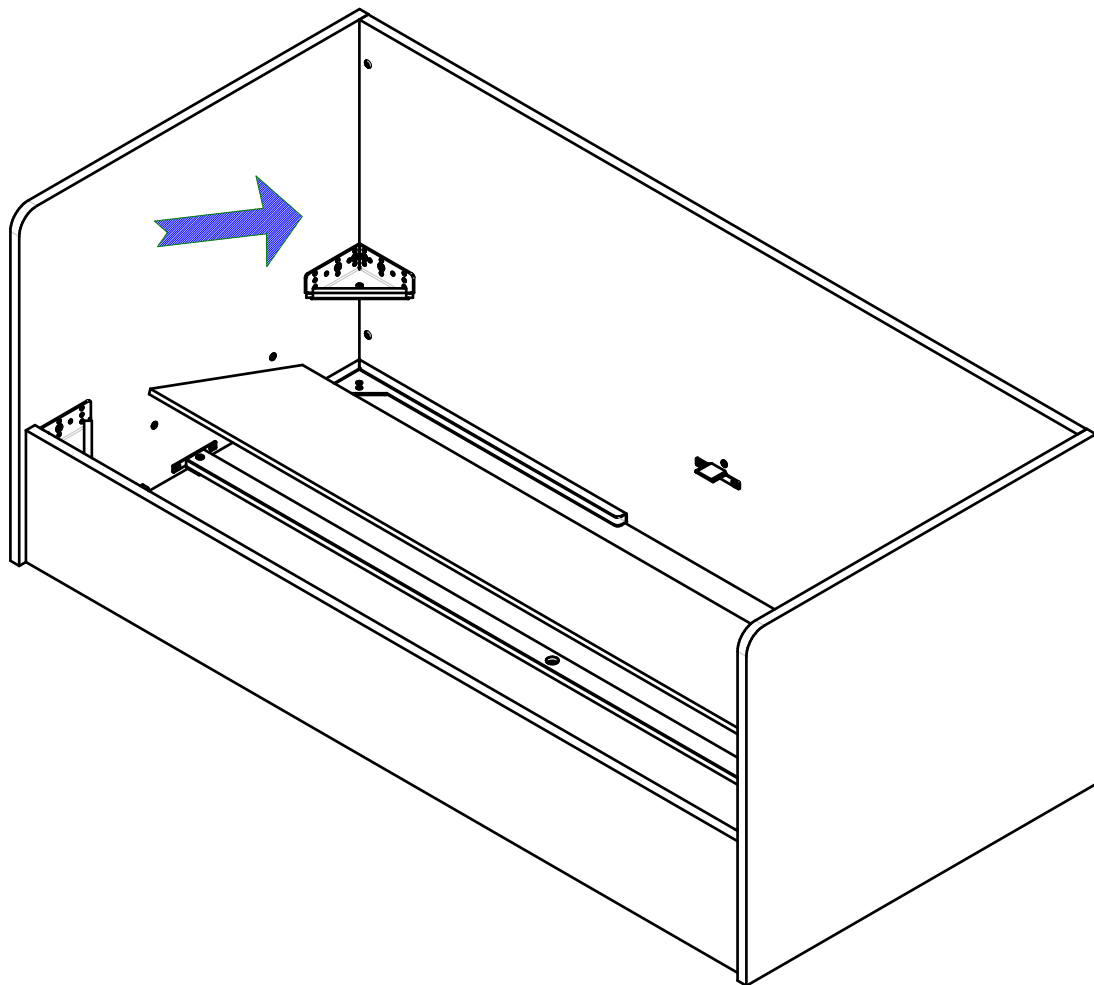

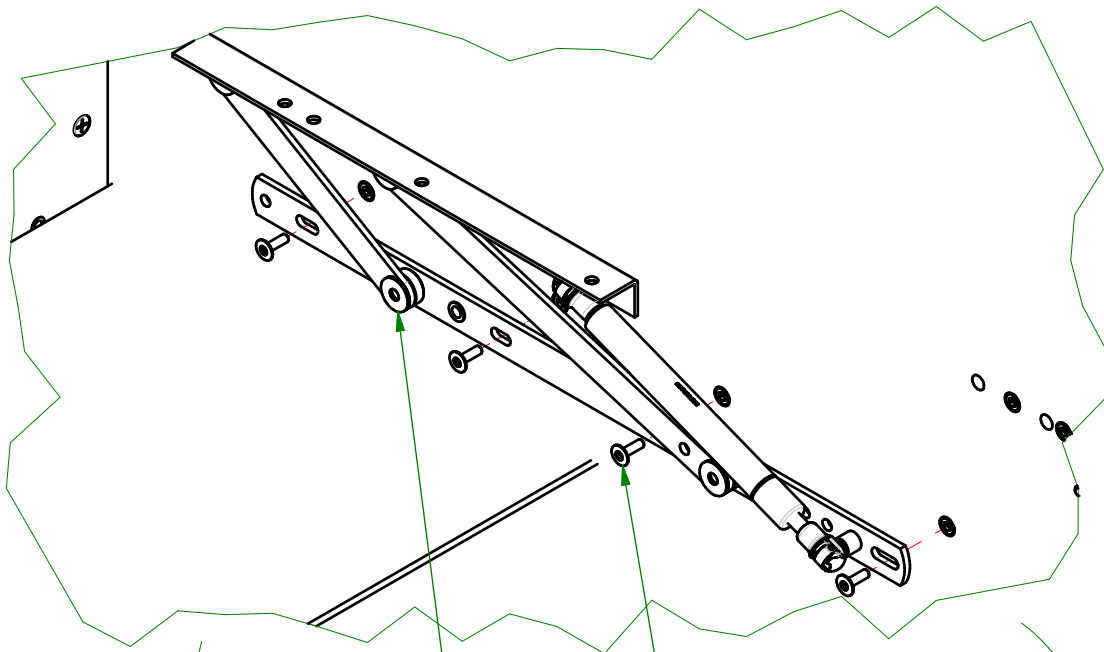

R W

