

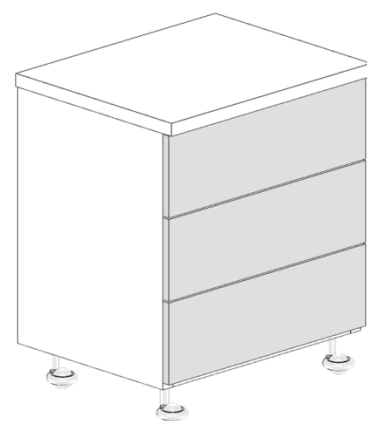
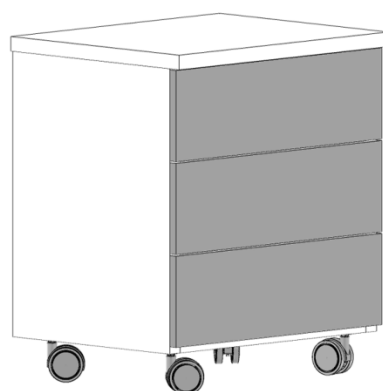
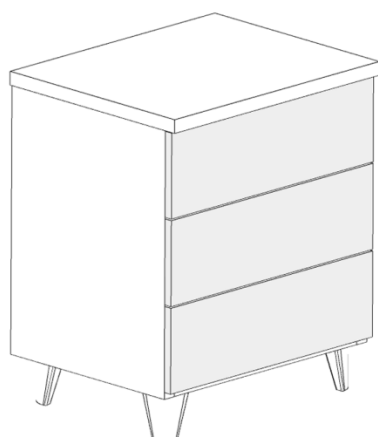
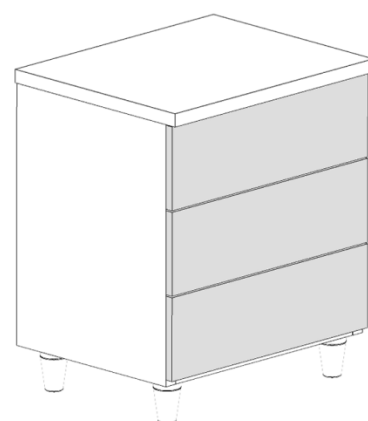



## Schemi montaggio *Assembling diagrams*

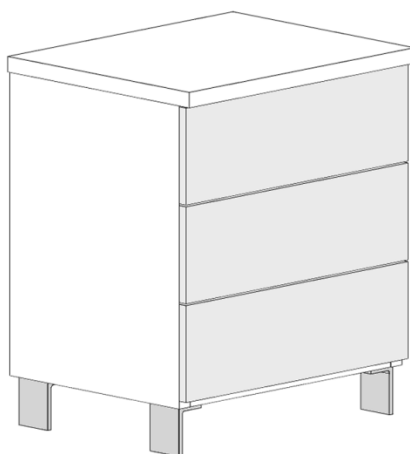


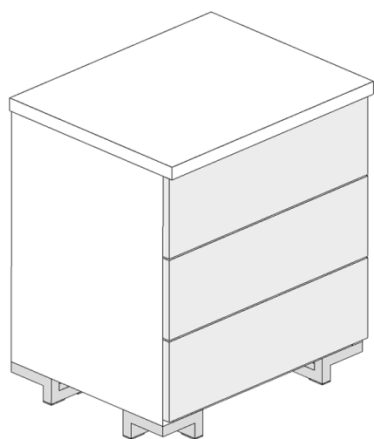



**SUPPORTI COMPLEMENTI**


ed. 02/2016 - ver. 1

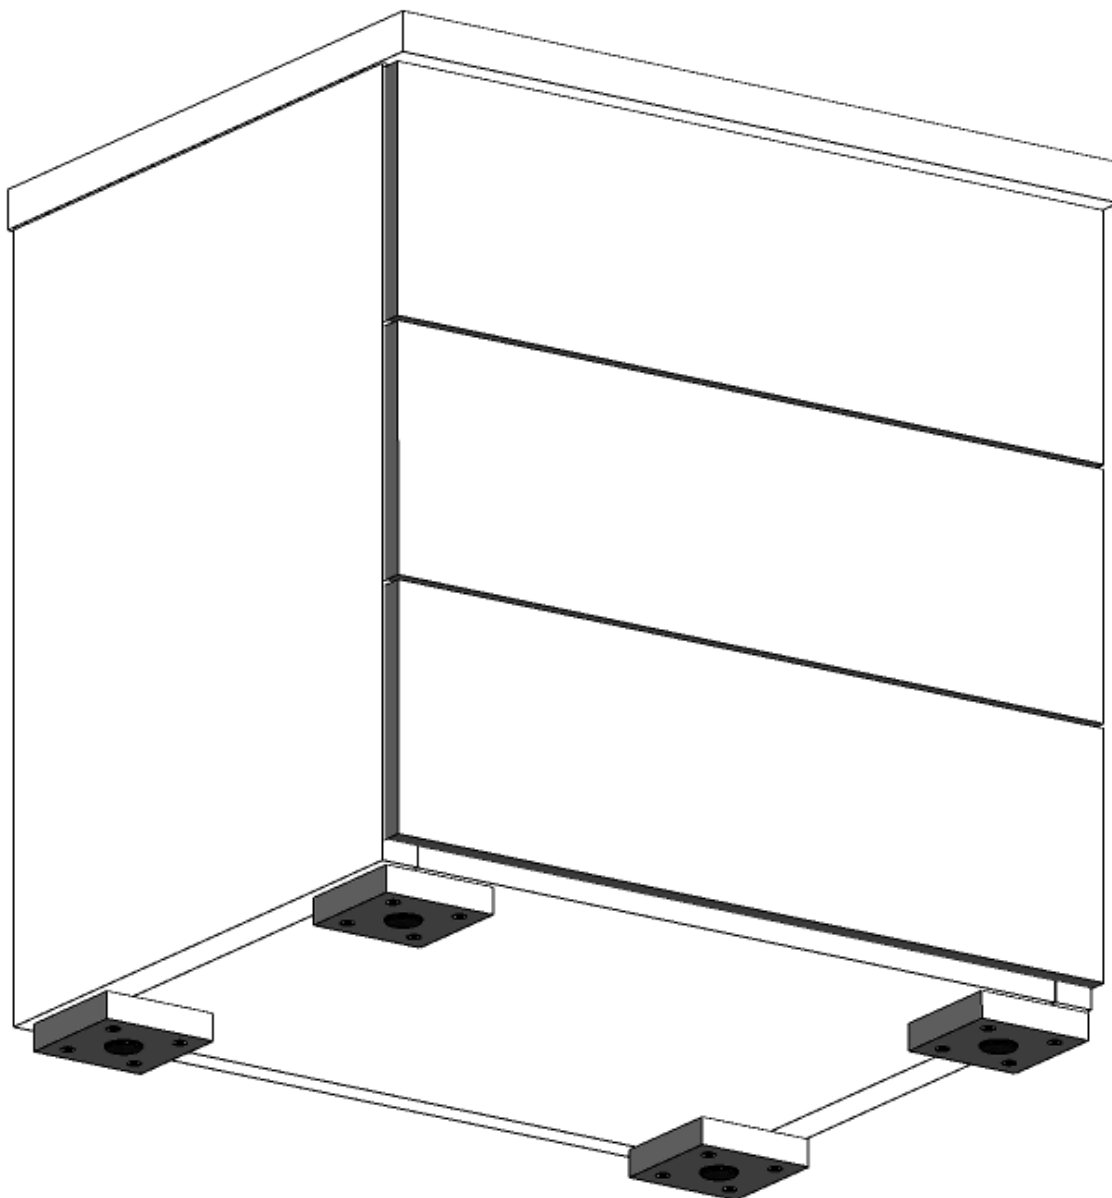
SCMNT006








### Sac. Fr. Piedini Base

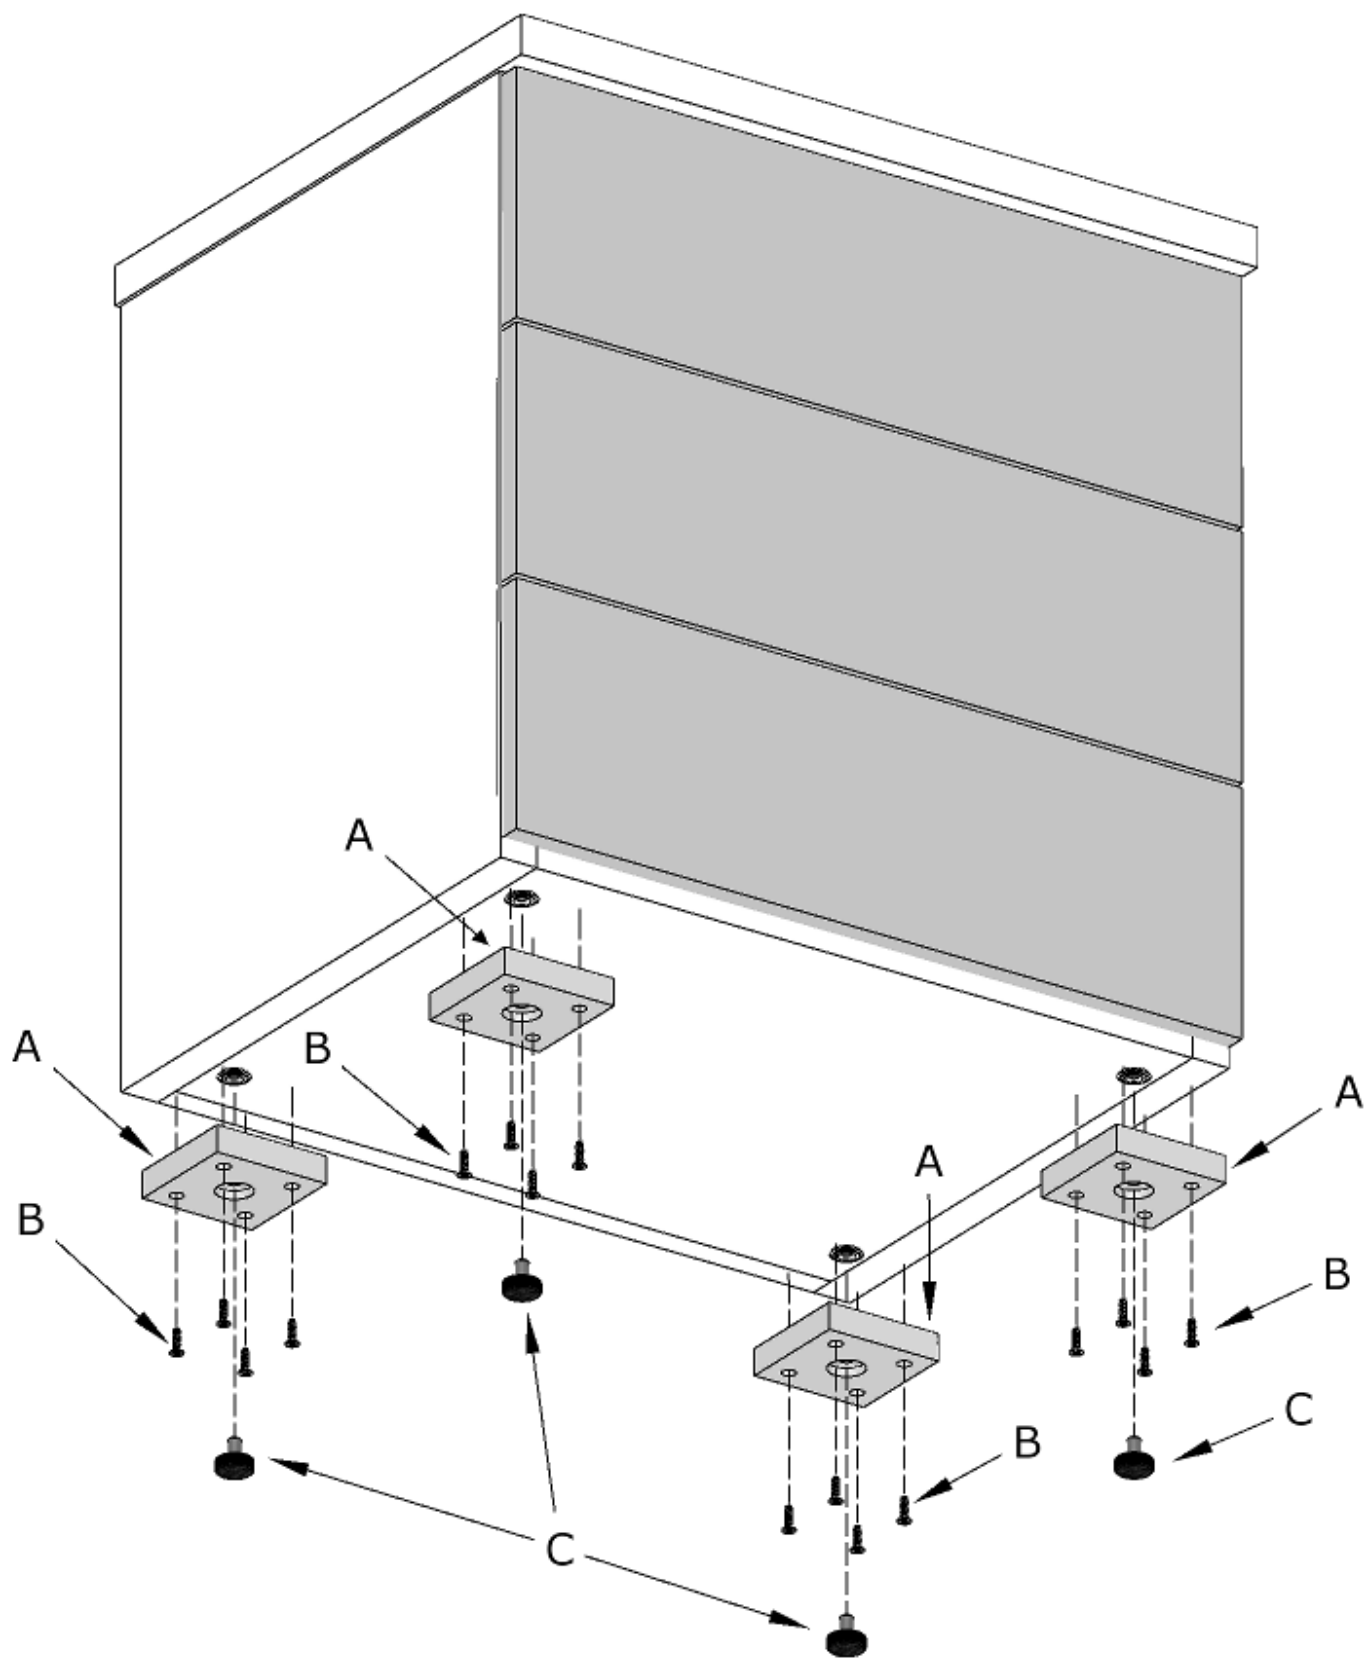
200002007	A		<b>n°4</b>	
200000950	B		<b>n°16</b>	
200002008	C		<b>n°4</b>	

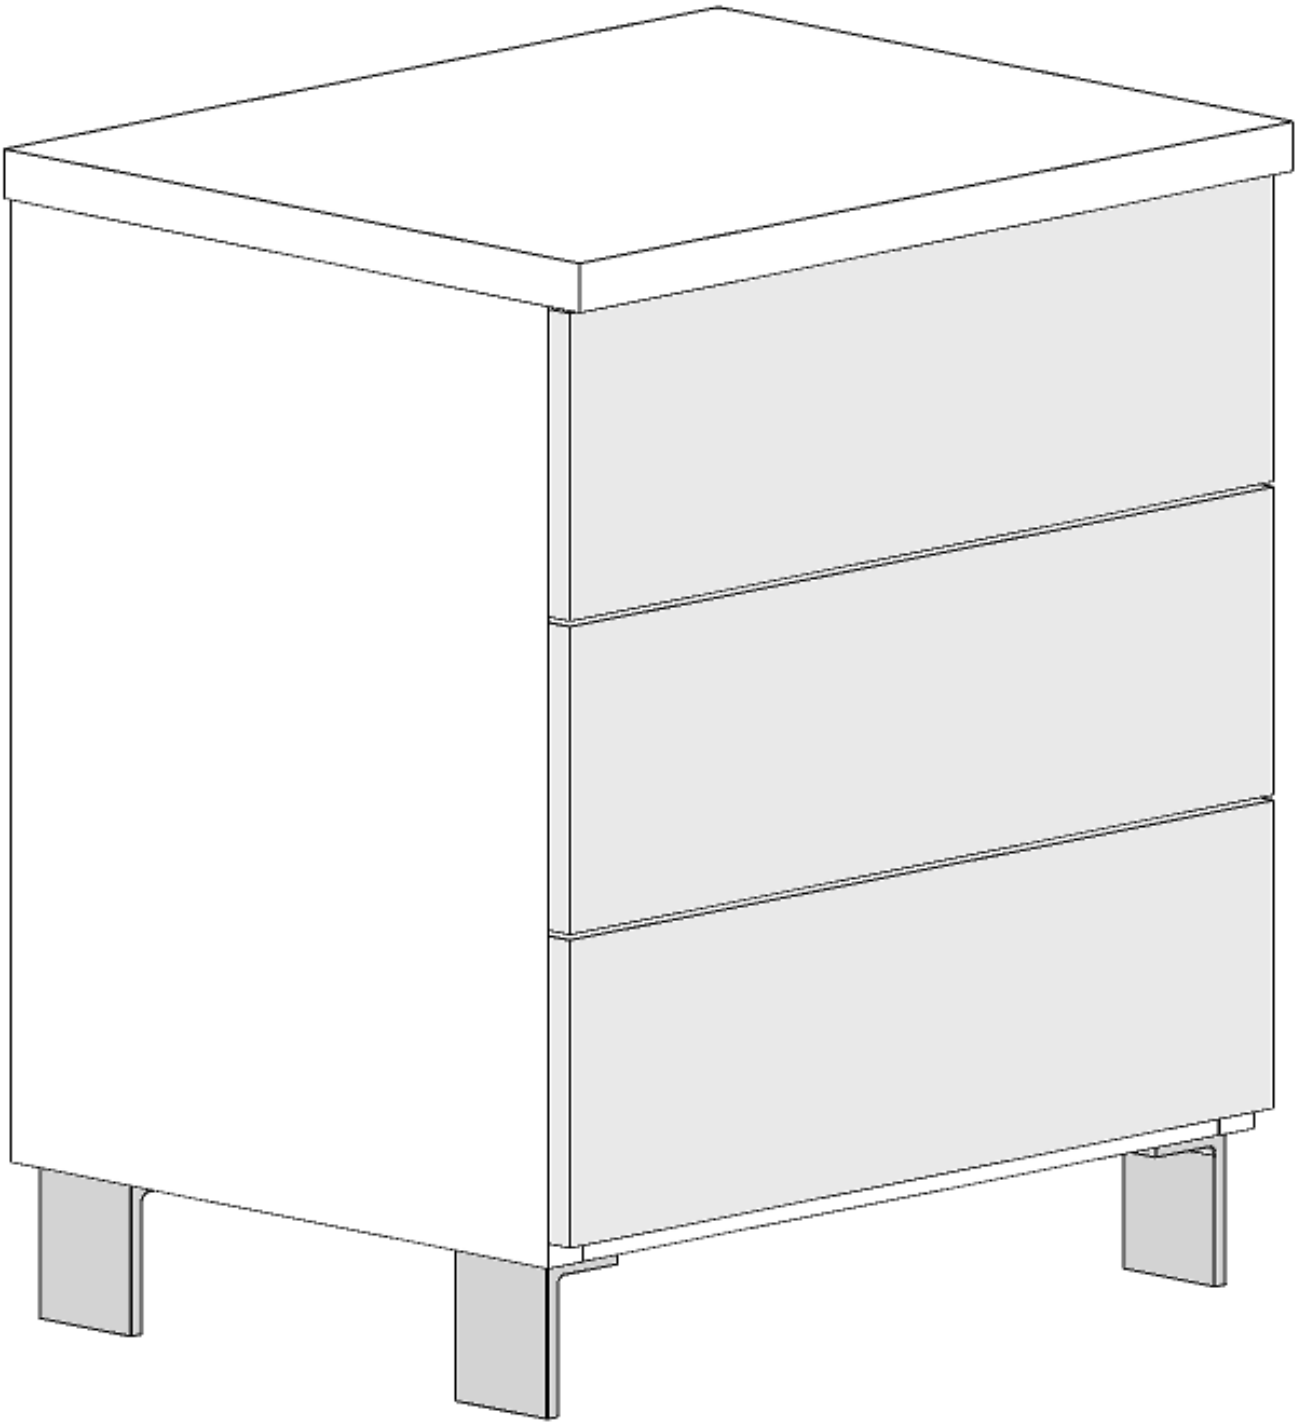
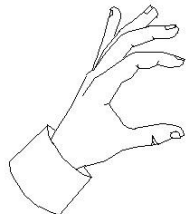




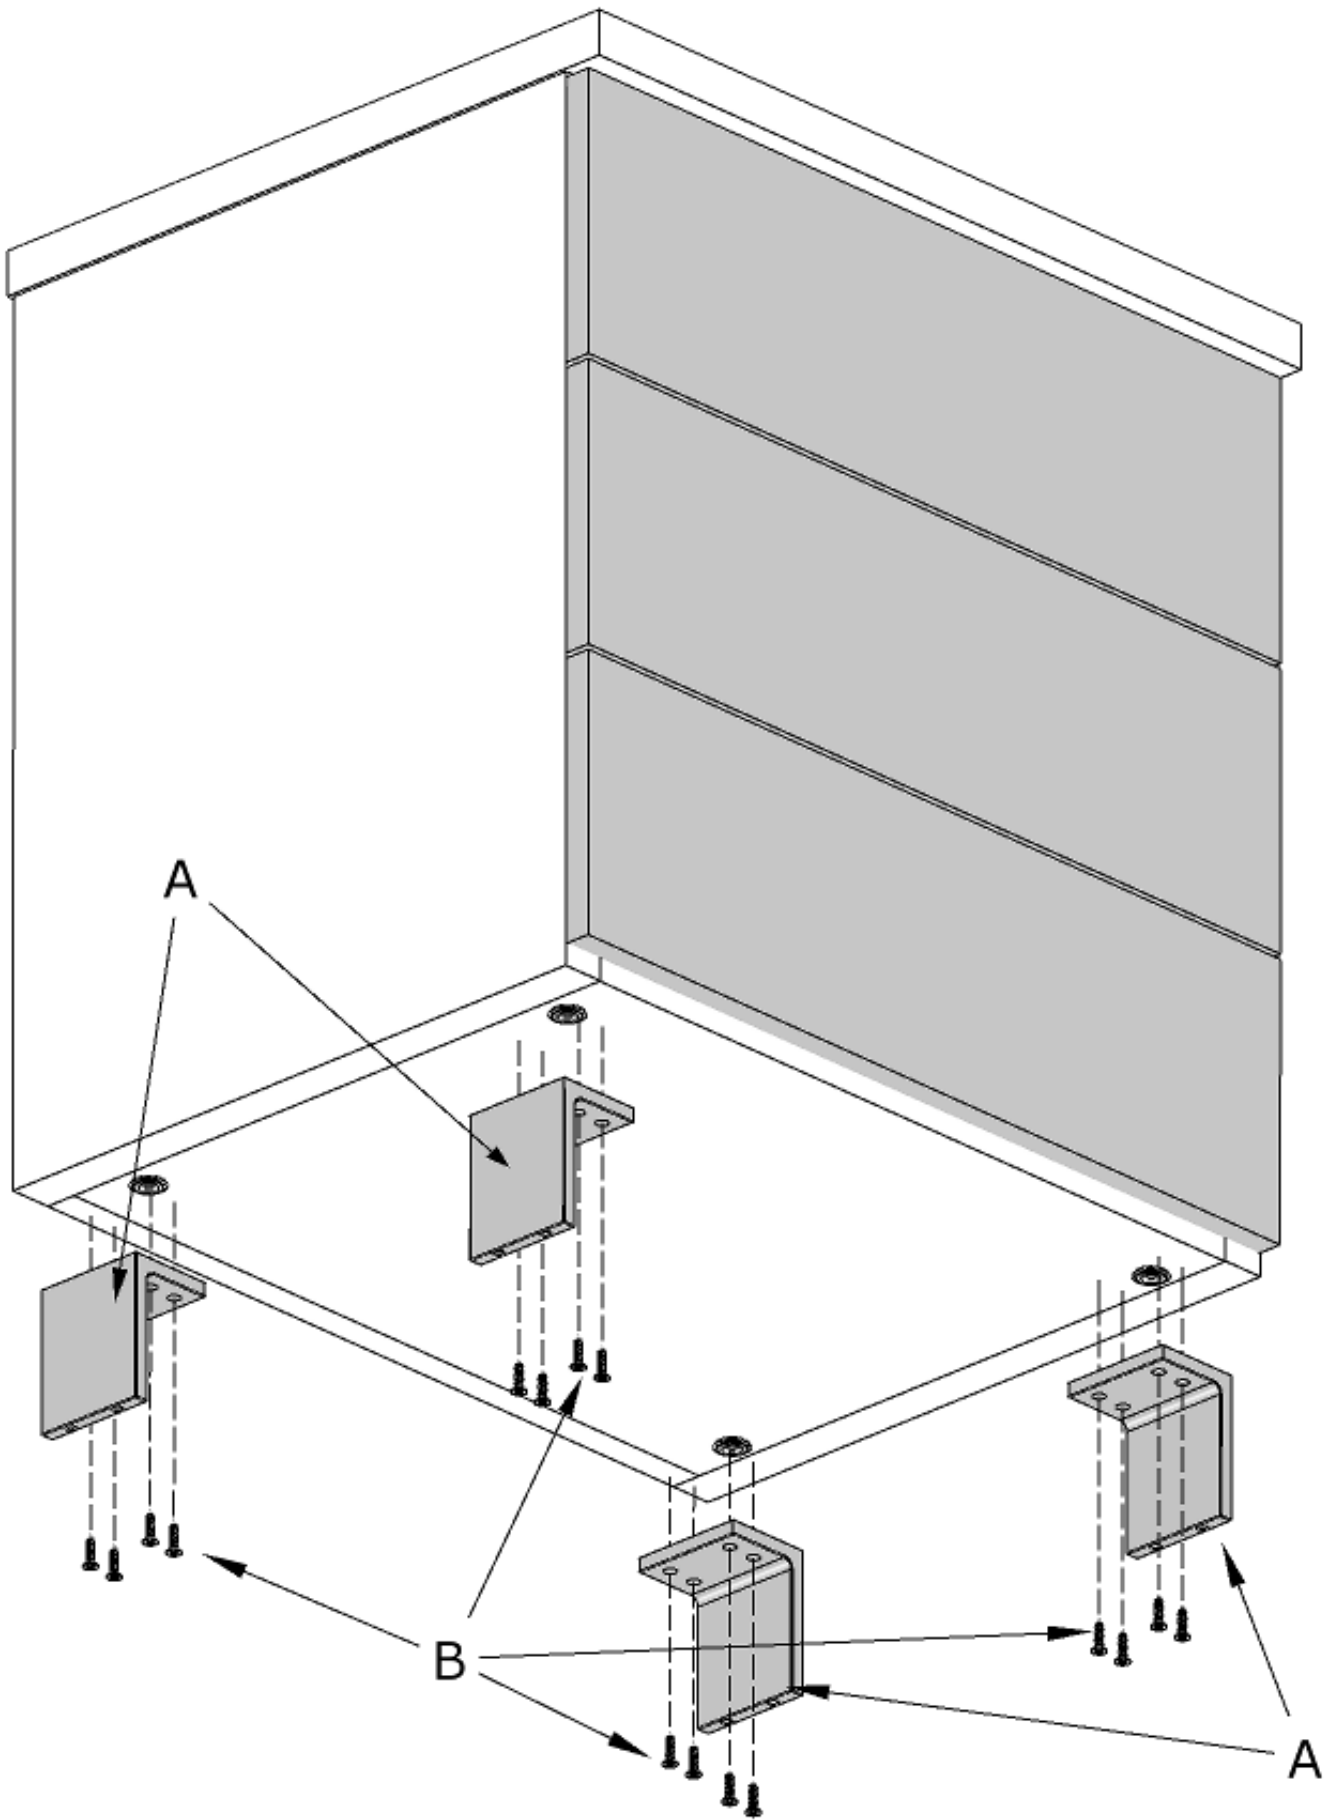



<b>Sac. Fr. Piedini Club</b>				
200002006	A		<b>n°4</b>	
200000950	B		<b>n°16</b>	

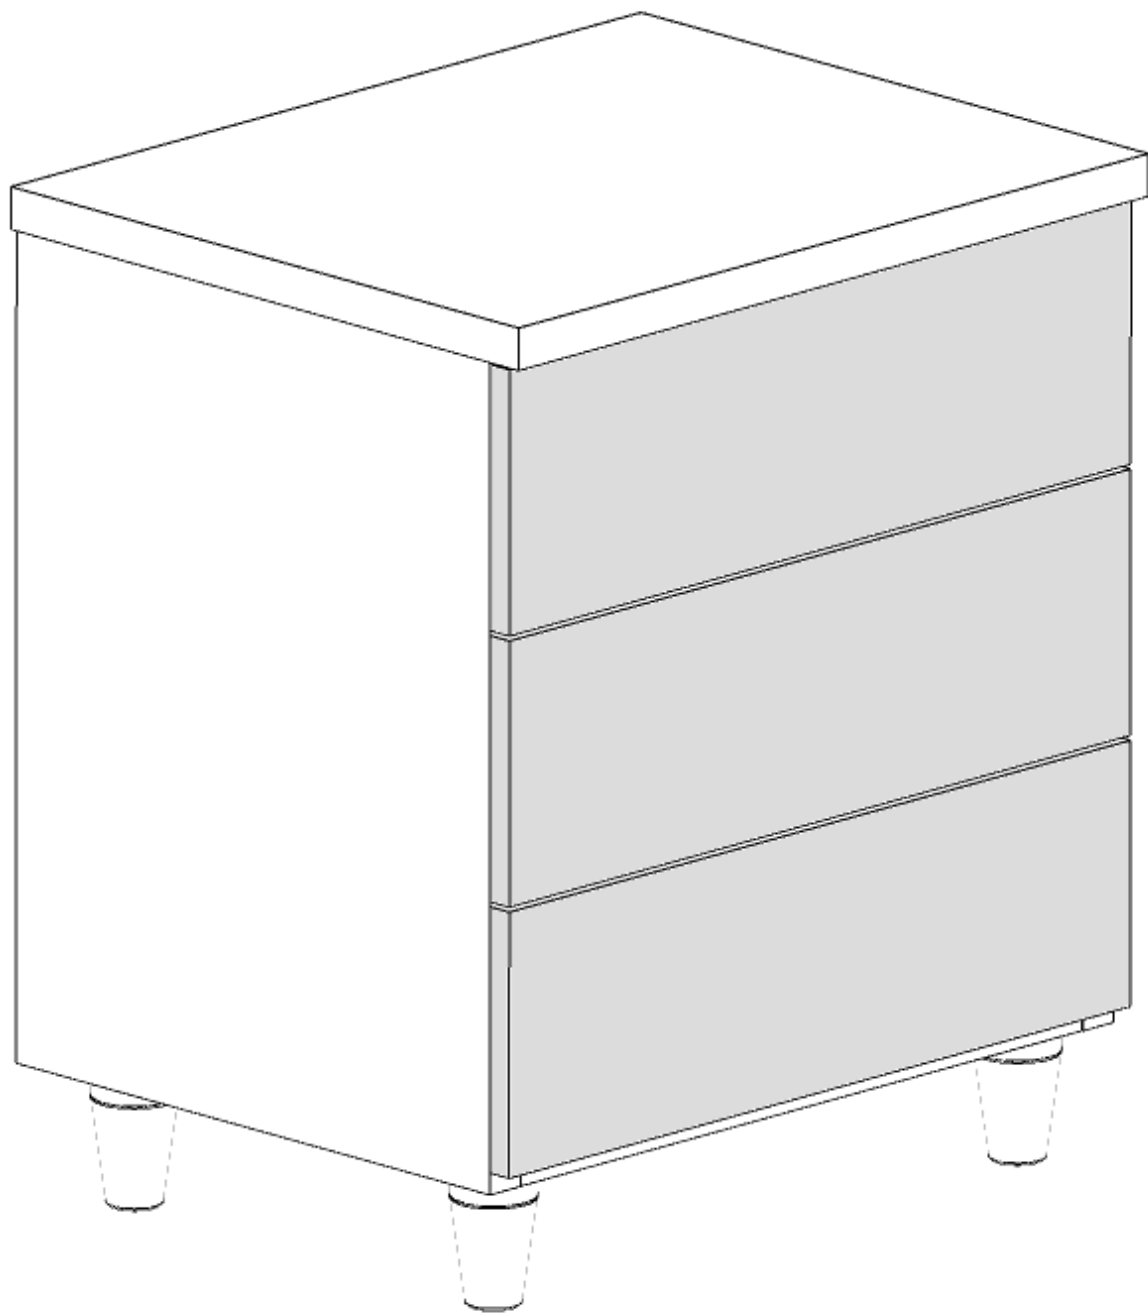
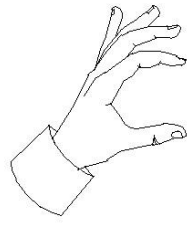
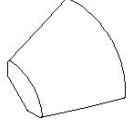





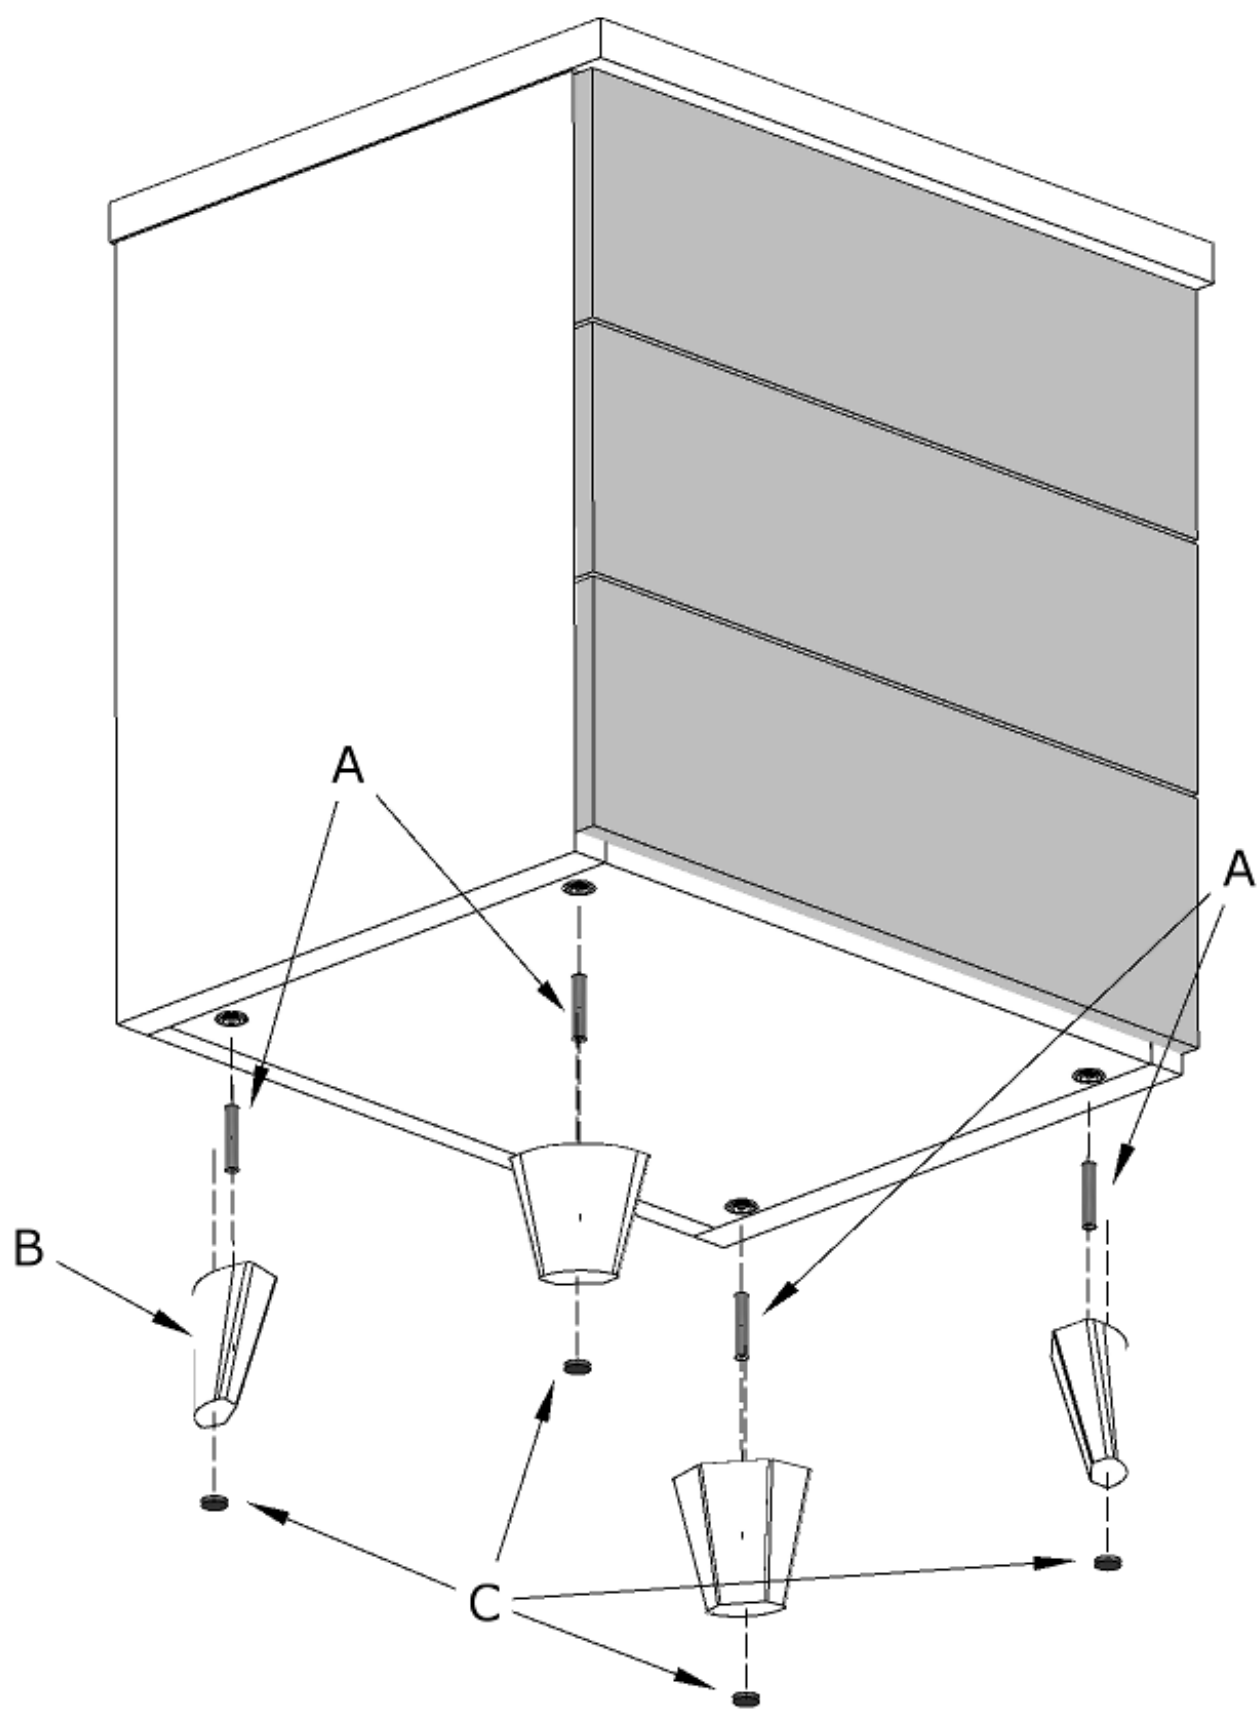
Sac. Fr. Piedini Conici				
200000888	A		n°4	
200001989	B		n°4	
200001382	C		n°4	

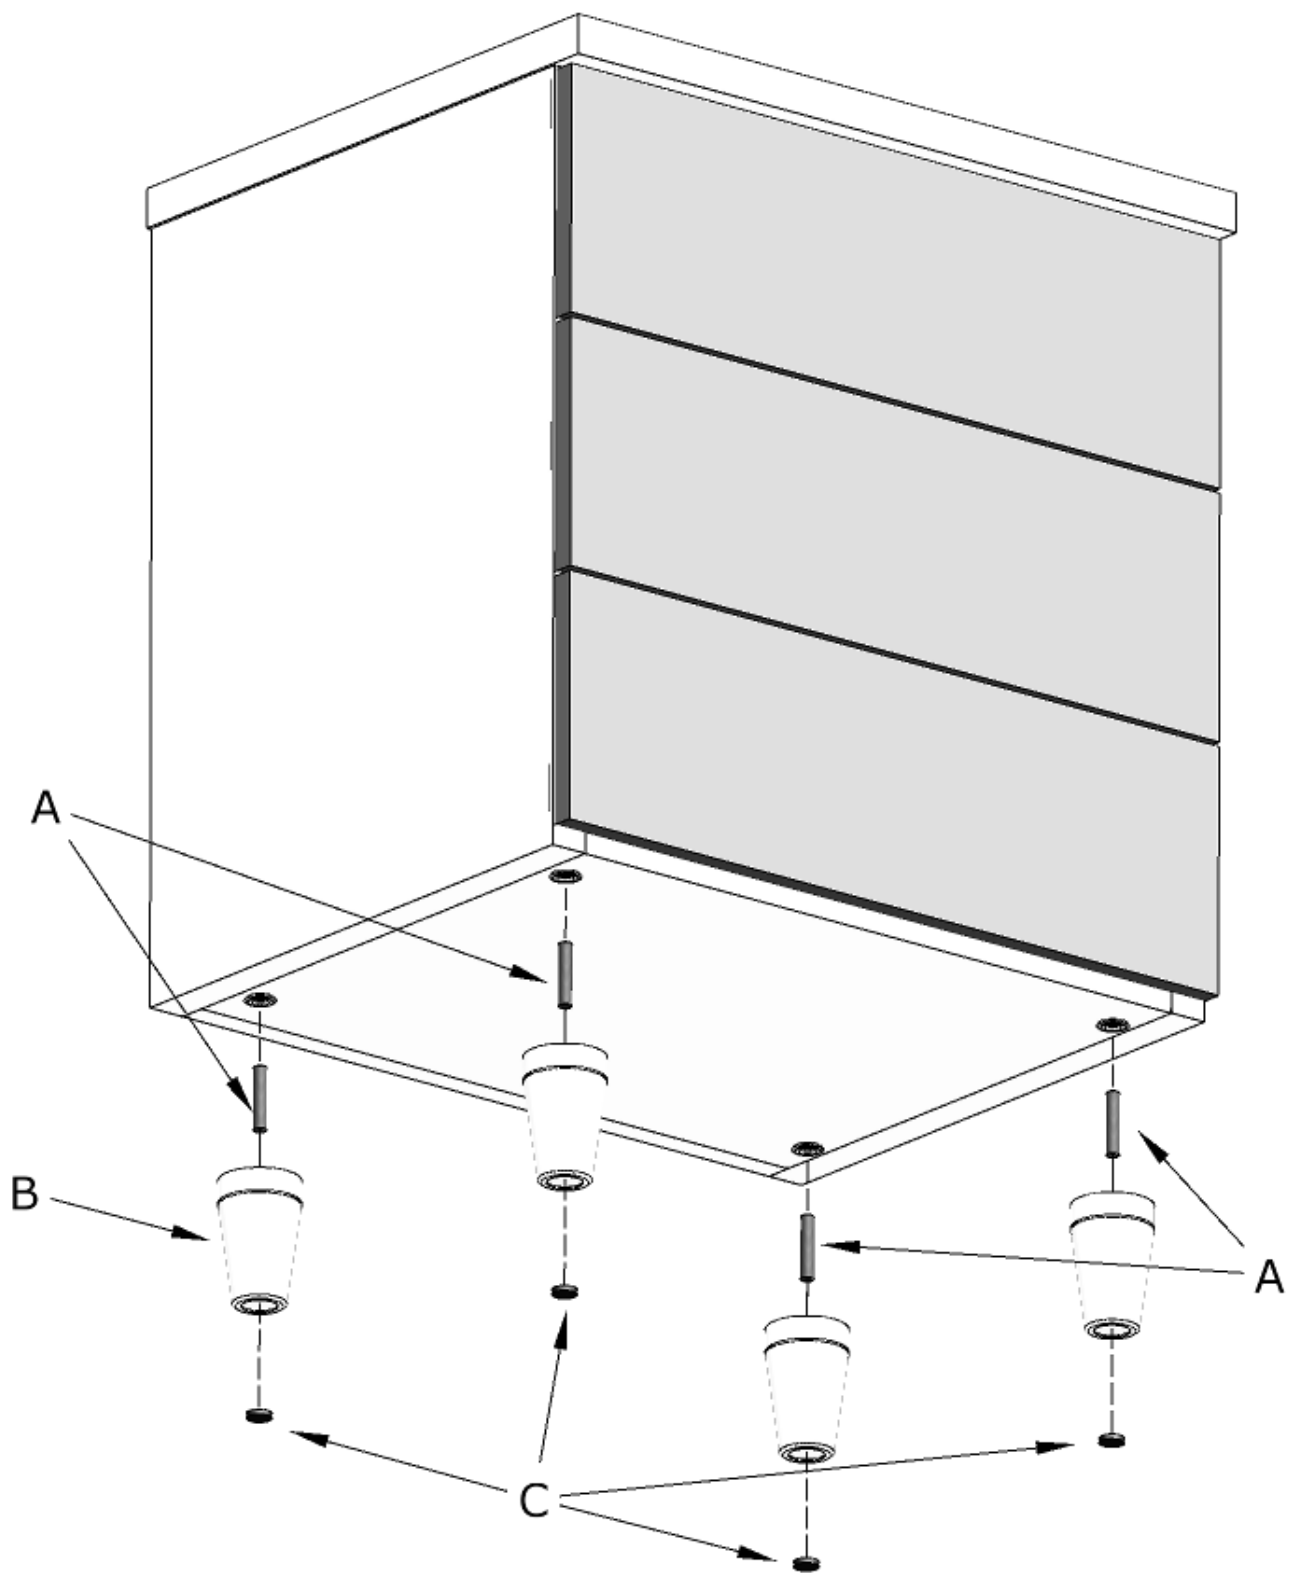


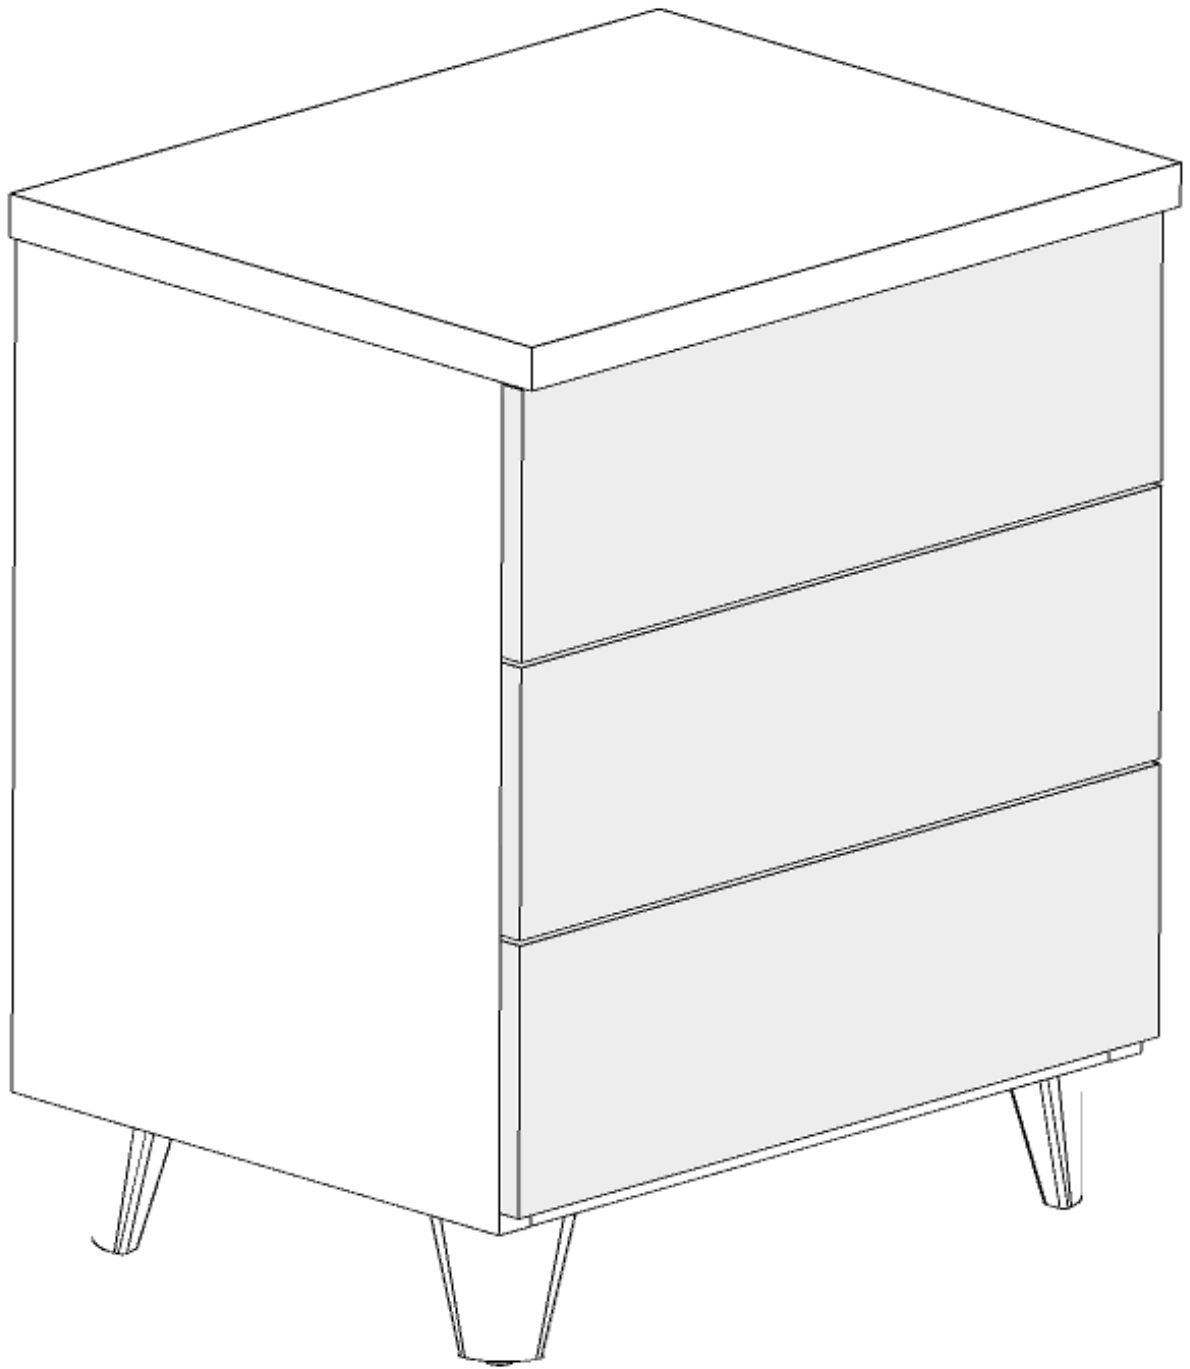





Sac. Fr. Piedini King				
200000888	A		n°4	
200001995	B		n°4	
200001382	C		n°4	




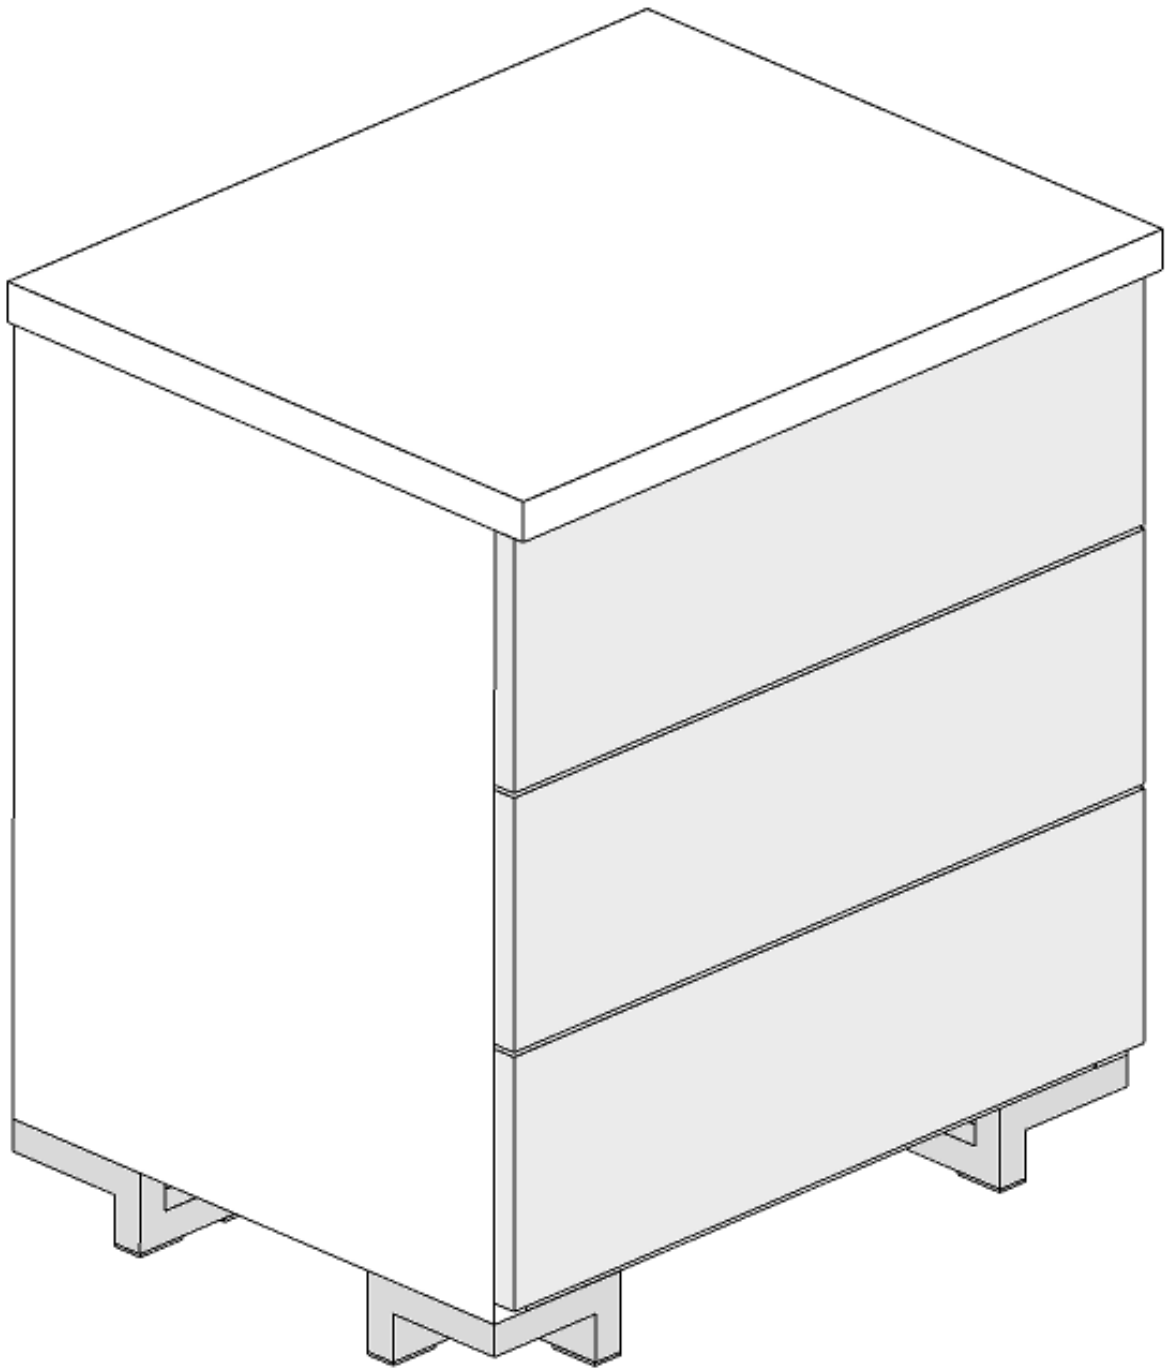


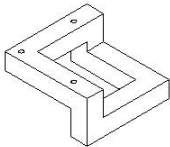

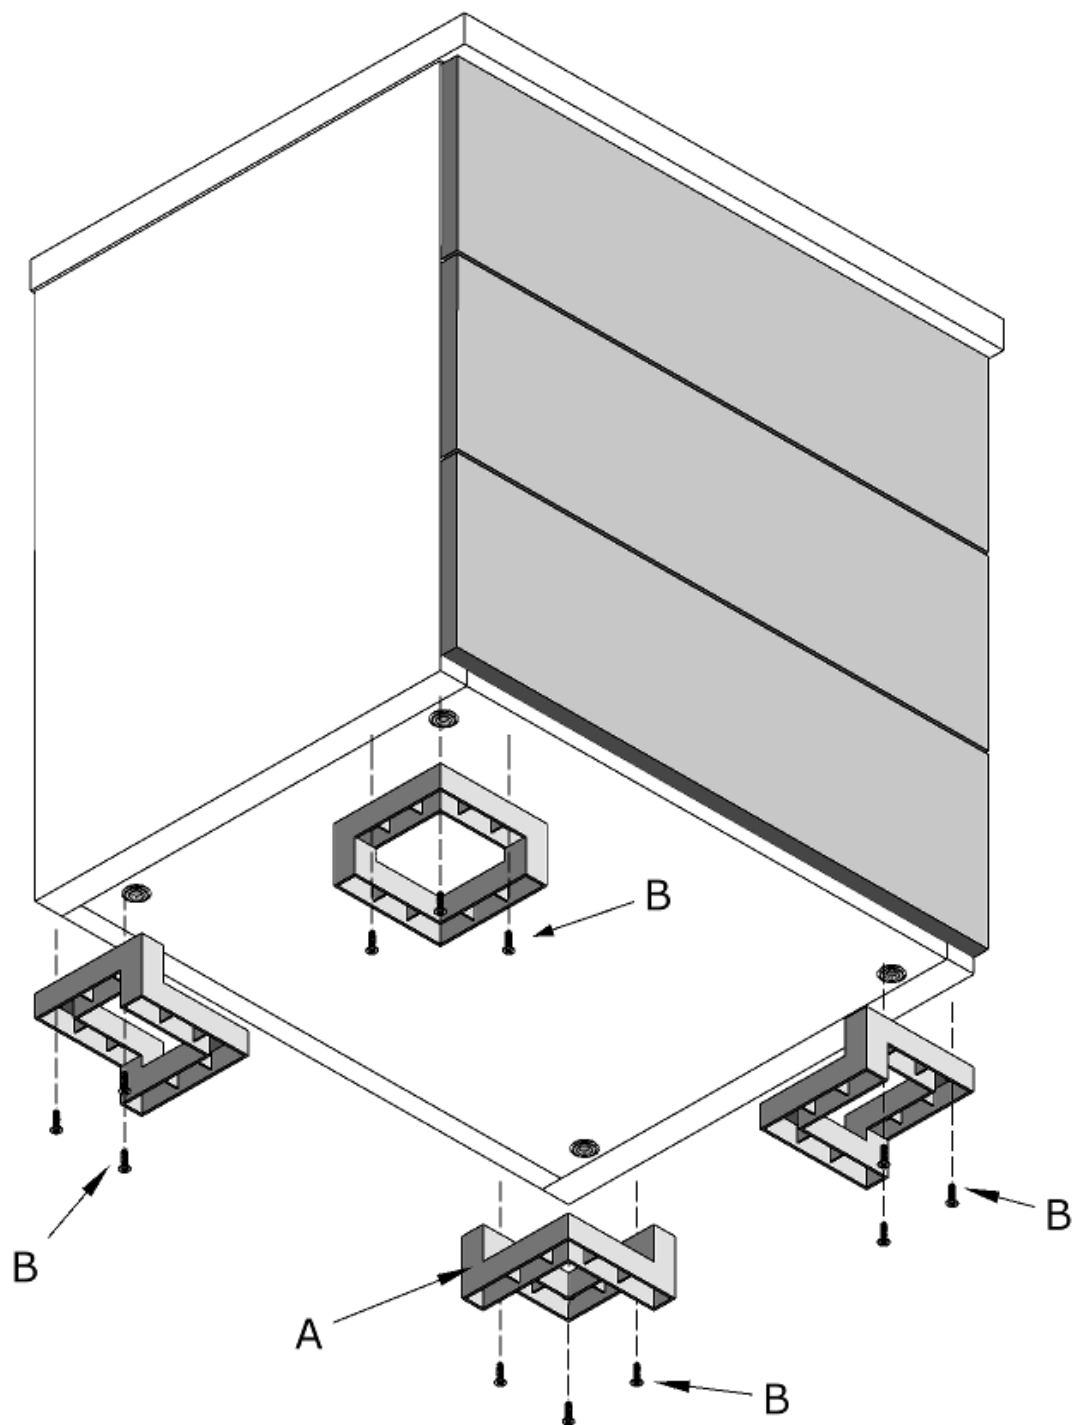



Sac. Fr. Piedino Stark				
200002009	A		n°4	
200000950	B		n°16	
200002011	c		n°12	

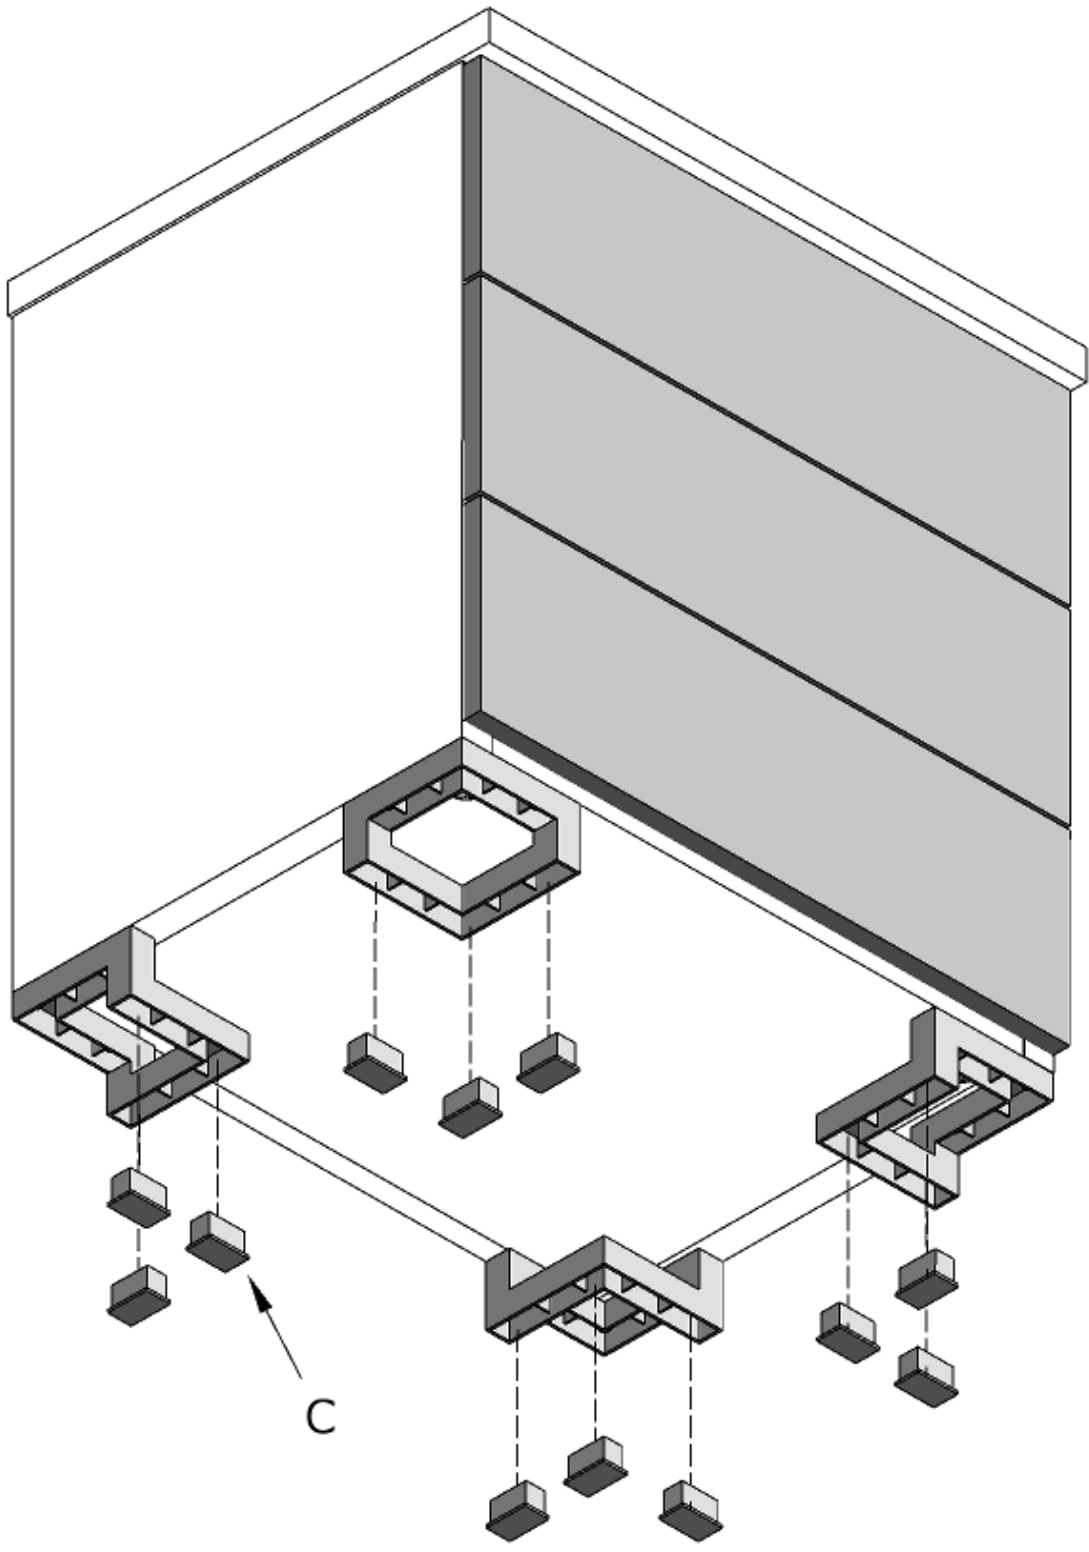


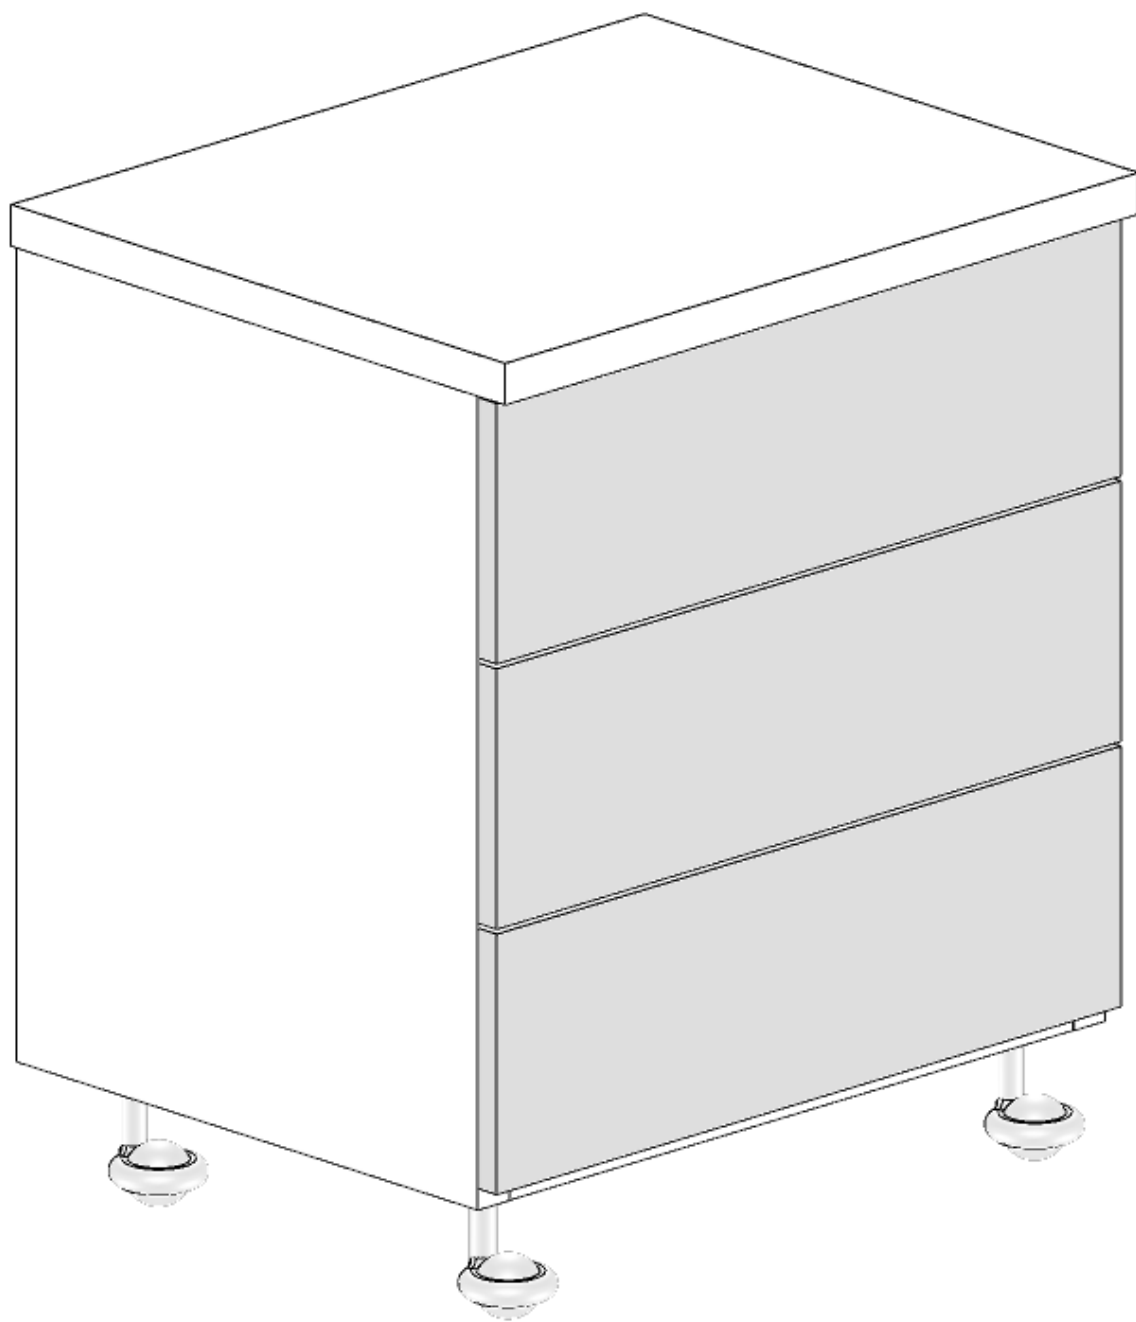
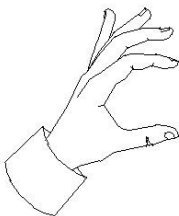




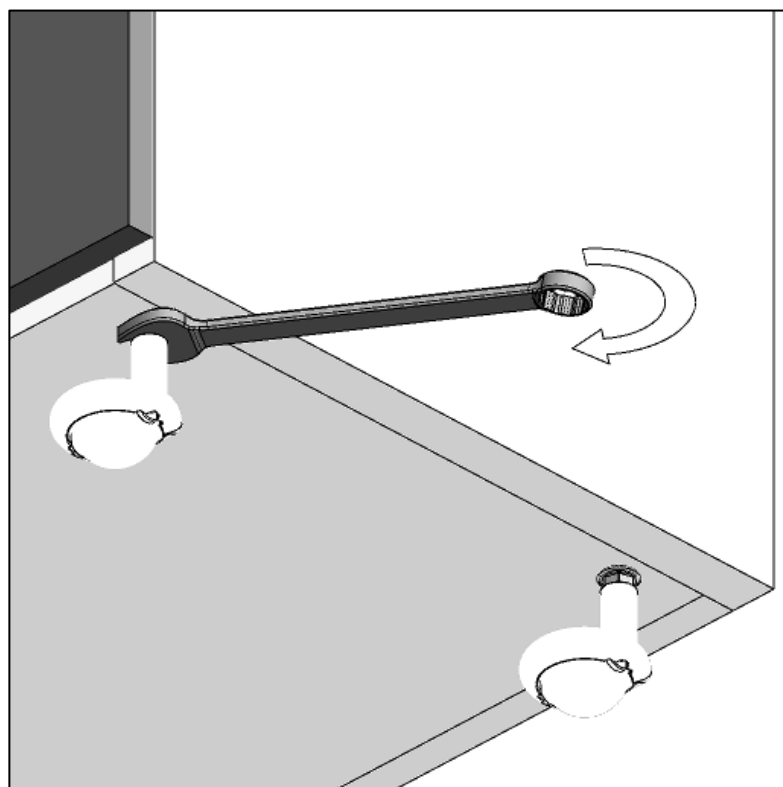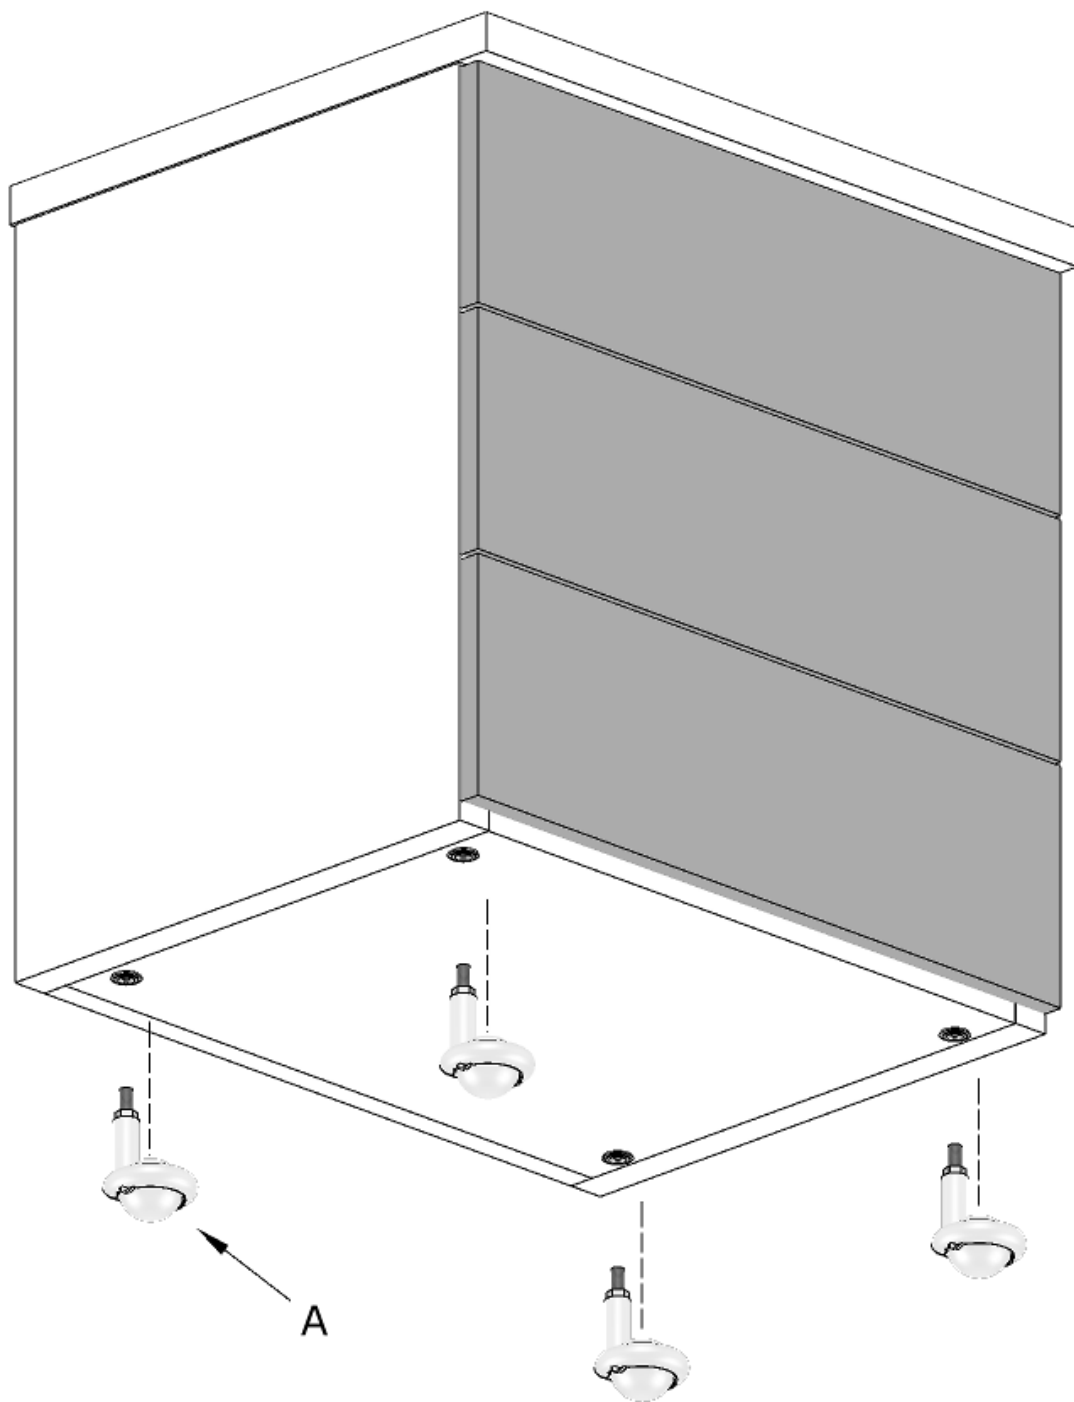

Sac. Fr. Ruota One				
	A		n°4	

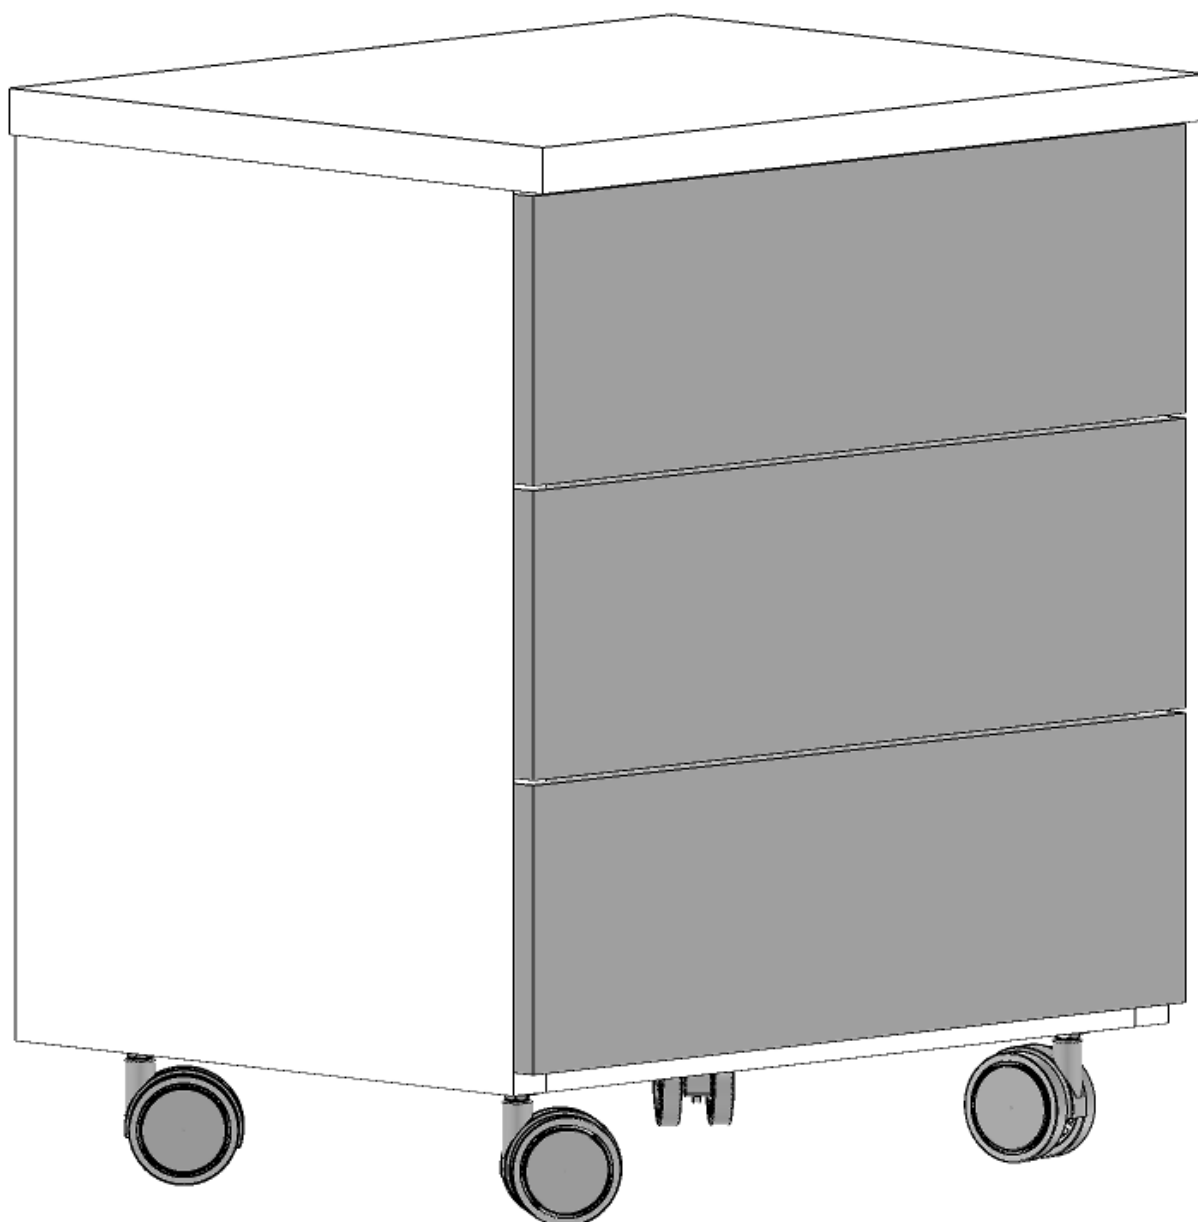



Sac. Fr. Ruota				
200000901	A		n°4	
200001687			n°2	
200001694			n°2	

