


moretti compact®

Schemi montaggio

Assembling diagrams


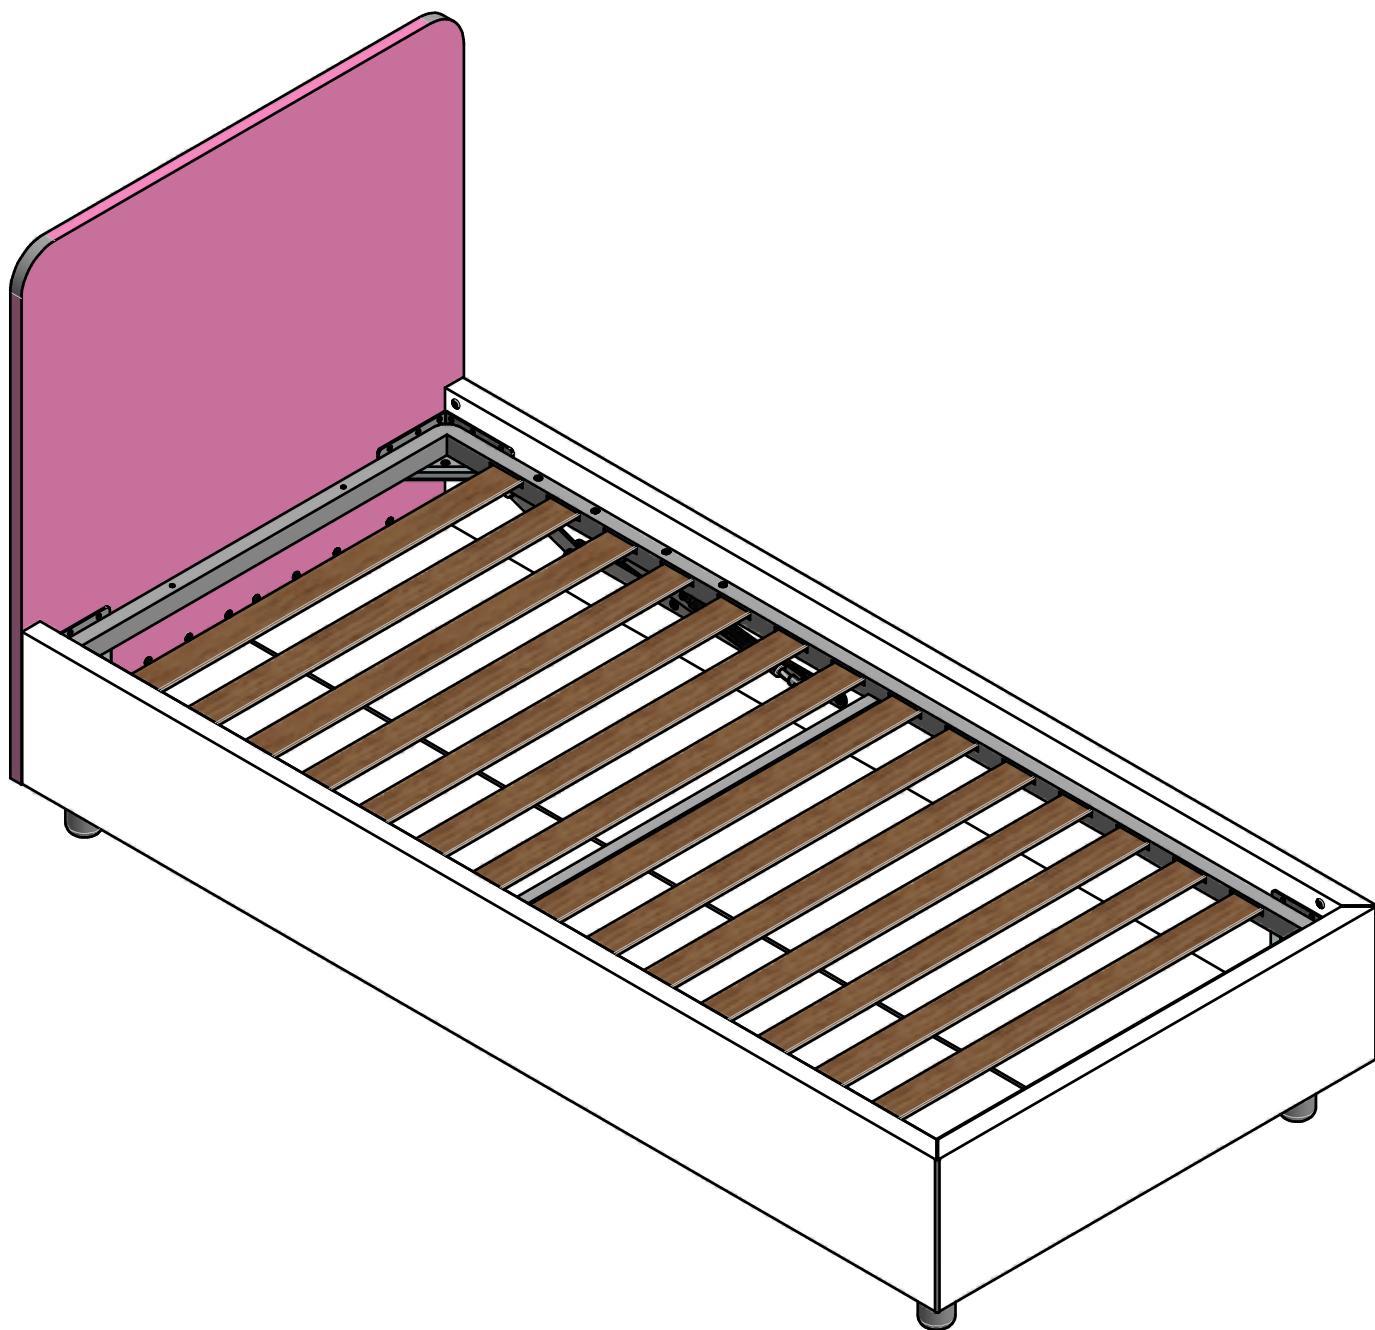


LETTO BEST BOX

ed. 07/09/2020

- rev.1

SCMNT065

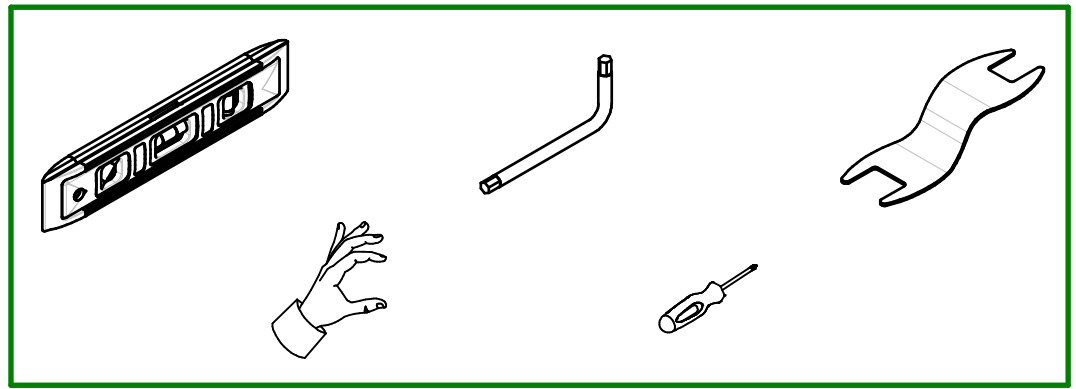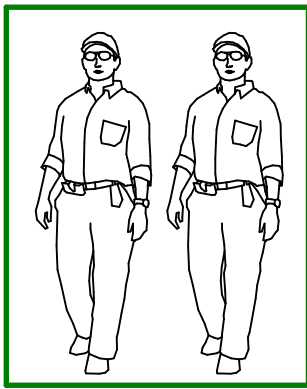



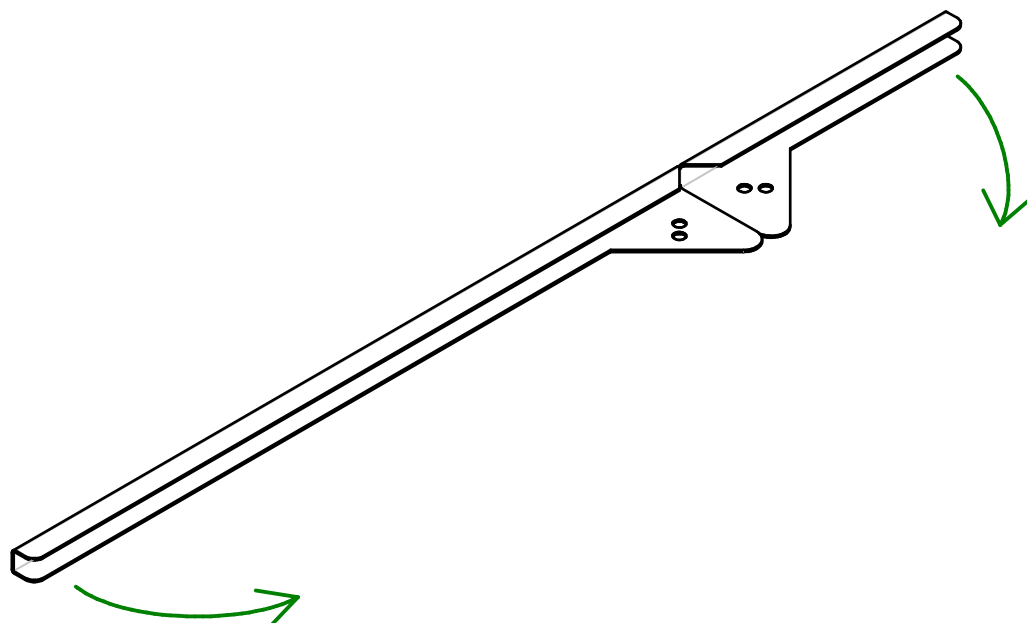
080003262 - Kit Piastre Perno Letti Box			
400026127 Piastra Angolare Strutturale XAL	N°4		A
200004428 Paracolpo Piastre Strutturali	N°4		B
200004584 Staffa Supporto Listello Centrale	N°2		C
200002243 Supp.Gamba Standard H110 All	N°1		D
200004582 Staffa Supporto Fondi Box DX	N°2		E
200004583 Staffa Supporto Fondi Box SX	N°2		F

080003264 - Kit Trapezi Box			
200004490 Kit Trapezi Box	N°1		S
200000980 Bl.Vit.TPS-MA M6x50_Esa_FSC	N°8		T
200000876 Bl.DADI_M6_Auto-B_FSC	N°8		U
200004572 BL.VIT.SPE-MA M6x20_ESA	N°8		G

080003422 - SFR_Fissaggio Letti Box			
200004572 BL.VIT.SPE-MA M6x20_ESA	N°16		G
200000666 Asmbl. Perni Minifix	N°8		H
200000977 Bl.Vit.TPS-MA M6x20_Esa	N°24		I
200002974 Bl.Vit.TE-MA M8x75_Esa	N°1		L
200000901 Bl.RONDELLA_8,5x24 Zinc_FSC	N°1		M
200001322 Maniglia Fondi Divano	N°1		N
200000920 Bl.Vit.TBLFR-MA M4x10_Cro	N°1		O
200000872 Bl.DADI_GIUNZ_TBLFR-M4x15	N°1		P
200000916 Bl.Vit.TBL-MA M6x12_Esa	N°2		Q

080005131 - SFR_Fissaggio Gambe Letti			
200000931 Bl.Vt.TC-MA M10x25_DNT_Es_FSC	N°4		Z


080006468 - SFR_Fissaggio Pediera Wood			
200003308 Perno Giunzione Angolare	N°4		R
200003307 Grano M10x12,2	N°8		V





PIEGARE

cod. 200004582 - 200004583


articoli E - F

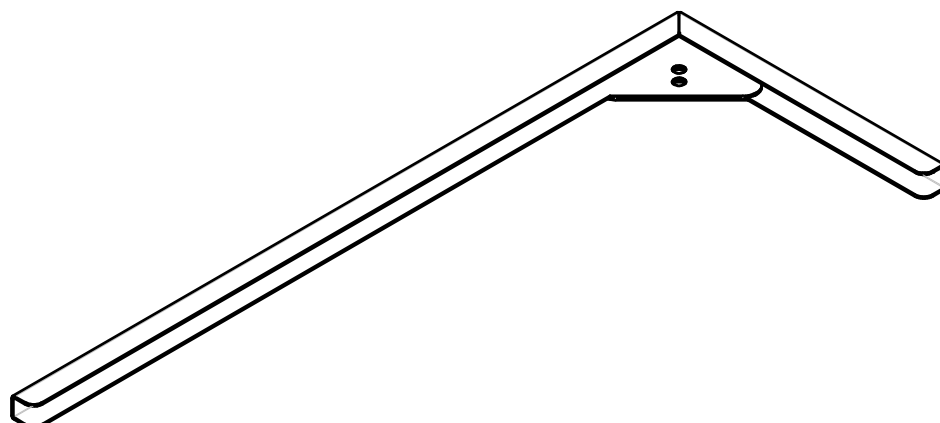

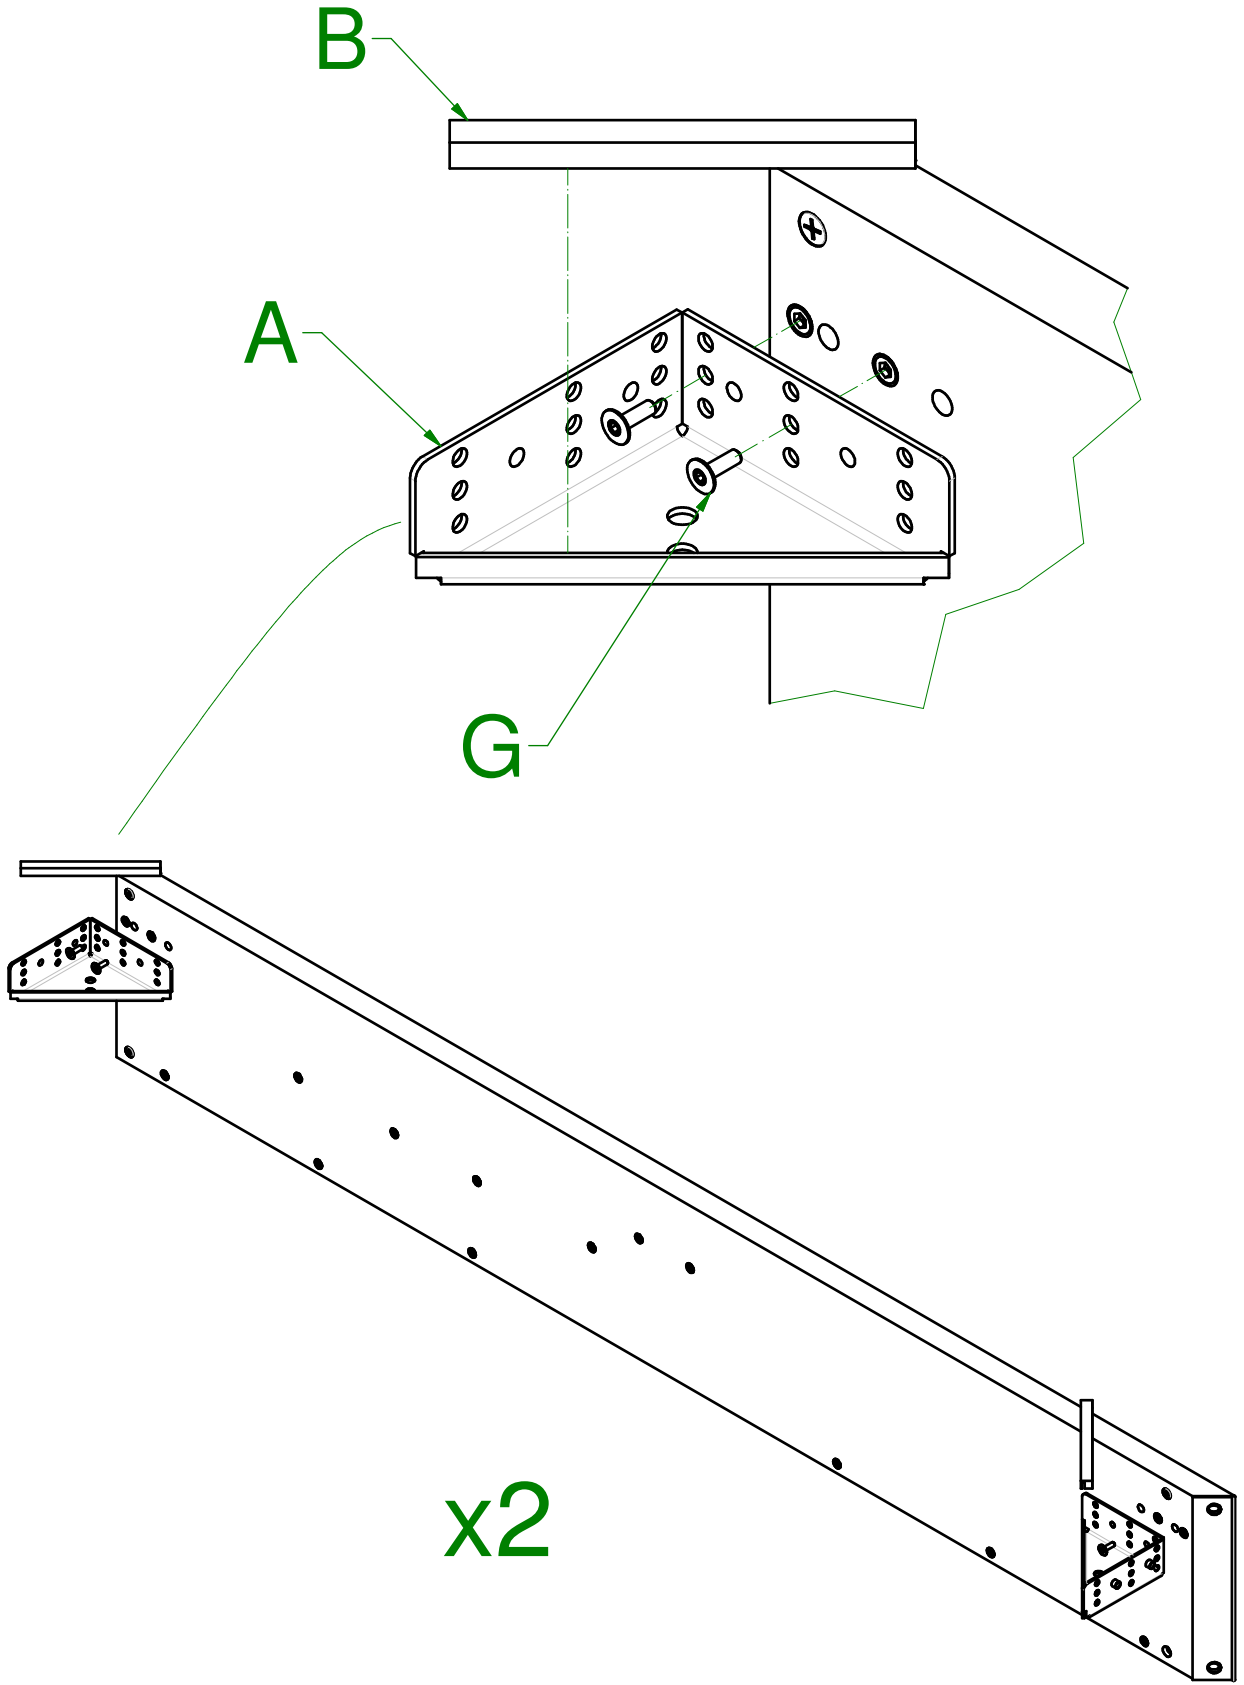

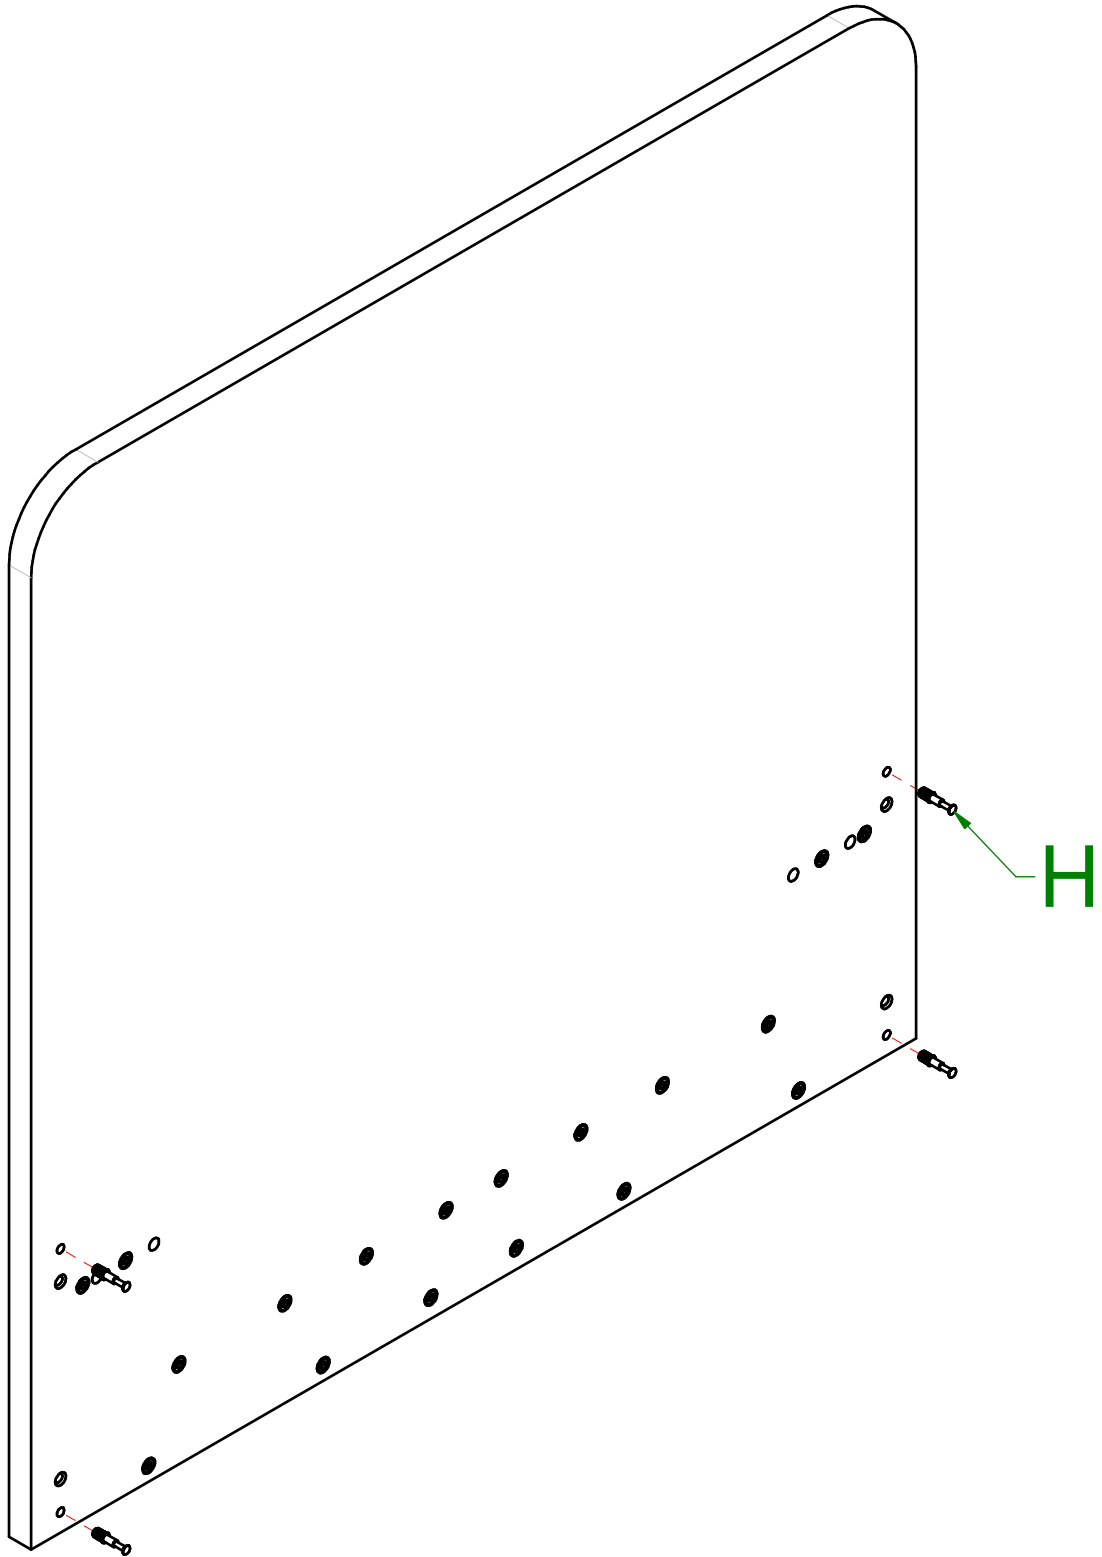



1

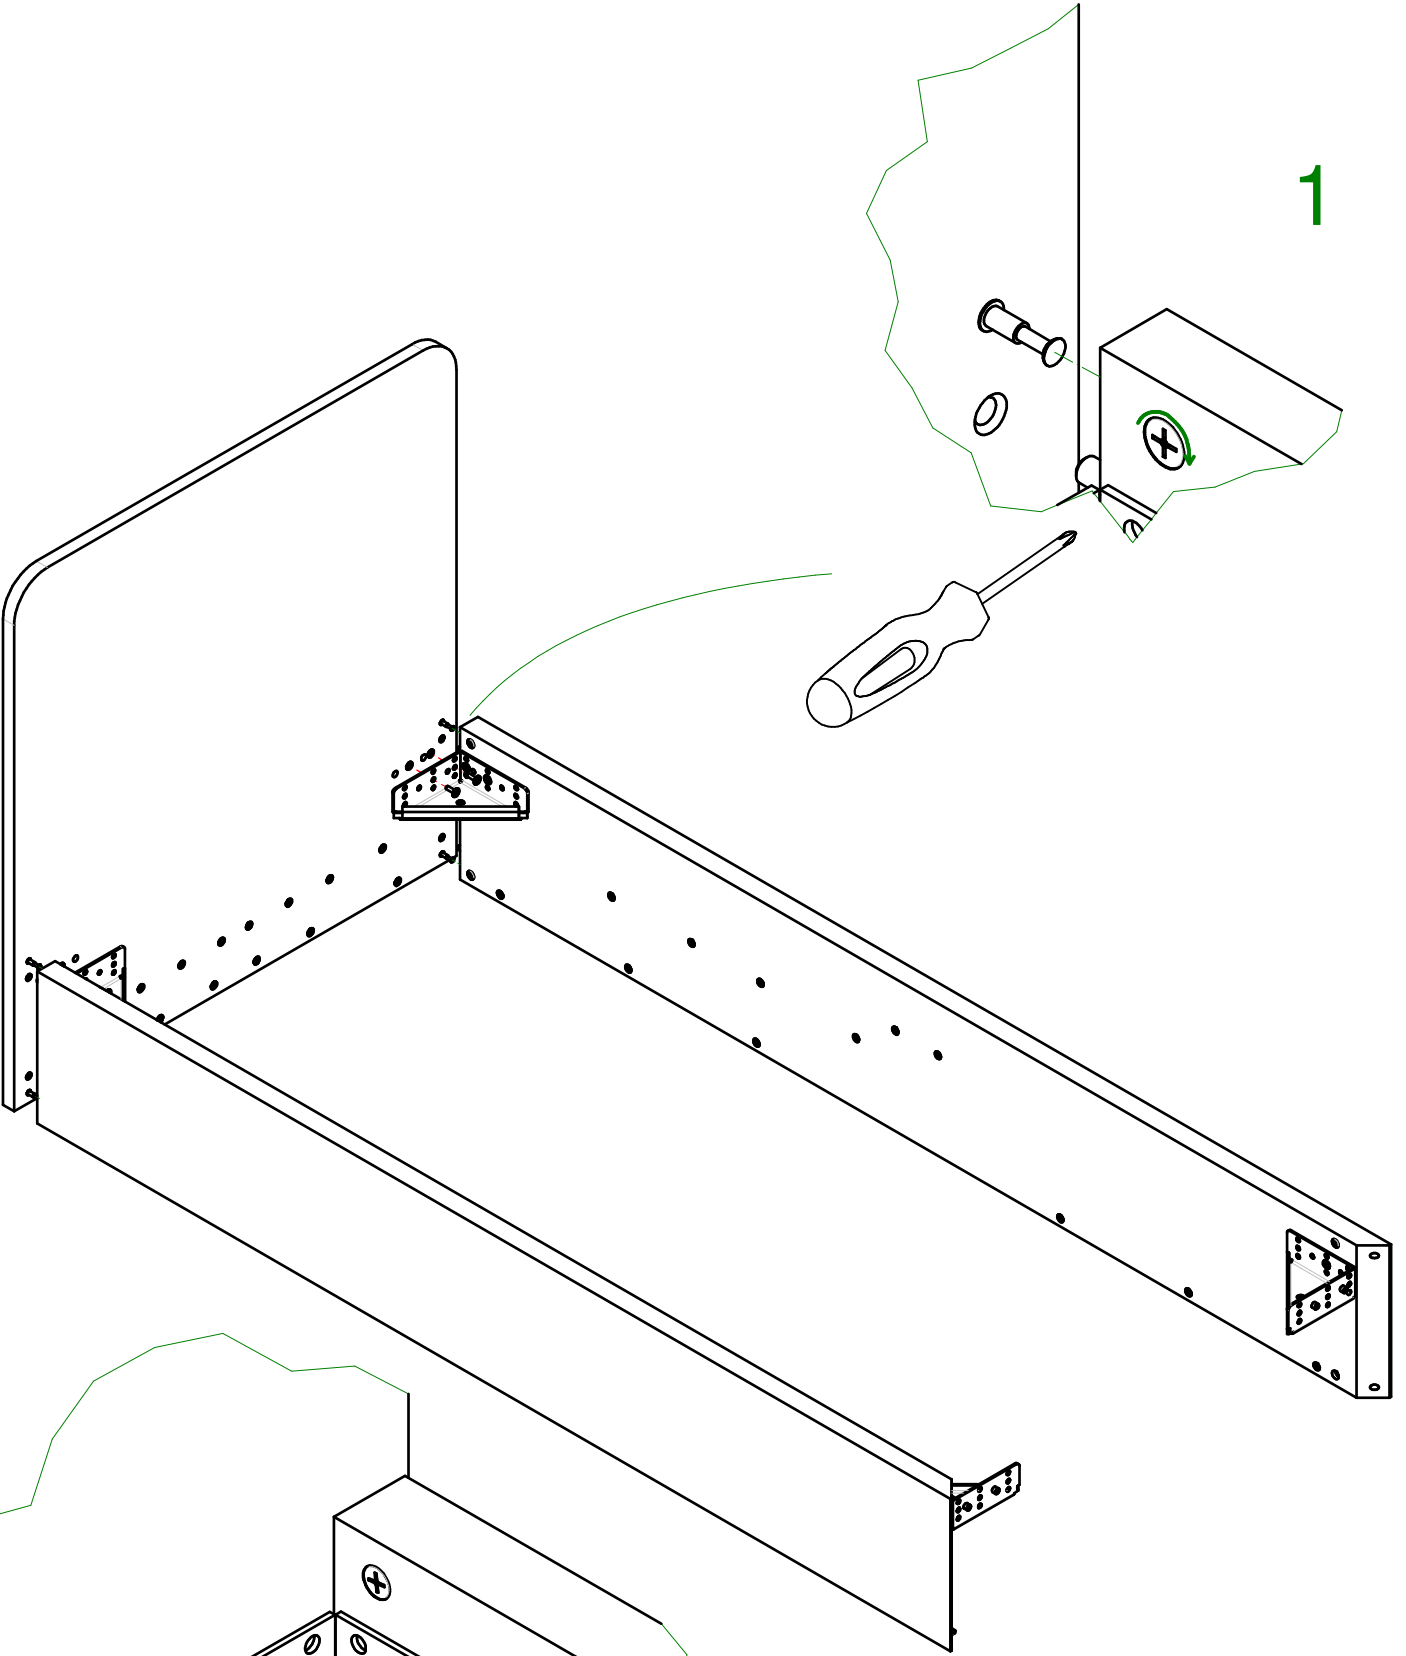



2



G

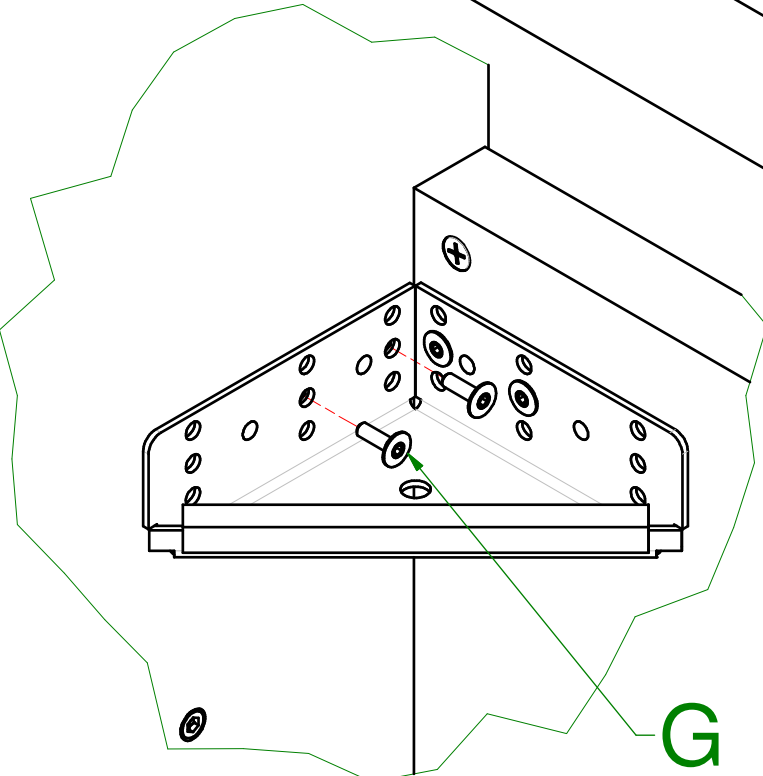


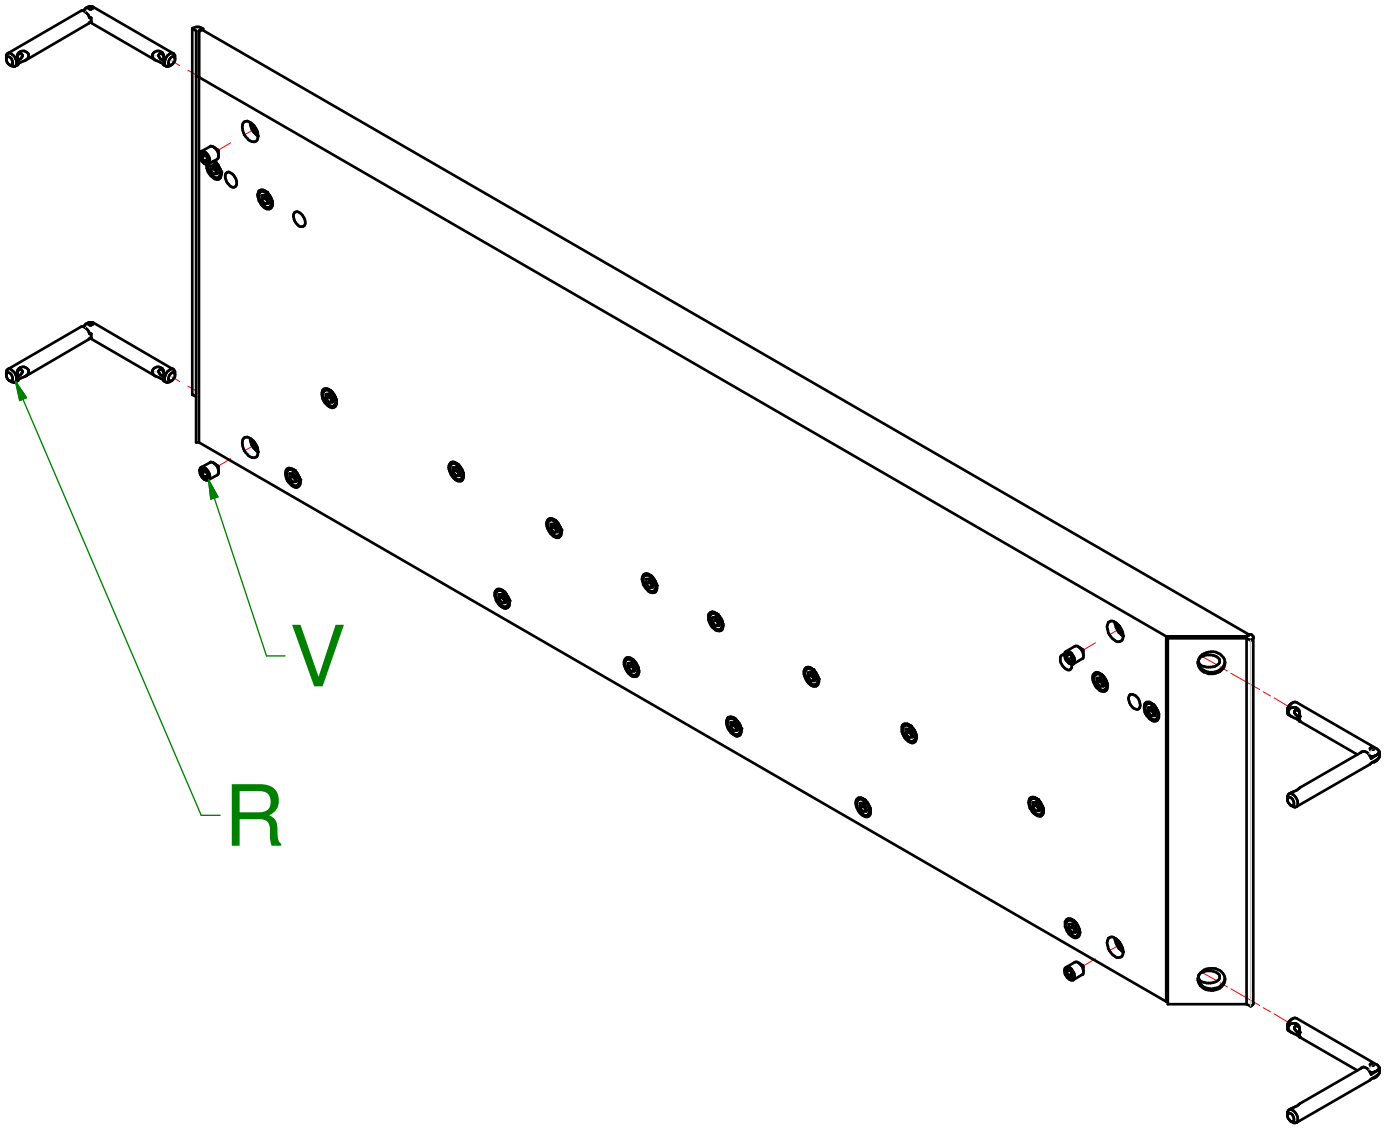


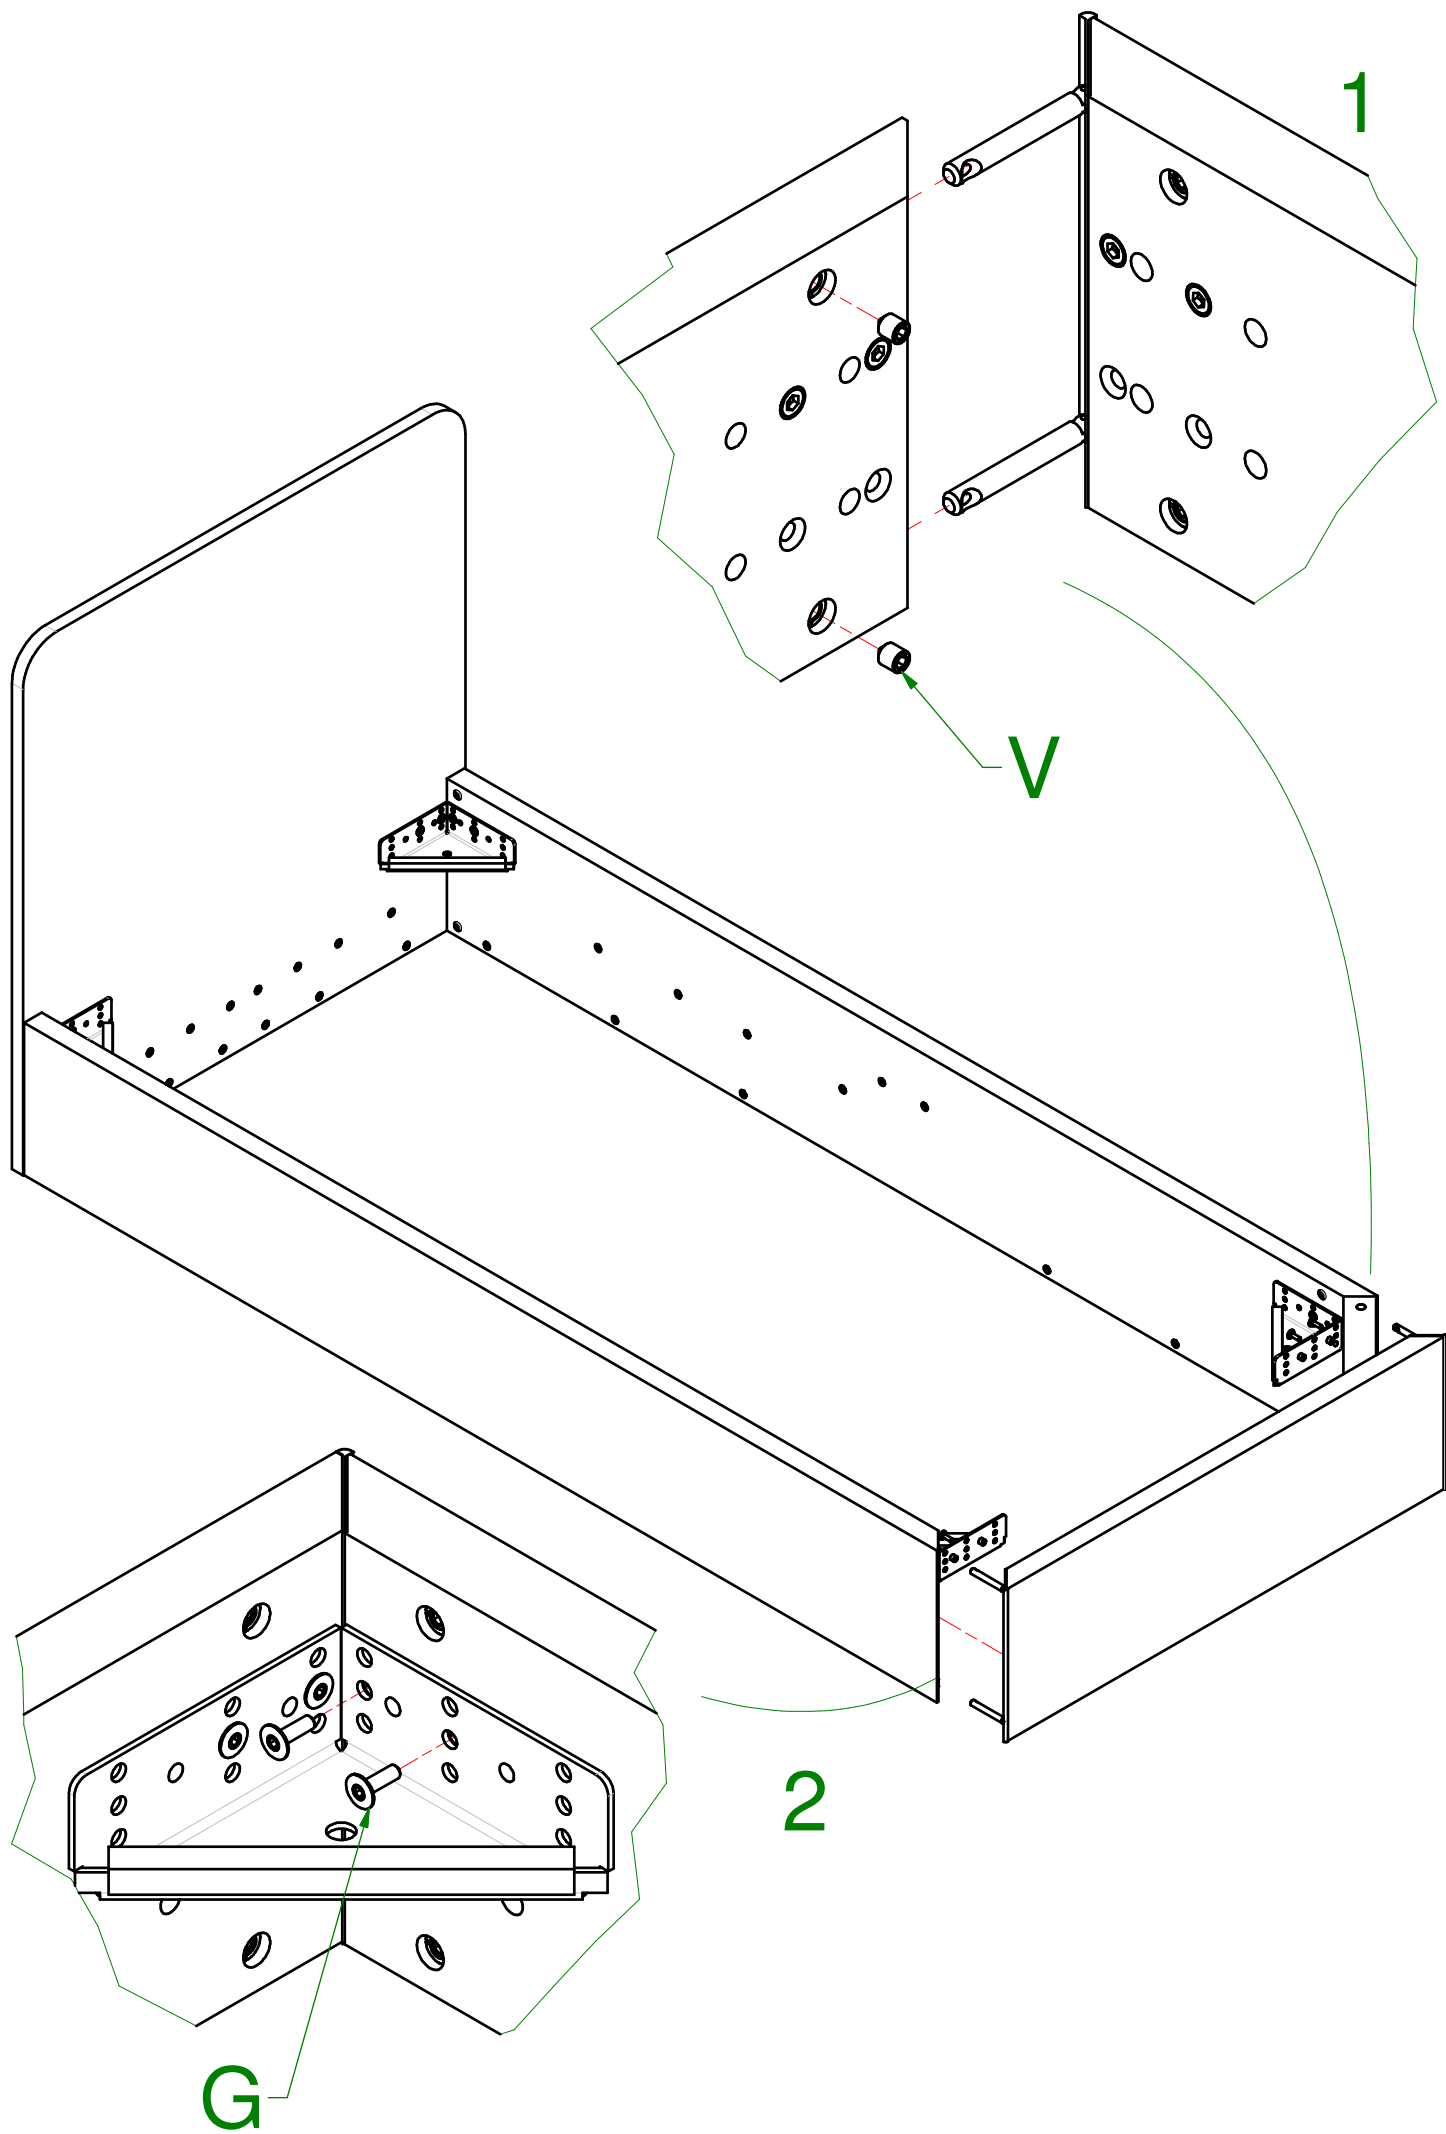


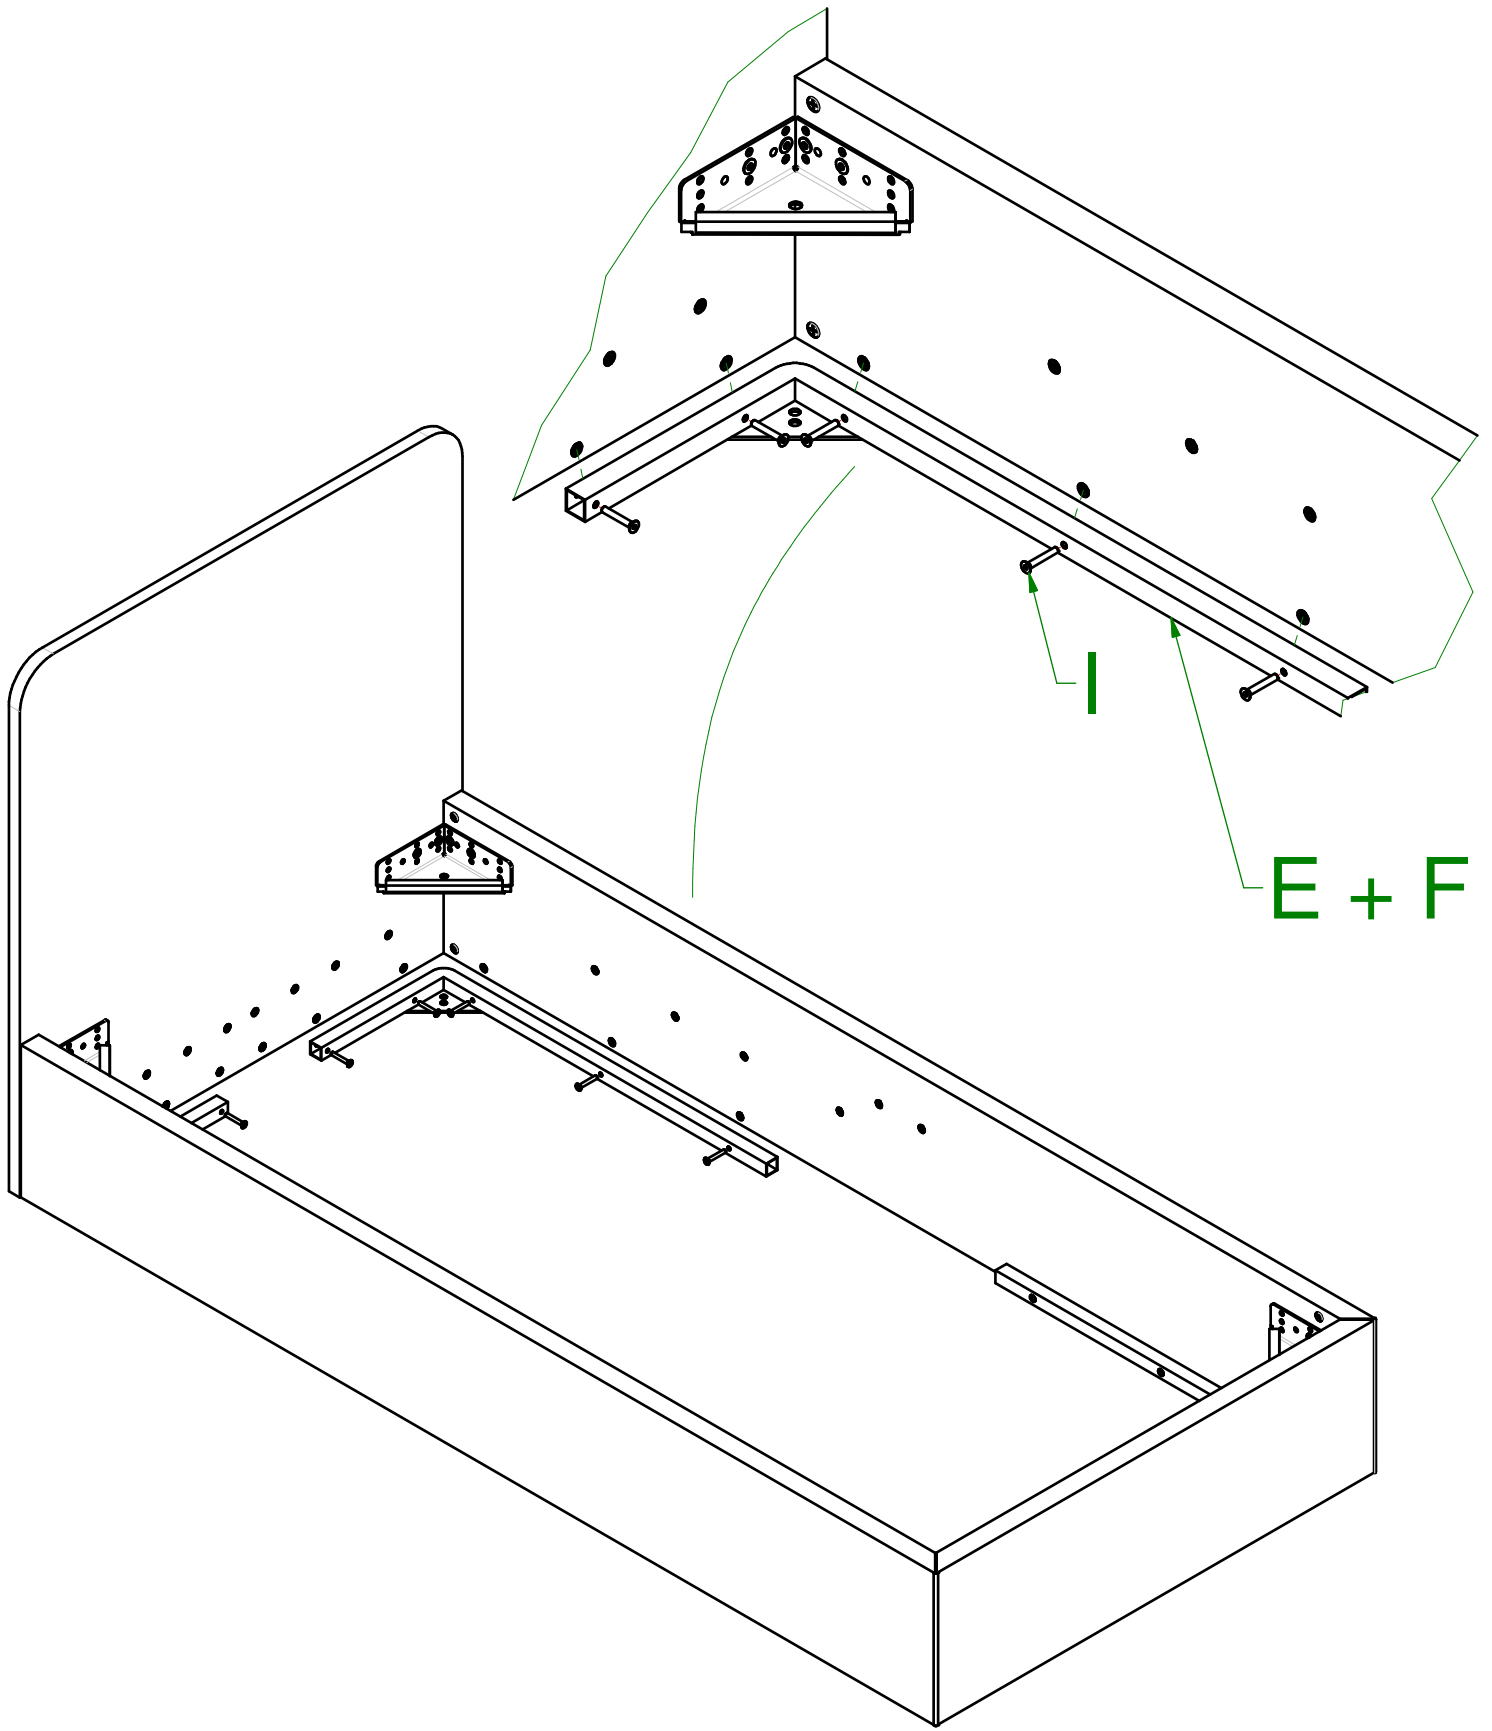


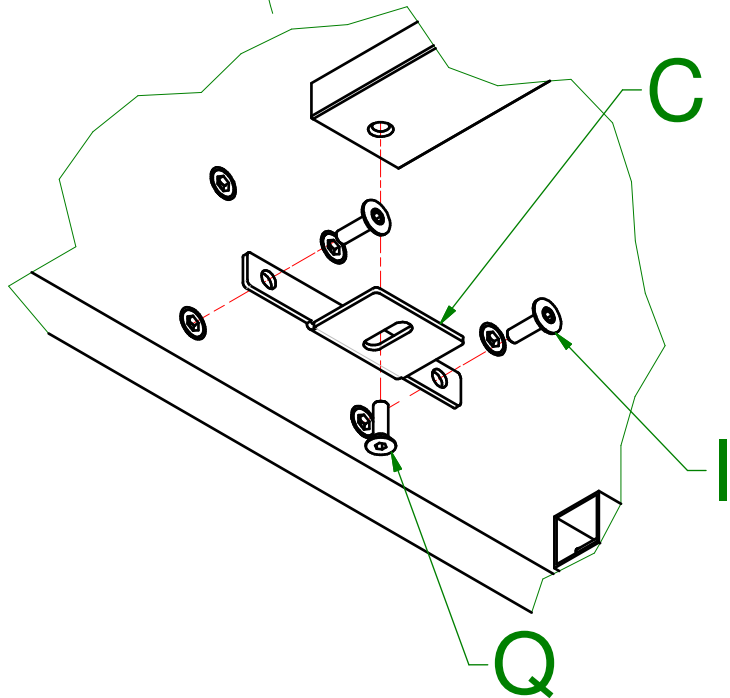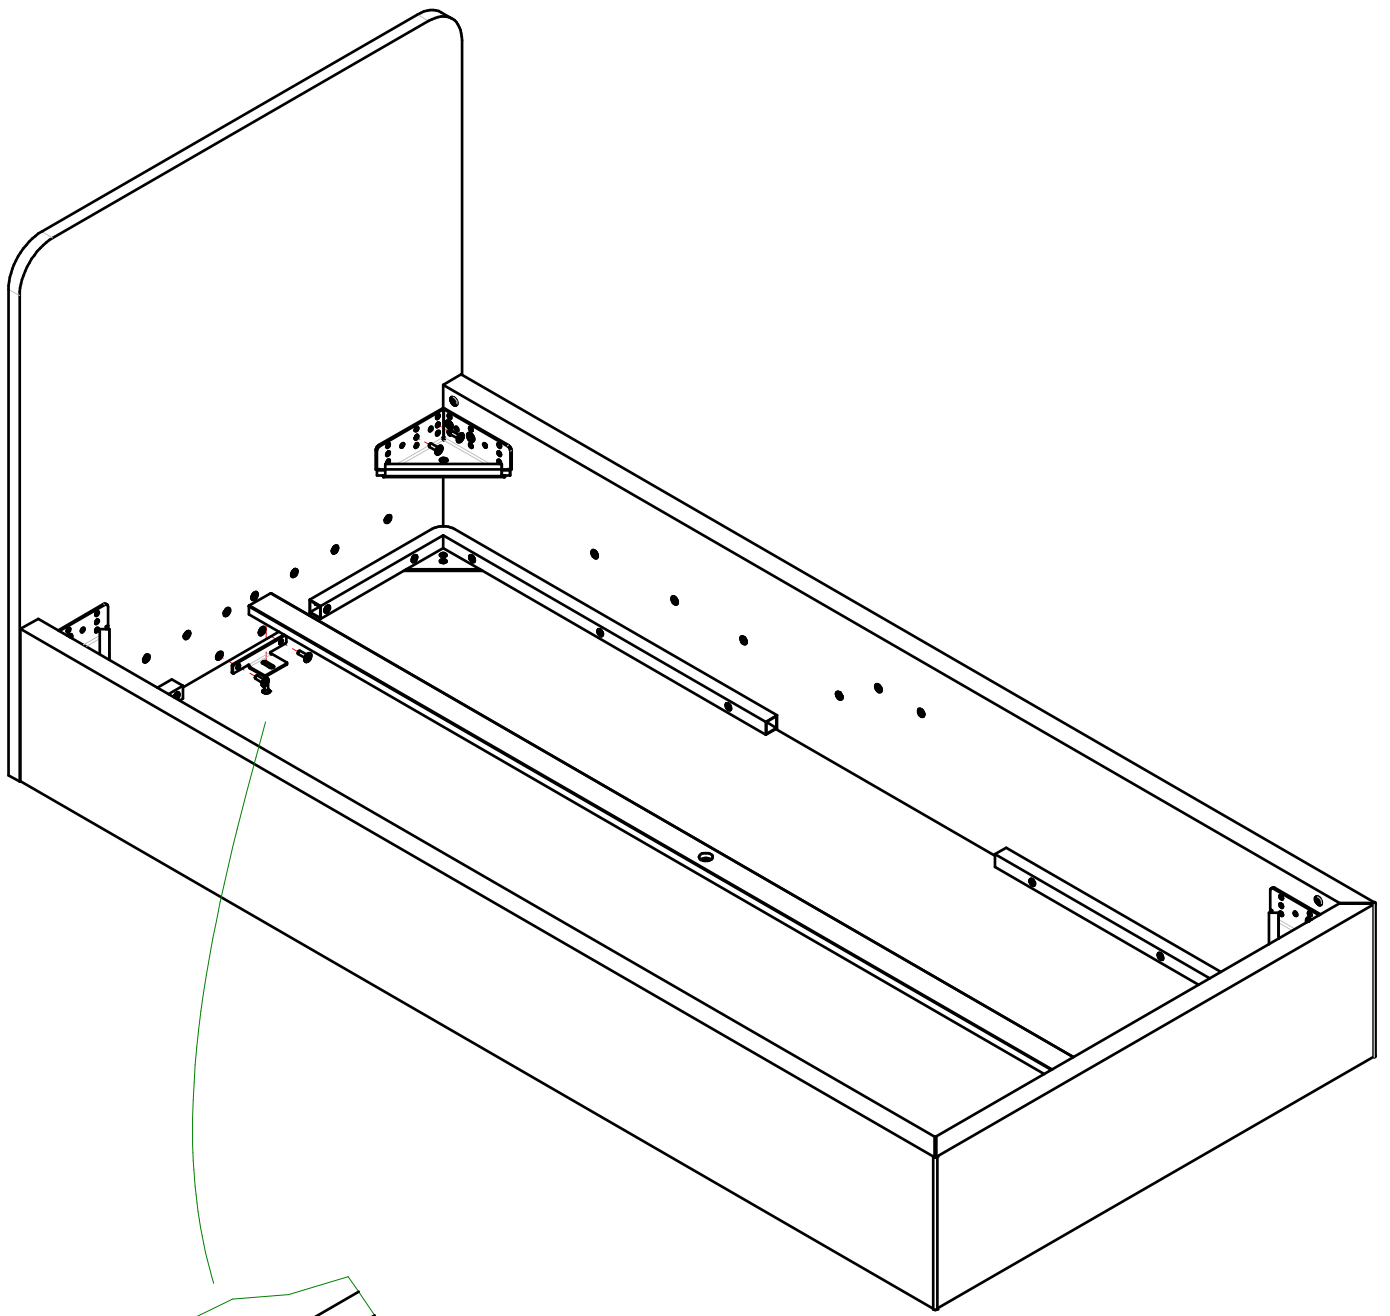

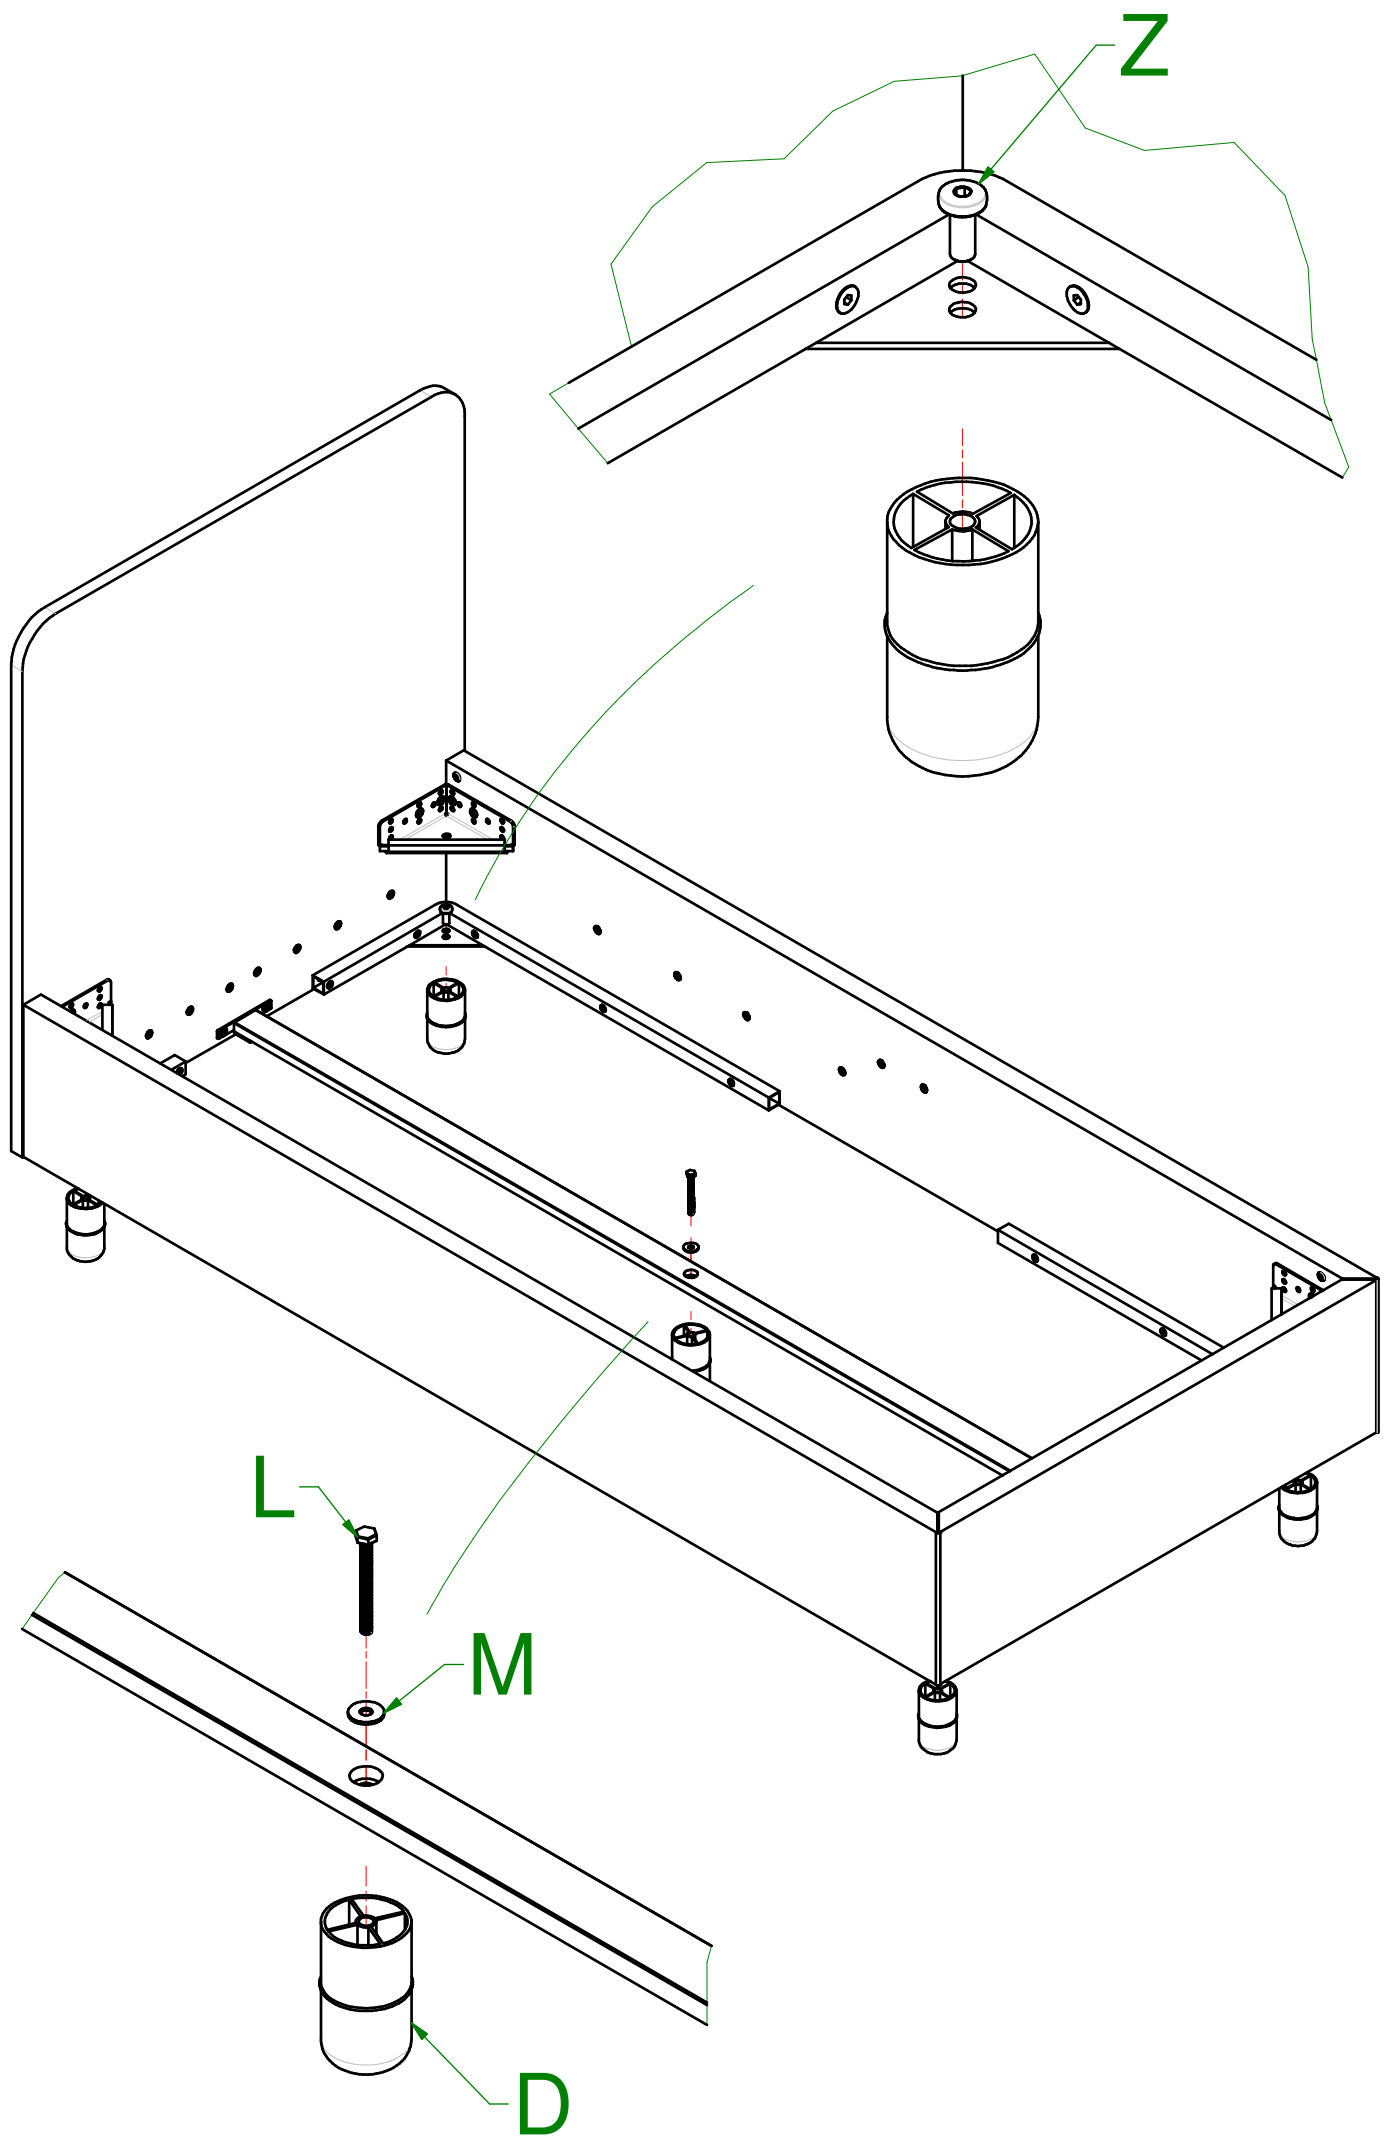

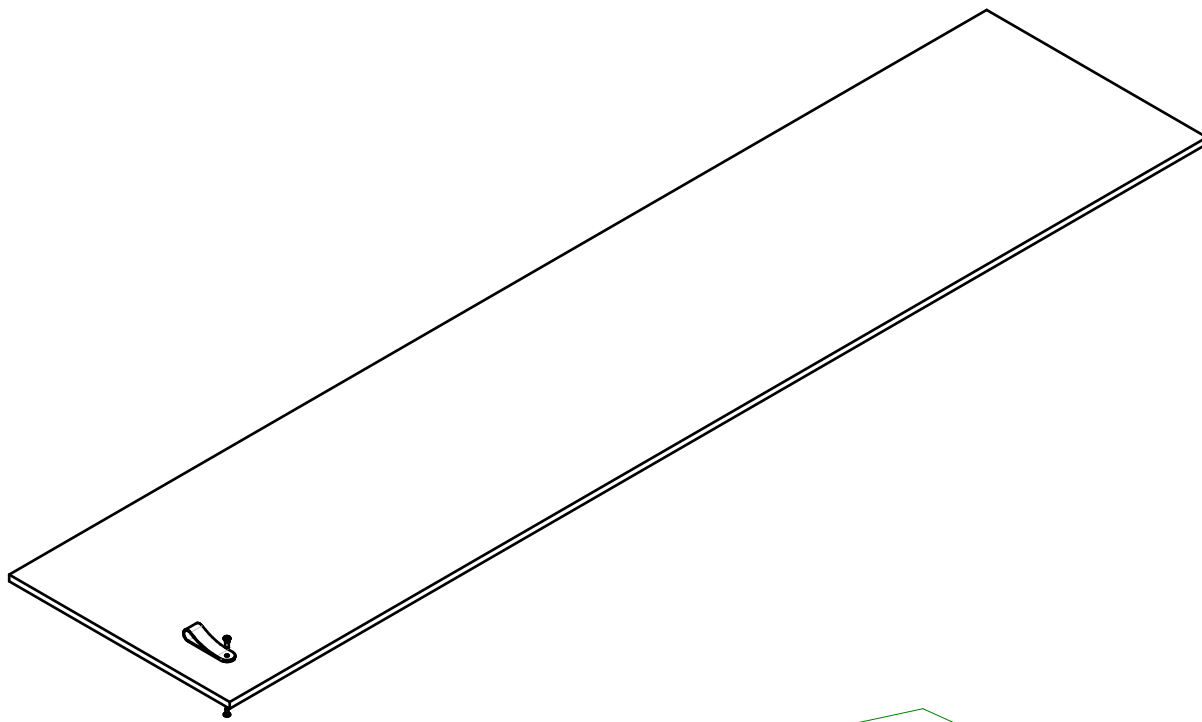

1

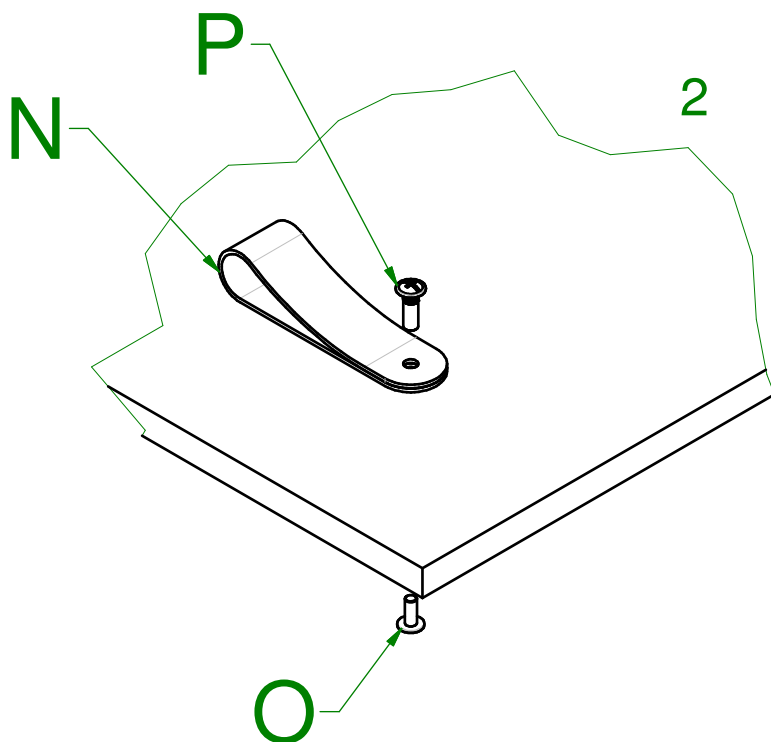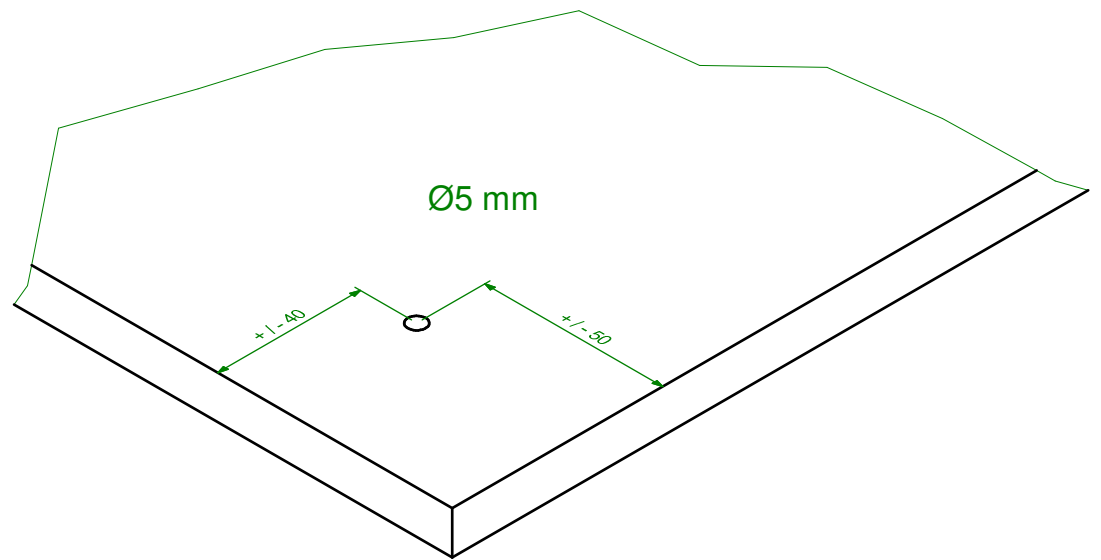

2

